The rear wiper motor cannot be adjusted or repaired. If any component of the motor is faulty or damaged, the entire rear wiper motor unit must be replaced. The motor output shaft grommet, washer and nut are available for individual service replacement.

OPERATION

The rear wiper motor operation is controlled by the vehicle operator through battery current inputs received by the rear wiper motor from the rear wiper and washer switch on the instrument panel, and the rear wiper motor park switch, which control current flow to the wiper motor brushes. An internal diode protects the motor from feedback through the park switch when the switch is closed to the fused ignition switch output (run) circuit. An internal circuit breaker protects the motor from overloads.

The park switch is a single pole, single throw, momentary switch within the wiper motor that is mechanically actuated by the wiper motor transmission components. The park switch alternately closes the wiper motor brush to the rear wiper and washer switch output or to a fused ignition switch output (run) circuit, depending upon the position of the wiper on the glass. This feature allows the motor to complete its current wipe cycle after the wiper system has been turned Off, and to park the wiper blade in the uppermost portion of the wipe pattern.

The wiper motor transmission converts the rotary output of the wiper motor to the back and forth wiping motion of the rear wiper arm and blade on the liftglass. The rear wiper motor may be diagnosed using conventional diagnostic tools and methods.

REMOVAL

(1) Disconnect and isolate the battery negative cable.

(2) Remove the rear wiper arm from the rear wiper motor output shaft. (Refer to 8 - ELECTRICAL/REAR WIPERS/WASHERS/REAR WIPER ARM - REMOVAL).

(3) Remove the nut that secures the threaded sleeve of the rear wiper motor output shaft to the outside of the liftglass (Fig. 19).

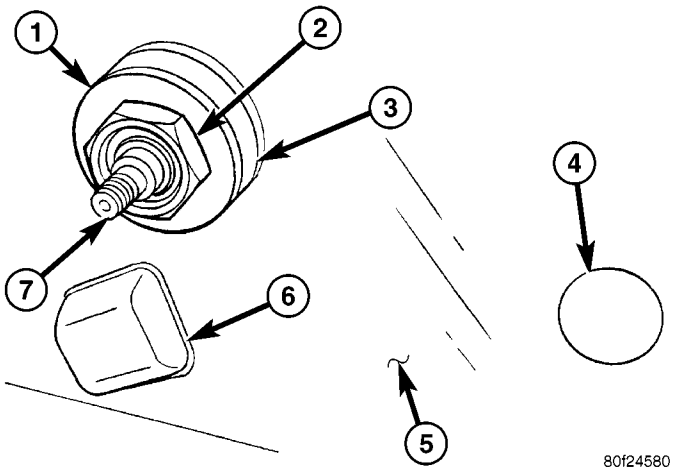

Fig. 19 Rear Wiper Motor Output Shaft

1 - WASHER
2 - NUT
3 - GROMMET
4 - STUD
5 - LIFTGLASS
6 - REAR WASHER NOZZLE
7 - REAR WIPER MOTOR OUTPUT SHAFT

(4) Remove the washer from the rear wiper motor output shaft sleeve.

(5) Remove the trim cover from the rear wiper motor on the inside of the liftglass. (Refer to 8 - ELECTRICAL/REAR WIPERS/WASHERS/REAR WIPER MOTOR TRIM COVER - REMOVAL).

(6) Disconnect the hardtop wire harness connector for the rear wiper motor from the motor pigtail wire connector.

(7) Remove the nut and washer that secures the rear wiper motor bracket insulator to the stud on the liftglass (Fig. 20).

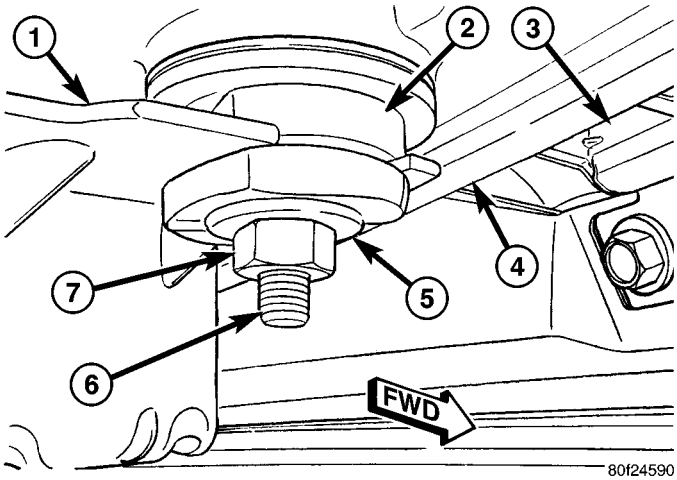

Fig. 20 Rear Wiper Motor Bracket

1 - BRACKET
2 - INSULATOR
3 - RIGHT LIFTGLASS HINGE
4 - LIFTGLASS
5 - WASHER
6 - STUD
7 - NUT