button is depressed downward to its Wipe detent position, the switch provides ignition switched battery current to the rear wiper motor and the rear wiper system operates. When the switch toggle button is depressed downward to the momentary Wash position, the switch provides ignition switched battery current to both the rear wiper motor and the rear washer pump motor for as long as the switch is held depressed. Refer to the owner's manual in the vehicle glove box for more information on the features, use and operation of the rear wiper and washer switch.

The incandescent switch illumination lamp is controlled by a lamp driver output from the instrument cluster based upon the panel lamps dimmer input to the cluster from the left multi-function switch. The rear wiper and washer switch can be diagnosed using conventional diagnostic tools and methods.

DIAGNOSIS AND TESTING - REAR WIPER & WASHER SWITCH

Be certain to perform the diagnosis for the rear wiper system and/or rear washer system before testing the rear wiper and washer switch. (Refer to 8 - ELECTRICAL/REAR WIPERS/WASHERS - DIAGNOSIS AND TESTING). Refer to the appropriate wiring information. The wiring information includes wiring diagrams, proper wire and connector repair procedures, details of wire harness routing and retention, connector pin-out information and location views for the various wire harness connectors, splices and grounds.

WARNING: TO AVOID PERSONAL INJURY OR DEATH, ON VEHICLES EQUIPPED WITH AIRBAGS, DISABLE THE SUPPLEMENTAL RESTRAINT SYSTEM BEFORE ATTEMPTING ANY STEERING WHEEL, STEERING COLUMN, AIRBAG, OR INSTRUMENT PANEL COMPONENT DIAGNOSIS OR SERVICE. DISCONNECT AND ISOLATE THE BATTERY NEGATIVE (GROUND) CABLE, THEN WAIT TWO MINUTES FOR THE SYSTEM CAPACITOR TO DISCHARGE BEFORE PERFORMING FURTHER DIAGNOSIS OR SERVICE. THIS IS THE ONLY SURE WAY TO DISABLE THE SUPPLEMENTAL RESTRAINT SYSTEM. FAILURE TO TAKE THE PROPER PRECAUTIONS COULD RESULT IN ACCIDENTAL AIRBAG DEPLOYMENT.

(1) Disconnect and isolate the battery negative cable. Remove the accessory switch bezel from the instrument panel and disconnect the instrument panel wire harness connector for the rear wiper and washer switch from the switch connector receptacle.

(2) Using an ohmmeter, check the rear wiper and washer switch continuity at the switch terminals as shown in the Rear Wiper & Washer Switch Continuity chart (Fig. 24).

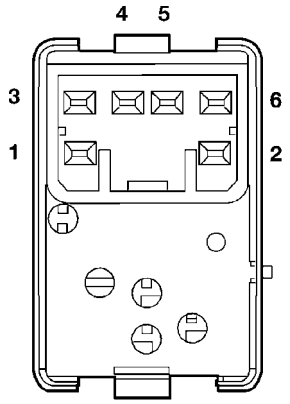

80a5035e

Fig. 24 Rear Wiper & Washer Switch Continuity

SWITCH POSITION	CONTINUITY BETWEEN
OFF	1 & 4
WIPE	4 & 5
WASH	2 & 5, 4 & 5
LAMP	1 & 3

(3) If the switch fails any of the continuity checks, replace the faulty switch. If the switch checks OK, repair the open or shorted rear wiper and/or rear washer system circuits as required.

REMOVAL

WARNING: TO AVOID PERSONAL INJURY OR DEATH, ON VEHICLES EQUIPPED WITH AIRBAGS, DISABLE THE SUPPLEMENTAL RESTRAINT SYSTEM BEFORE ATTEMPTING ANY STEERING WHEEL, STEERING COLUMN, AIRBAG, OR INSTRUMENT PANEL COMPONENT DIAGNOSIS OR SERVICE. DISCONNECT AND ISOLATE THE BATTERY NEGATIVE (GROUND) CABLE, THEN WAIT TWO MINUTES FOR THE SYSTEM CAPACITOR TO DISCHARGE BEFORE PERFORMING FURTHER DIAGNOSIS OR SERVICE. THIS IS THE ONLY SURE WAY TO DISABLE THE SUPPLEMENTAL RESTRAINT SYSTEM. FAILURE TO TAKE THE PROPER PRECAUTIONS COULD RESULT IN ACCIDENTAL AIRBAG DEPLOYMENT.

(1) Disconnect and isolate the battery negative cable.

(2) Remove the accessory switch bezel from the instrument panel center bezel from the instrument panel. (Refer to 23 - BODY/INSTRUMENT PANEL/ACCESSORY SWITCH BEZEL - REMOVAL).