(4) Replace dress cover (if applicable).
(5) Connect connector to its mating half/component.
(6) Connect battery and test all affected systems.

DIODE

REMOVAL

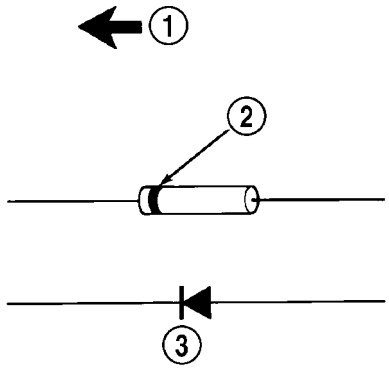

948W-197

Fig. 12 DIODE IDENTIFICATION

1 - CURRENT FLOW
2 - BAND AROUND DIODE INDICATES CURRENT FLOW
3 - DIODE AS SHOWN IN THE DIAGRAMS

(1) Disconnect the battery.
(2) Locate the diode in the harness, and remove the protective covering.
(3) Remove the diode from the harness, pay attention to the current flow direction (1) (2) (3).

INSTALLATION

(1) Remove the insulation from the wires in the harness. Only remove enough insulation to solder in the new diode.
(2) Install the new diode in the harness, making sure current flow is correct. If necessary, refer to the appropriate wiring diagram for current flow.
(3) Solder the connection together using rosin core type solder only. **Do not use acid core solder.**
(4) Tape the diode to the harness using electrical tape. Make sure the diode is completely sealed from the elements.
(5) Re-connect the battery and test affected systems.

TERMINAL

REMOVAL

(1) Follow steps for removing terminals described in the connector removal section.
(2) Cut the wire 6 inches from the back of the connector.

INSTALLATION

(1) Select a wire from the terminal repair kit that best matches the color and gage of the wire being repaired.
(2) Cut the repair wire to the proper length and remove one–half (1/2) inch of insulation.
(3) Splice the repair wire to the wire harness (see wire splicing procedure) (Refer to 8 - ELECTRICAL/ WIRING DIAGRAM INFORMATION/WIRE - STANDARD PROCEDURE).
(4) Insert the repaired wire into the connector.
(5) Install the connector locking wedge, if required, and reconnect the connector to its mating half/component.
(6) Re-tape the wire harness starting at 1–1/2 inches behind the connector and 2 inches past the repair.
(7) Connect battery and test all affected systems.