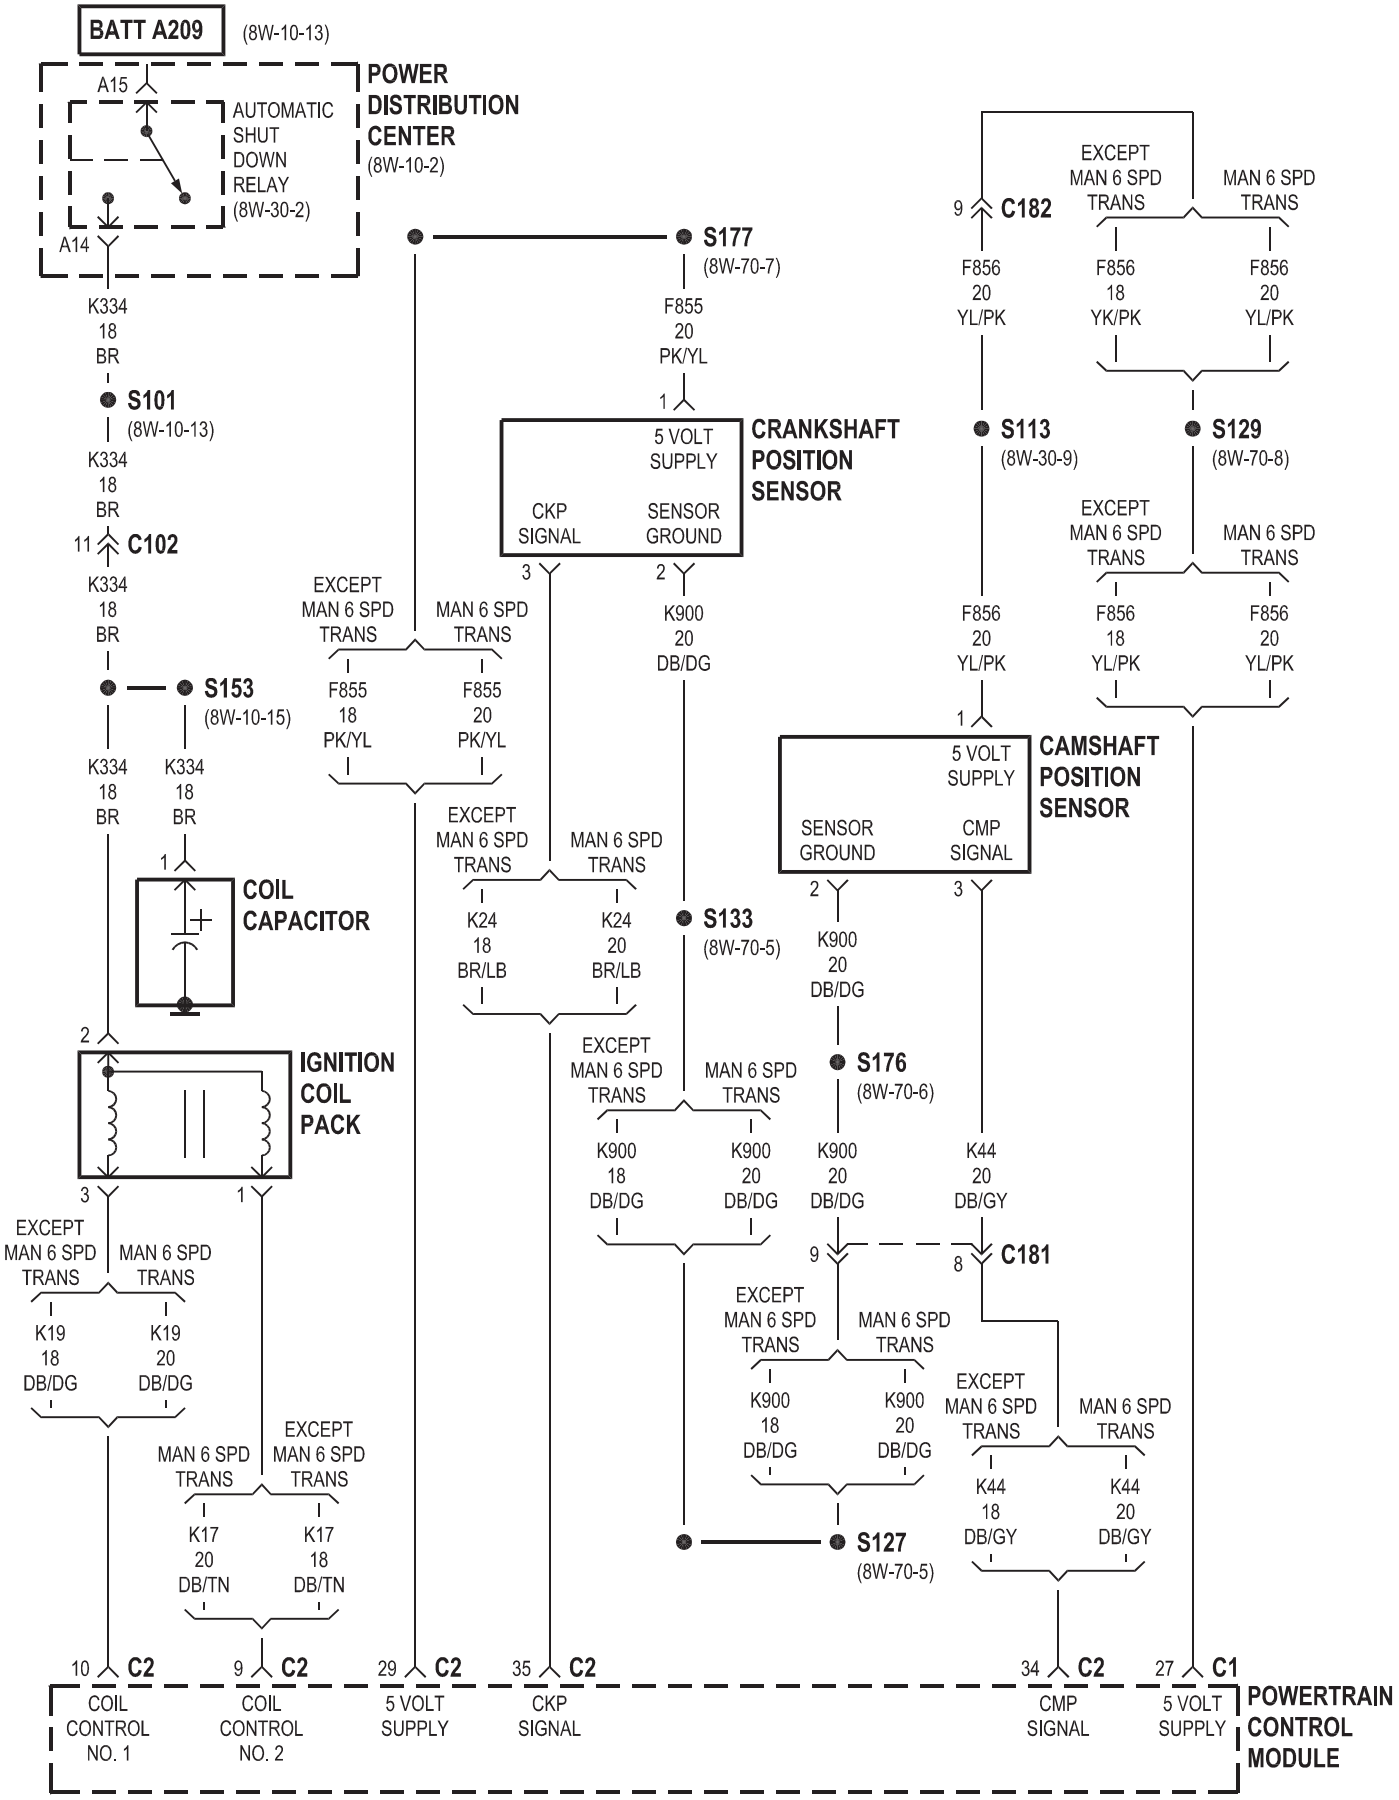
2.4L


BATT A209
(8W-10-13)
A15
AUTOMATIC SHUT DOWN RELAY (8W-30-2)
A14
POWER DISTRIBUTION CENTER (8W-10-2)
K334 18 BR
S101 (8W-10-13)
K334 18 BR
11 C102
K334 18 BR
S153 (8W-10-15)
K334 18 BR
K334 18 BR
1
COIL CAPACITOR
2
IGNITION COIL PACK
3
1
EXCEPT MAN 6 SPD TRANS
MAN 6 SPD TRANS
K19 18 DB/DG
K19 20 DB/DG
MAN 6 SPD TRANS
EXCEPT MAN 6 SPD TRANS
K17 20 DB/TN
K17 18 DB/TN
S177 (8W-70-7)
F855 20 PK/YL
1
CRANKSHAFT POSITION SENSOR
5 VOLT SUPPLY
CKP SIGNAL
SENSOR GROUND
3
2
K900 20 DB/DG
EXCEPT MAN 6 SPD TRANS
MAN 6 SPD TRANS
F855 18 PK/YL
F855 20 PK/YL
EXCEPT MAN 6 SPD TRANS
MAN 6 SPD TRANS
K24 18 BR/LB
K24 20 BR/LB
S133 (8W-70-5)
EXCEPT MAN 6 SPD TRANS
MAN 6 SPD TRANS
K900 18 DB/DG
K900 20 DB/DG
S127 (8W-70-5)
9 C182
EXCEPT MAN 6 SPD TRANS
MAN 6 SPD TRANS
F856 20 YL/PK
F856 18 YK/PK
F856 20 YL/PK
S113 (8W-30-9)
S129 (8W-70-8)
EXCEPT MAN 6 SPD TRANS
MAN 6 SPD TRANS
F856 20 YL/PK
F856 18 YL/PK
F856 20 YL/PK
1
CAMSHAFT POSITION SENSOR
5 VOLT SUPPLY
SENSOR GROUND
CMP SIGNAL
2
3
K900 20 DB/DG
S176 (8W-70-6)
K44 20 DB/GY
9
8
C181
EXCEPT MAN 6 SPD TRANS
MAN 6 SPD TRANS
K900 18 DB/DG
K900 20 DB/DG
EXCEPT MAN 6 SPD TRANS
MAN 6 SPD TRANS
K44 18 DB/GY
K44 20 DB/GY
10 C2
COIL CONTROL NO. 1
9 C2
COIL CONTROL NO. 2
29 C2
5 VOLT SUPPLY
35 C2
CKP SIGNAL
34 C2
CMP SIGNAL
27 C1
5 VOLT SUPPLY
POWERTRAIN CONTROL MODULE