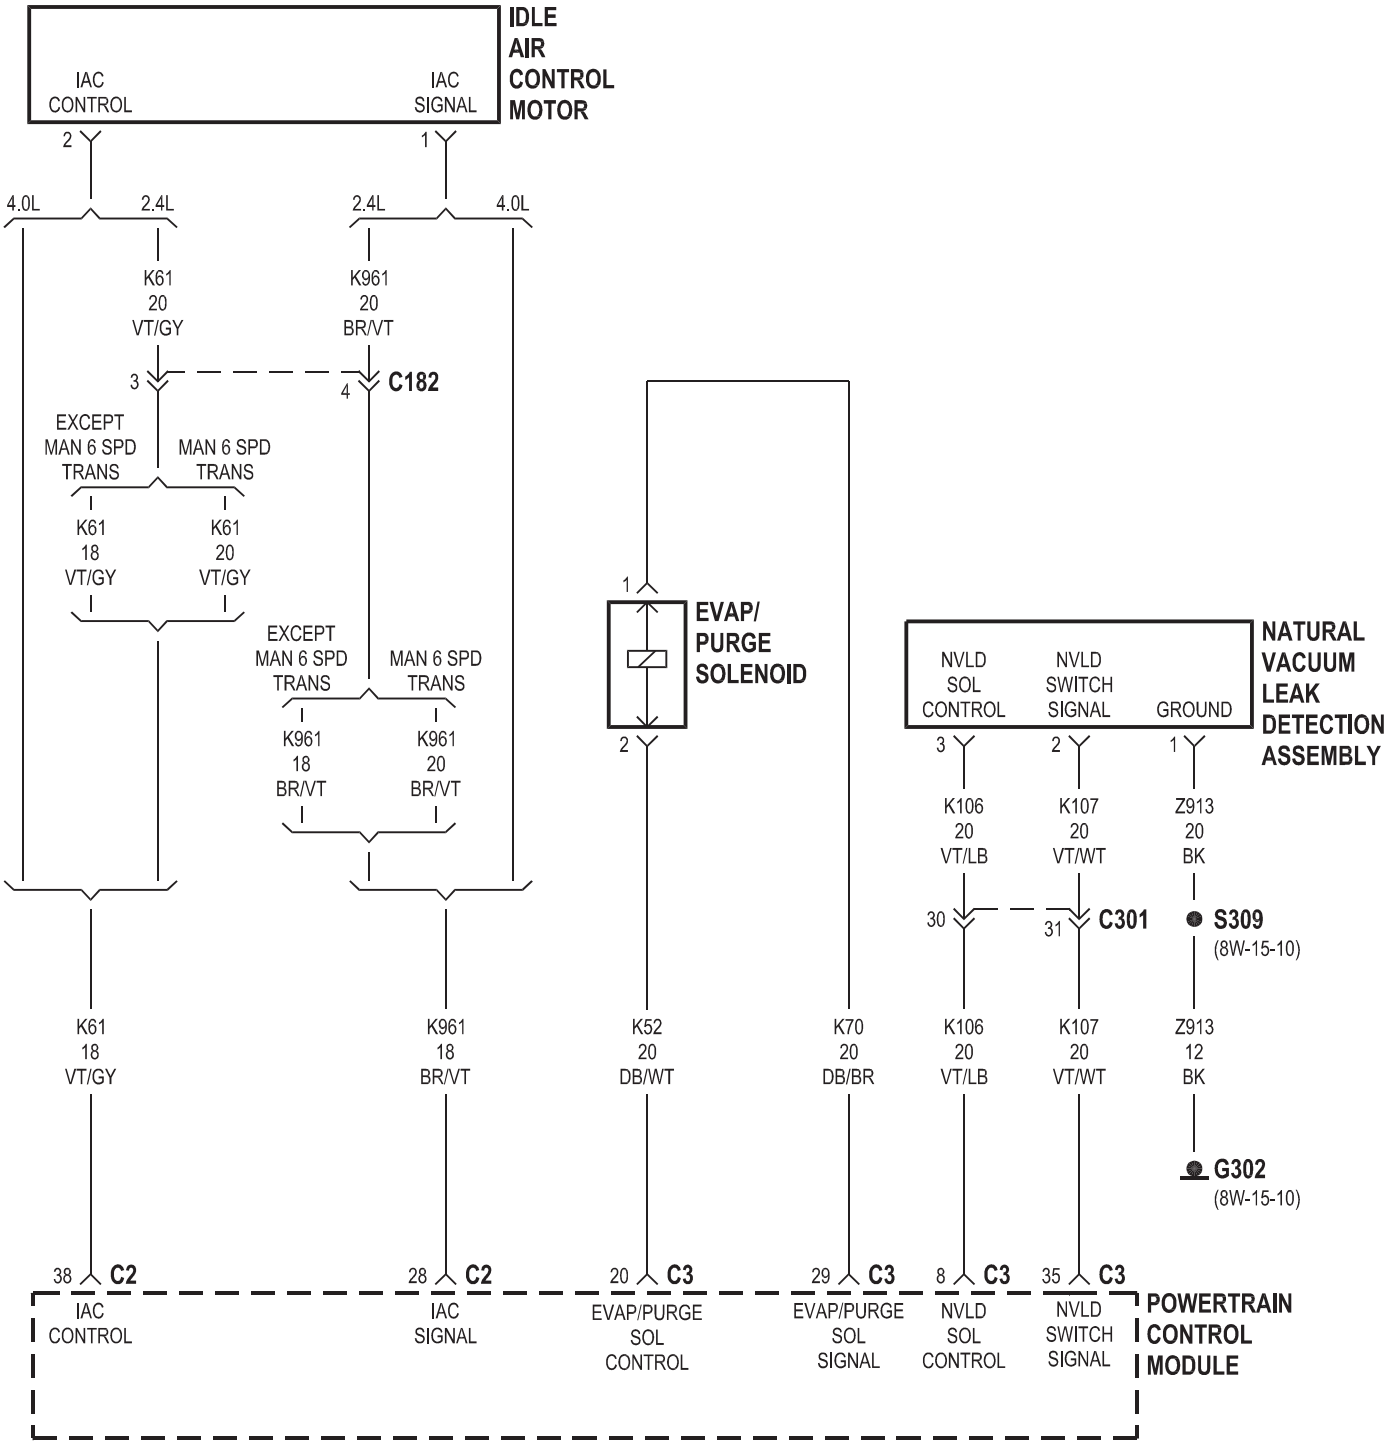

IDLE AIR CONTROL MOTOR
IAC CONTROL
IAC SIGNAL
2
1
4.0L
2.4L
2.4L
4.0L
K61 20 VT/GY
K961 20 BR/VT
3
4
C182
EXCEPT MAN 6 SPD TRANS
MAN 6 SPD TRANS
K61 18 VT/GY
K61 20 VT/GY
EXCEPT MAN 6 SPD TRANS
MAN 6 SPD TRANS
K961 18 BR/VT
K961 20 BR/VT
1
2
EVAP/ PURGE SOLENOID
NVLD SOL CONTROL
NVLD SWITCH SIGNAL
GROUND
NATURAL VACUUM LEAK DETECTION ASSEMBLY
3
2
1
K106 20 VT/LB
K107 20 VT/WT
Z913 20 BK
30
31
C301
S309
(8W-15-10)
K61 18 VT/GY
K961 18 BR/VT
K52 20 DB/WT
K70 20 DB/BR
K106 20 VT/LB
K107 20 VT/WT
Z913 12 BK
G302
(8W-15-10)
38 C2
28 C2
20 C3
29 C3
8 C3
35 C3
IAC CONTROL
IAC SIGNAL
EVAP/PURGE SOL CONTROL
EVAP/PURGE SOL SIGNAL
NVLD SOL CONTROL
NVLD SWITCH SIGNAL
POWERTRAIN CONTROL MODULE