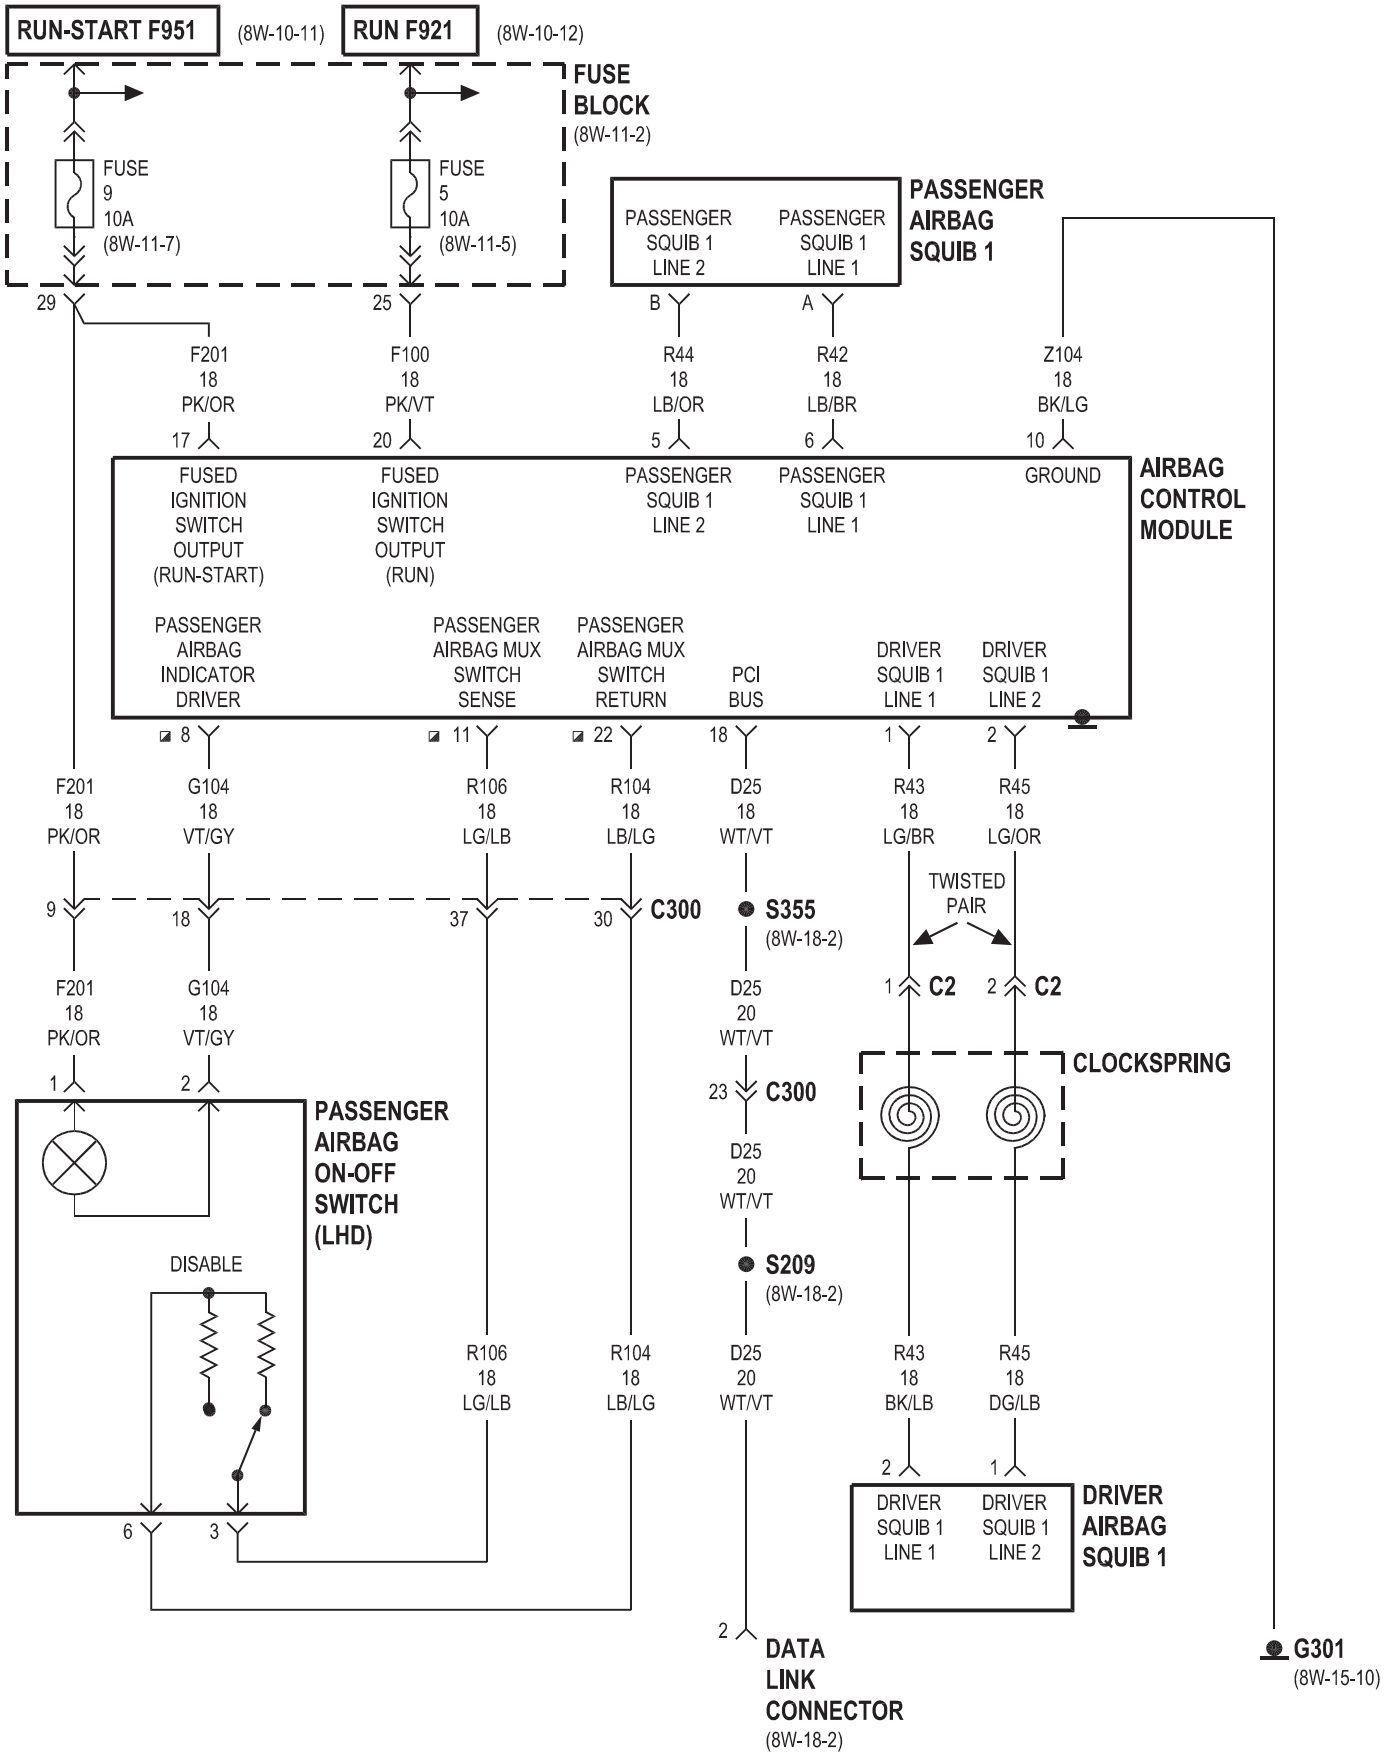

RUN-START F951
(8W-10-11)
RUN F921
(8W-10-12)
FUSE BLOCK
(8W-11-2)
FUSE 9 10A (8W-11-7)
FUSE 5 10A (8W-11-5)
PASSENGER AIRBAG SQUIB 1
PASSENGER SQUIB 1 LINE 2
PASSENGER SQUIB 1 LINE 1
29
25
B
A
F201 18 PK/OR
F100 18 PK/VT
R44 18 LB/OR
R42 18 LB/BR
Z104 18 BK/LG
17
20
5
6
10
AIRBAG CONTROL MODULE
FUSED IGNITION SWITCH OUTPUT (RUN-START)
FUSED IGNITION SWITCH OUTPUT (RUN)
PASSENGER SQUIB 1 LINE 2
PASSENGER SQUIB 1 LINE 1
GROUND
PASSENGER AIRBAG INDICATOR DRIVER
PASSENGER AIRBAG MUX SWITCH SENSE
PASSENGER AIRBAG MUX SWITCH RETURN
PCI BUS
DRIVER SQUIB 1 LINE 1
DRIVER SQUIB 1 LINE 2
8
11
22
18
1
2
F201 18 PK/OR
G104 18 VT/GY
R106 18 LG/LB
R104 18 LB/LG
D25 18 WT/VT
R43 18 LG/BR
R45 18 LG/OR
9
18
37
30
C300
S355
(8W-18-2)
TWISTED PAIR
D25 20 WT/VT
1 C2
2 C2
CLOCKSPRING
23
C300
D25 20 WT/VT
S209
(8W-18-2)
PASSENGER AIRBAG ON-OFF SWITCH (LHD)
DISABLE
R106 18 LG/LB
R104 18 LB/LG
D25 20 WT/VT
R43 18 BK/LB
R45 18 DG/LB
6
3
2
1
DRIVER SQUIB 1 LINE 1
DRIVER SQUIB 1 LINE 2
DRIVER AIRBAG SQUIB 1
2
DATA LINK CONNECTOR
(8W-18-2)
G301
(8W-15-10)
PAD