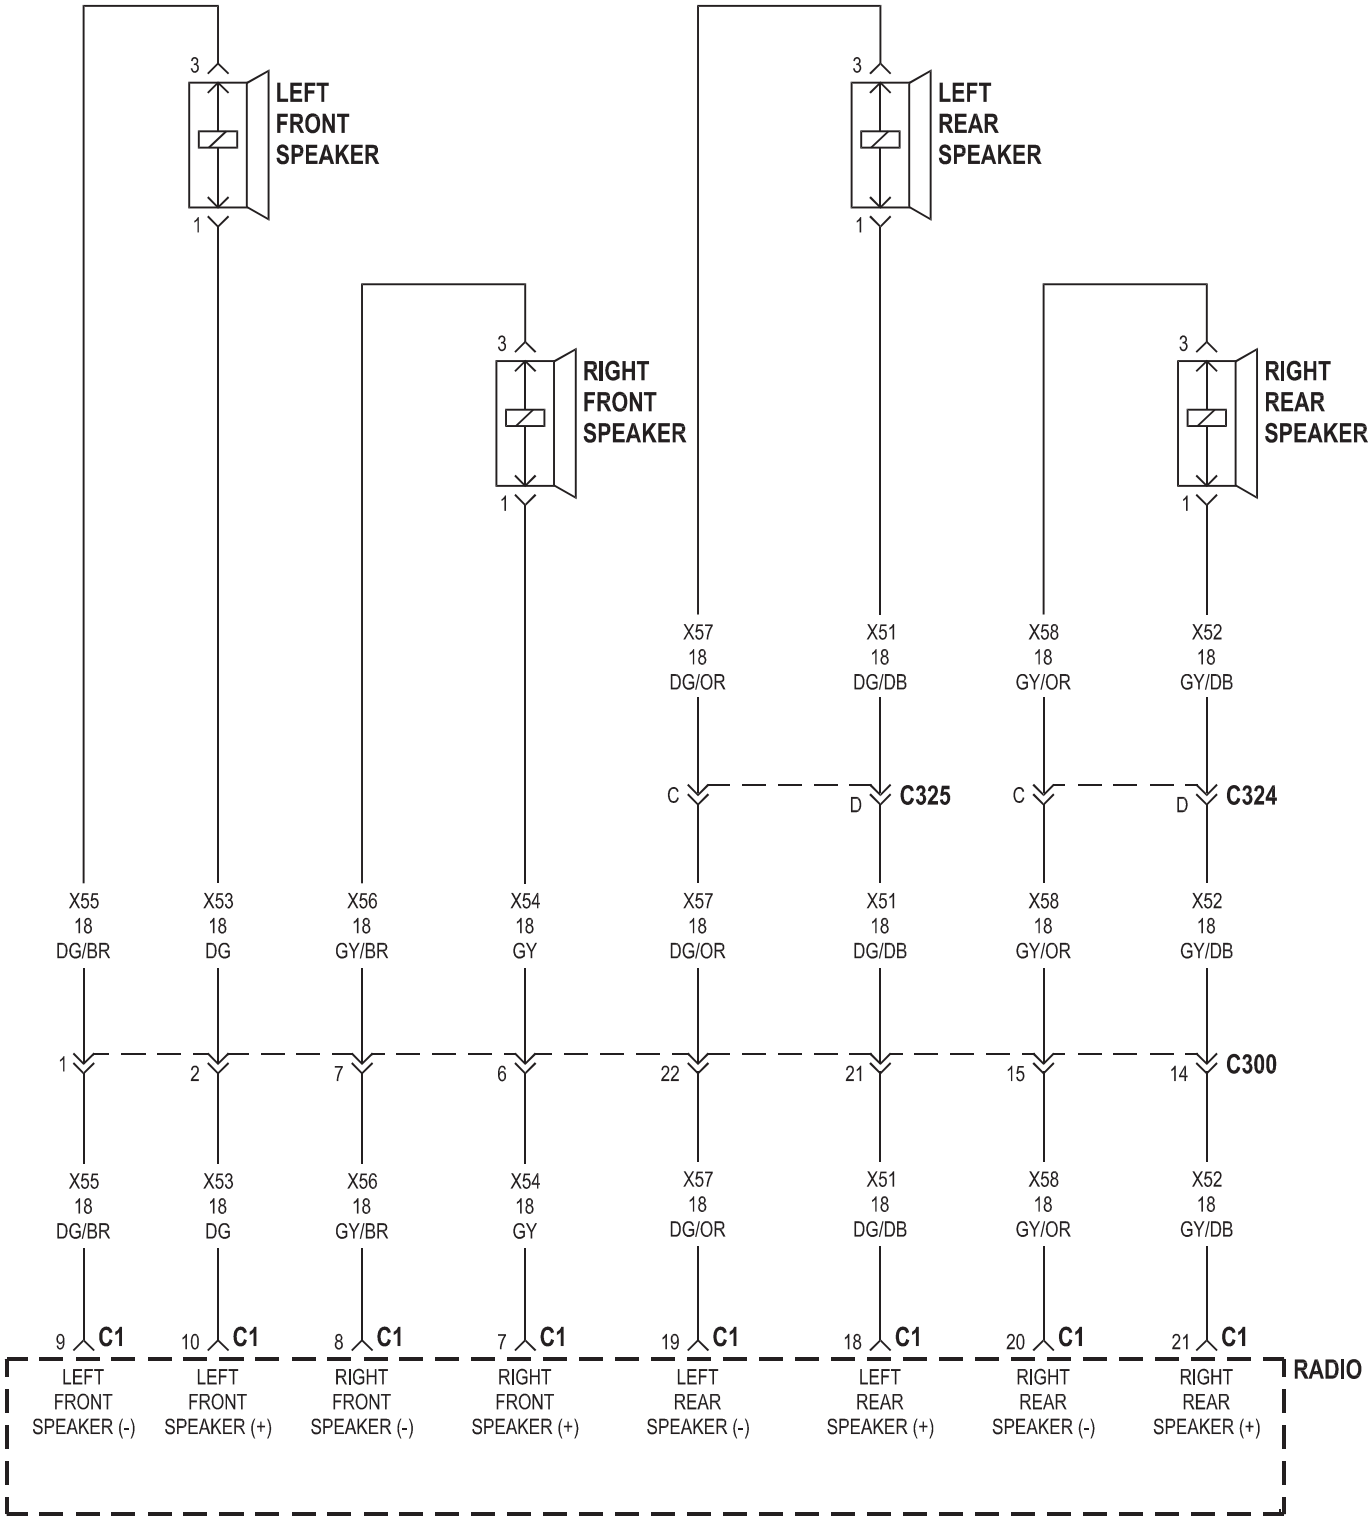

LEFT FRONT SPEAKER
LEFT REAR SPEAKER
RIGHT FRONT SPEAKER
RIGHT REAR SPEAKER
3
1
X55 18 DG/BR
X53 18 DG
X56 18 GY/BR
X54 18 GY
X57 18 DG/OR
X51 18 DG/DB
X58 18 GY/OR
X52 18 GY/DB
C
D
C325
C324
C300
1
2
7
6
22
21
15
14
9 C1
10 C1
8 C1
7 C1
19 C1
18 C1
20 C1
21 C1
LEFT FRONT SPEAKER (-)
LEFT FRONT SPEAKER (+)
RIGHT FRONT SPEAKER (-)
RIGHT FRONT SPEAKER (+)
LEFT REAR SPEAKER (-)
LEFT REAR SPEAKER (+)
RIGHT REAR SPEAKER (-)
RIGHT REAR SPEAKER (+)
RADIO