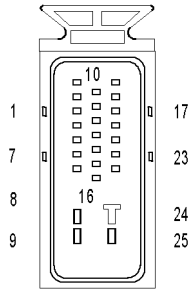

CONTROLLER ANTILOCK BRAKE

CONTROLLER ANTILOCK BRAKE - 25 WAY

CAV	CIRCUIT	FUNCTION
1	B1 18DG/OR	RIGHT REAR WHEEL SPEED SENSOR (-)
2	B3 18DG/YL	LEFT REAR WHEEL SPEED SENSOR (-)
3	B7 18DG/VT	RIGHT FRONT WHEEL SPEED SENSOR (+)
4	B9 18DG/LG	LEFT FRONT WHEEL SPEED SENSOR (+)
5	-	-
6	G117 18VT/LG	G-SWITCH NO. 1 SENSE
7	G118 18VT/YL	G-SWITCH NO. 2 SENSE
8	Z127 12BK/DG	GROUND
9	A111 12DG/RD	FUSED B(+)
10	B4 18DG/GY	LEFT REAR WHEEL SPEED SENSOR (+)
11	B8 18DG/TN	LEFT FRONT WHEEL SPEED SENSOR (-)
12	L50 18WT/TN	BRAKE LAMP SWITCH OUTPUT
13	G119 18VT	G-SWITCH TEST SIGNAL
14	-	-
15	-	-
16	G83 18VT/WT	ABS RELAY CONTROL
17	B2 18DG/LB	RIGHT REAR WHEEL SPEED SENSOR (+)
18	B6 18DG/WT	RIGHT FRONT WHEEL SPEED SENSOR (-)
19	-	-
20	D21 18WT/BR	SCI TRANSMIT
21	-	-
22	-	-
23	F102 18PK/DB	FUSED IGNITION SWITCH OUTPUT (RUN)
24	Z107 12BK/DG	GROUND
25	A107 12TN/RD	FUSED B(+)

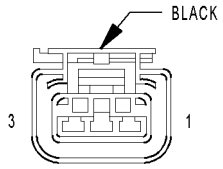

CRANKSHAFT POSITION SENSOR

CRANKSHAFT POSITION SENSOR - BLACK 3 WAY

CAV	CIRCUIT	FUNCTION
1	F855 20PK/YL	5 VOLT SUPPLY
2	K900 20DB/DG	SENSOR GROUND
3	K24 18BR/LB (EXCEPT MAN 6 SPD TRANS)	CKP SIGNAL
3	K24 20BR/LB (MAN 6 SPD TRANS)	CKP SIGNAL