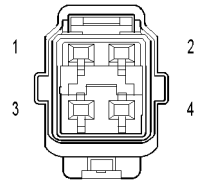

LEFT REAR LAMP ASSEMBLY

LEFT REAR LAMP ASSEMBLY - 4 WAY

CAV	CIRCUIT	FUNCTION
1	L1 20WT/LG (EXCEPT EXPORT)	BACKUP LAMP FEED
1	L63 18DG/RD (EXPORT)	LEFT TURN/STOP SIGNAL
2	L63 18DG/RD (EXCEPT EXPORT)	LEFT TURN/STOP SIGNAL
2	L1 20WT/LG (EXPORT)	BACKUP LAMP FEED
3	L7 18WT/YL (EXCEPT EXPORT)	HEADLAMP SWITCH OUTPUT
3	L50 18WT/TN (EXPORT)	BRAKE LAMP SWITCH OUTPUT
4	L62 18BR/RD (EXCEPT EXPORT)	RIGHT TURN/STOP SIGNAL
4	L7 18WT/YL (EXPORT)	HEADLAMP SWITCH OUTPUT

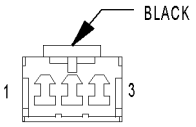

LEFT REAR SPEAKER

LEFT REAR SPEAKER - BLACK 3 WAY

CAV	CIRCUIT	FUNCTION
1	X51 18DG/DB	LEFT REAR SPEAKER (+)
2	-	-
3	X57 18DG/OR	LEFT REAR SPEAKER (-)

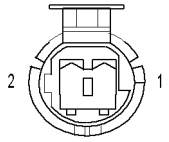

LEFT REAR WHEEL SPEED SENSOR

LEFT REAR WHEEL SPEED SENSOR - 2 WAY

CAV	CIRCUIT	FUNCTION
1	B3 18DG/YL	LEFT REAR WHEEL SPEED SENSOR (-)
2	B4 18DG/GY	LEFT REAR WHEEL SPEED SENSOR (+)

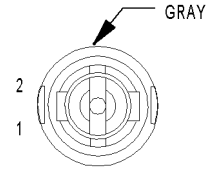

LEFT SIDE MARKER LAMP (EXCEPT EXPORT)

LEFT SIDE MARKER LAMP (EXCEPT EXPORT) - GRAY 2 WAY

CAV	CIRCUIT	FUNCTION
1	L7 18WT/YL	HEADLAMP SWITCH OUTPUT
2	L61 18WT/LG	LEFT TURN SIGNAL