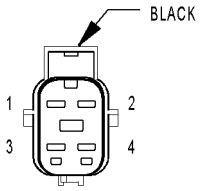

OXYGEN SENSOR 1/2 DOWNSTREAM

OXYGEN SENSOR 1/2 DOWNSTREAM - BLACK 4 WAY

CAV	CIRCUIT	FUNCTION
1	K299 18BR/WT (EXCEPT MAN 6 SPD TRANS)	O2 1/2 HEATER CONTROL
1	K299 20BR/WT (MAN 6 SPD TRANS)	O2 1/2 HEATER CONTROL
2	Z43 18BK/LB (EXCEPT MAN 6 SPD TRANS)	GROUND
2	Z43 20BK/LB (MAN 6 SPD TRANS)	GROUND
3	K904 18DB/DG (EXCEPT MAN 6 SPD TRANS)	O2 RETURN (DOWNSTREAM)
3	K904 20DB/DG (MAN 6 SPD TRANS)	O2 RETURN (DOWNSTREAM)
4	K141 18DB/YL (EXCEPT MAN 6 SPD TRANS)	O2 1/2 SIGNAL
4	K141 20DB/YL (MAN 6 SPD TRANS)	O2 1/2 SIGNAL

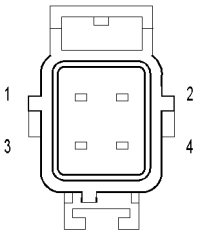

OXYGEN SENSOR 2/1 UPSTREAM (4.0L)

OXYGEN SENSOR 2/1 UPSTREAM (4.0L) - 4 WAY

CAV	CIRCUIT	FUNCTION
1	K199 18BR/VT	O2 2/1 HEATER CONTROL
2	Z42 18BK/LG	GROUND
3	K902 18BR/DG	O2 RETURN (UPSTREAM)
4	K43 18DB/LG	O2 2/1 SIGNAL

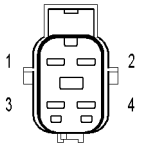

OXYGEN SENSOR 2/2 DOWNSTREAM (4.0L)

OXYGEN SENSOR 2/2 DOWNSTREAM (4.0L) - 4 WAY

CAV	CIRCUIT	FUNCTION
1	K399 18BR/GY	O2 2/2 HEATER CONTROL
2	Z43 18BK/LB	GROUND
3	K904 18BD/DG	O2 RETURN (DOWNSTREAM)
4	K243 18BR	O2 2/2 SIGNAL

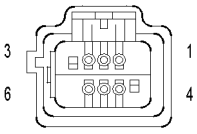

PASSENGER AIRBAG ON-OFF SWITCH (LHD)

PASSENGER AIRBAG ON-OFF SWITCH (LHD) - 6 WAY

CAV	CIRCUIT	FUNCTION
1	F201 18PK/OR	FUSED IGNITION SWITCH OUTPUT (RUN-START)
2	G104 18VT/GY	PASSENGER AIRBAG INDICATOR DRIVER
3	R106 18LG/LB	PASSENGER AIRBAG MUX SWITCH SENSE
4	-	-
5	-	-
6	R104 18LB/LG	PASSENGER AIRBAG MUX SWITCH RETURN