for the location of the body wire harness connector locations.

(6) Install the instrument panel assembly onto the dash panel (Refer to 23 - BODY/INSTRUMENT PANEL/INSTRUMENT PANEL ASSEMBLY - INSTALLATION).

(7) Reconnect the battery negative cable.

IOD FUSE

DESCRIPTION

All vehicles are equipped with an Ignition-Off Draw (IOD) fuse (Fig. 5) that is removed from its cavity in the Power Distribution Center (PDC) when the vehicle is shipped from the factory. Dealer personnel are to remove the IOD fuse from the storage location and install it into PDC fuse cavity 15 as part of the preparation procedures performed just prior to new vehicle delivery.

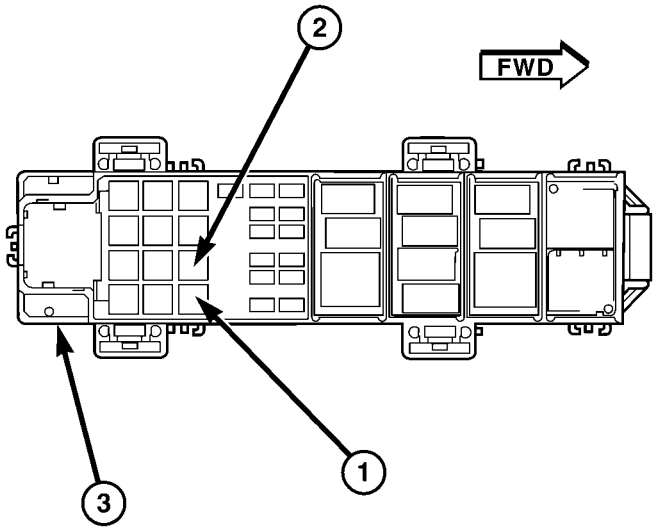

Fig. 5 Ignition-Off Draw Fuse

1 - IGNITION-OFF DRAW FUSE
2 - IGNITION-OFF DRAW FUSE STORAGE LOCATION
3 - POWER DISTRIBUTION CENTER

The PDC has a molded plastic cover that can be unlatched and opened to provide service access to all of the fuses and relays in the PDC. An integral latch and hinge tabs are molded into the PDC cover for easy removal. A fuse layout map is integral to the underside of the PDC cover to ensure proper fuse and relay identification. The IOD fuse is a 50 ampere cartridge-type fuse and, when removed, it is stored in the empty fuse cavity 11 of the PDC.

OPERATION

The term ignition-off draw identifies a normal condition where power is being drained from the battery with the ignition switch in the Off position. The IOD fuse feeds the memory and sleep mode functions for many of the electronic modules in the vehicle as well as various other accessories that require battery current when the ignition switch is in the Off position, including the clock. The only reason the IOD fuse is removed is to reduce the normal IOD of the vehicle electrical system during new vehicle transportation and pre-delivery storage to reduce battery depletion, while still allowing vehicle operation so that the vehicle can be loaded, unloaded and moved as needed by both vehicle transportation company and dealer personnel.

The IOD fuse is removed from PDC fuse cavity #15 when the vehicle is shipped from the assembly plant. Dealer personnel must install the IOD fuse when the vehicle is being prepared for delivery in order to restore full electrical system operation. Once the vehicle is prepared for delivery, the IOD function of this fuse becomes transparent and the fuse that has been assigned the IOD designation becomes only another Fused B(+) circuit fuse. The IOD fuse serves no useful purpose to the dealer technician in the service or diagnosis of any vehicle system or condition, other than the same purpose as that of any other standard circuit protection device.

The IOD fuse can be used by the vehicle owner as a convenient means of reducing battery depletion when a vehicle is to be stored for periods not to exceed about thirty days. However, it must be remembered that removing the IOD fuse will not eliminate IOD, but only reduce this normal condition. If a vehicle will be stored for more than about thirty days, the battery negative cable should be disconnected to eliminate normal IOD; and, the battery should be tested and recharged at regular intervals during the vehicle storage period to prevent the battery from becoming discharged or damaged.

REMOVAL

The Ignition-Off Draw (IOD) fuse is removed from Power Distribution Center (PDC) fuse cavity #15 when the vehicle is shipped from the assembly plant. Dealer personnel must install the IOD fuse when the vehicle is being prepared for delivery in order to restore full electrical system operation.

(1) Turn the ignition switch to the Off position.

(2) Unlatch and open the cover from the PDC.

(3) Remove the IOD fuse from fuse cavity #15 of the PDC.

(4) Store the removed IOD fuse by inserting the terminal blades of the fuse into the empty fuse cavity #11 of the PDC.

(5) Close and latch the cover onto the PDC.