POWER DISTRIBUTION CENTER

DESCRIPTION

All of the electrical current distributed throughout this vehicle is directed through the standard equipment Power Distribution Center (PDC) (Fig. 7). The molded plastic PDC housing is located on the right side of the engine compartment, forward of the battery on the top of the right front inner fender shield. The PDC houses up to fifteen maxi-type cartridge fuses, which replace all in-line fusible links. The PDC also houses up to thirteen blade-type mini fuses, and up to twelve International Standards Organization (ISO) relays (four standard-type and eight micro-type).

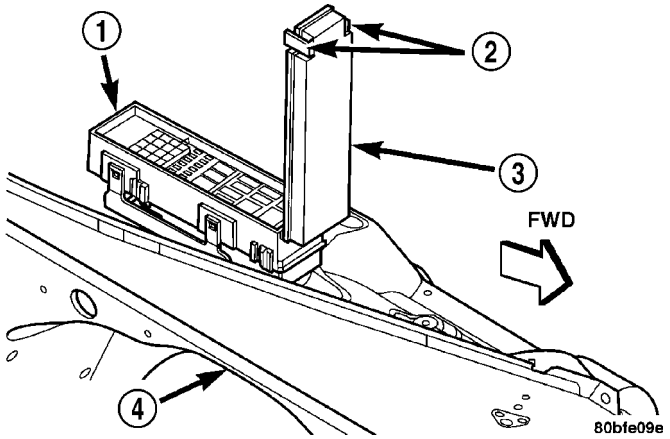

Fig. 7 Power Distribution Center Location

1 - POWER DISTRIBUTION CENTER (PDC)
2 - LATCHES
3 - COVER
4 - RIGHT FRONT FENDER

The PDC housing is secured in the engine compartment at four points. Integral mounts on both sides of the PDC housing engage and latch to stanchions that are integral to the stamped steel PDC bracket. The PDC bracket is secured to the top of the right front inner fender shield with three screws, two at the front of the bracket and one at the rear. The PDC is integral to the dash wire harness, which exits from the bottom of the PDC housing. The PDC housing has a molded plastic cover that includes two integral latches at the rear and pivot hooks at the front that snap over a hinge pin on the front of the PDC housing. The PDC cover is easily opened or removed for service access and has a convenient fuse and relay layout map integral to the inside surface of the cover to ensure proper component identification.

The PDC cover, the PDC housing lower cover, the PDC relay wedges, the PDC relay cassettes and the PDC B(+) terminal stud module are available for service replacement. The PDC main housing unit, the fuse wedges and the bus bars cannot be repaired and are only serviced as a unit with the dash wire harness. If the PDC main housing unit, fuse wedges or the bus bars are faulty or damaged, the dash wire harness unit must be replaced.

OPERATION

All of the current from the battery and the generator output enters the PDC through two cables and a single two-holed eyelet that is secured with nuts to the two PDC B(+) terminal studs near the back of the PDC housing. The molded plastic PDC cover is unlatched and opened to access the battery and generator output connection B(+) terminal studs. Internal connection of all of the PDC circuits is accomplished by an intricate combination of hard wiring and bus bars. Refer to the **Wiring** section of this service manual for wiring diagrams.

REMOVAL

The Power Distribution Center (PDC) main housing unit, the PDC fuse wedges and the PDC bus bars cannot be repaired and are only serviced as a unit with the dash wire harness. If the PDC main housing unit, the fuse wedges or the bus bars are faulty or damaged, the entire PDC and dash wire harness unit must be replaced.

(1) Disconnect and isolate the battery negative cable.

(2) Disconnect each of the dash wire harness connectors. Refer to **Connector Locations** in the Wiring section of this service manual for the location of the dash wire harness connector locations.

(3) Remove all of the fasteners that secure each of the dash wire harness ground eyelets to the vehicle body and chassis components. Refer to **Connector Locations** in the Wiring section of this service manual for the location of the ground eyelet locations.

(4) Disengage each of the retainers that secure the dash wire harness to the vehicle body and chassis components. Refer to **Connector Locations** in the Wiring section of this service manual for the location of the dash wire harness retainer locations.

(5) Unlatch and open the PDC cover (Fig. 8).