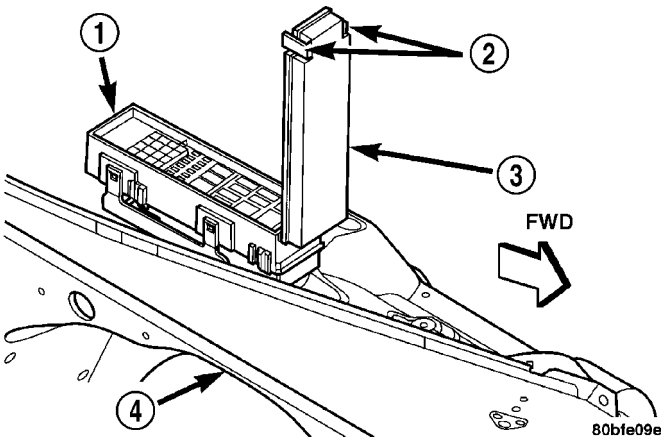

Fig. 8 Power Distribution Center

1 - POWER DISTRIBUTION CENTER (PDC)
2 - LATCHES
3 - COVER
4 - RIGHT FRONT FENDER

(6) Remove the two nuts that secure the eyelet terminal of the battery positive cable take out and the engine wire harness generator output take out to the PDC B(+) terminal studs.

(7) Remove the battery positive cable take out and the engine wire harness generator output take out eyelet terminal from the B(+) terminal studs.

(8) Disengage the latches on the PDC housing mounts from the tabs on the PDC bracket stanchions, and pull the PDC housing upward to disengage the mounts from the stanchions of the bracket.

(9) Remove the PDC and the dash wire harness from the engine compartment as a unit.

DISASSEMBLY

POWER DISTRIBUTION CENTER DISASSEMBLY

The Power Distribution Center (PDC) cover, the PDC housing lower cover, the PDC relay wedges, the PDC relay cassettes and the PDC B(+) terminal stud module are available for service replacement. The PDC cover can be simply unlatched and removed from the PDC housing without the PDC being removed or disassembled. Service of the remaining PDC components requires that the PDC be removed from its mounting and disassembled. Refer to **Wiring Repair** in the index of this service manual for the location of the proper wiring repair procedures.

PDC HOUSING LOWER COVER REMOVAL

(1) Disconnect and isolate the battery negative cable.

(2) Unlatch and remove the cover from the PDC.

(3) Unlatch and remove the B(+) terminal stud cover from the PDC.

(4) Remove the two nuts that secure the eyelet terminal to the two B(+) terminal studs of the PDC.

(5) Remove the eyelet terminal from the PDC B(+) terminal studs.

(6) Disengage the latches on the PDC mounts from the tabs on the PDC bracket stanchions, and pull the PDC housing upward to disengage the mounts from the stanchions of the bracket.

(7) Using a trim stick or another suitable wide flat-bladed tool, gently pry the latches on each side and one end of the PDC housing that secure the housing lower cover to the PDC and remove the housing lower cover (Fig. 9).

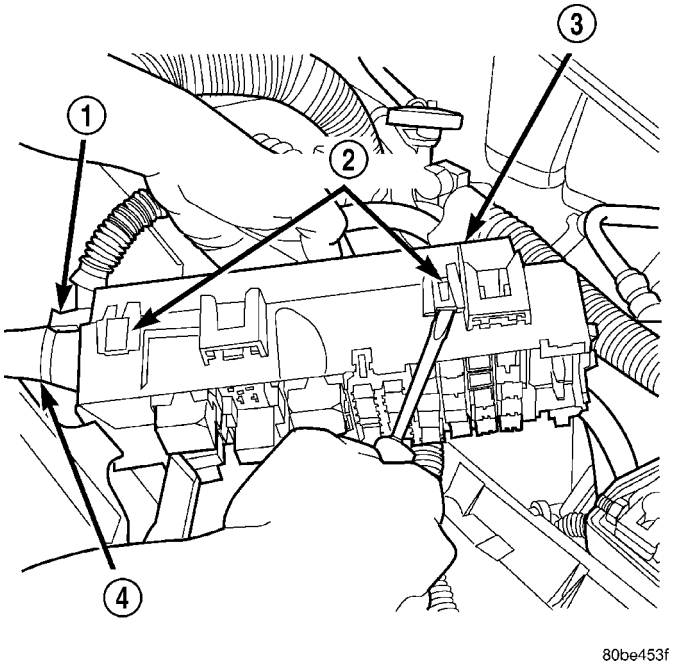

Fig. 9 PDC Housing Lower Cover Remove/Install - Typical

1 - THROUGH FORMATION
2 - LATCHES (5)
3 - PDC HOUSING LOWER COVER
4 - WIRE HARNESS

PDC B(+) TERMINAL MODULE REMOVAL

(1) Remove the PDC housing lower cover.

(2) From the top of the PDC housing, use a small screwdriver or a terminal pick tool (Special Tool Kit 6680) to release the two latches that secure the B(+) terminal module in the PDC (Fig. 10).