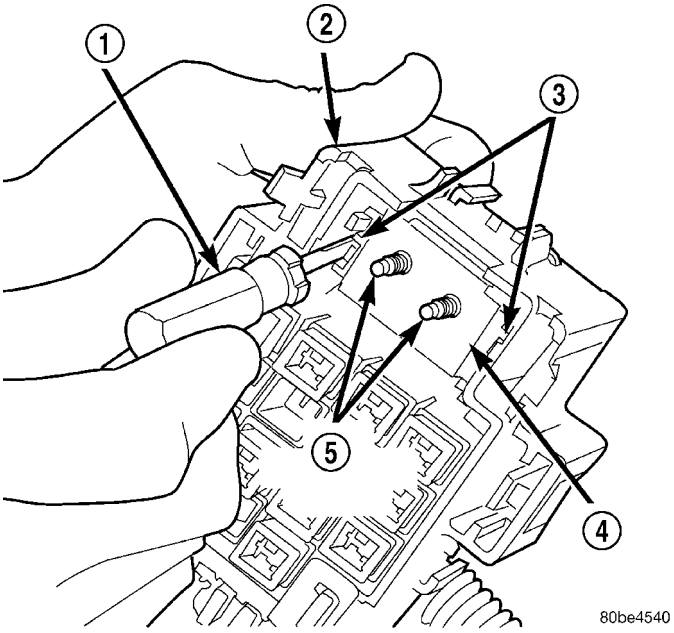

Fig. 10 PDC B(+) Terminal Module Latches

1 - FROM SPECIAL TOOL KIT 6680
2 - PDC HOUSING
3 - LATCHES
4 - BUS BAR
5 - B+ TERMINAL STUDS

(3) Gently and evenly press the two B(+) terminal studs down through the bus bar in the PDC.

(4) From the bottom of the PDC housing, remove the B(+) terminal module from the PDC (Fig. 11).

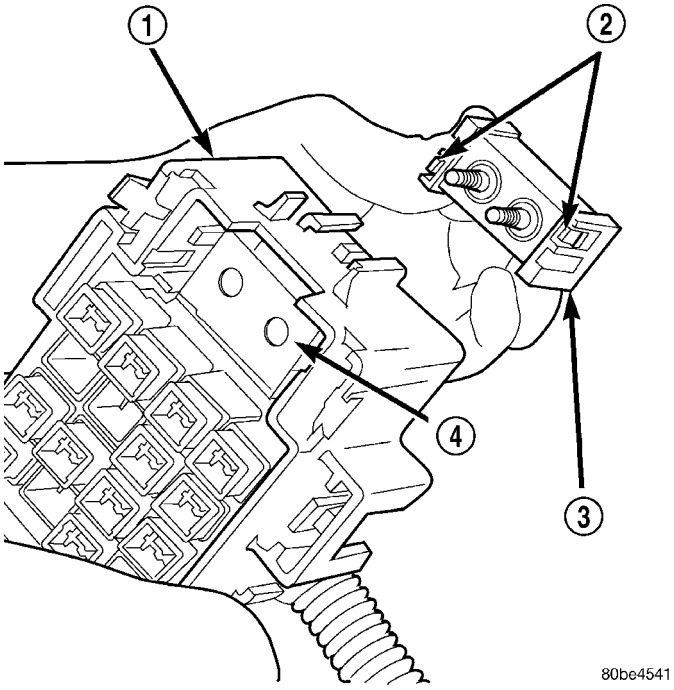

Fig. 11 PDC B(+) Terminal Module Remove/Install

1 - PDC HOUSING
2 - LATCHES
3 - B+ TERMINAL MODULE
4 - BUS BAR

PDC RELAY WEDGE REMOVAL

(1) Remove the PDC housing lower cover.

(2) Remove each of the relays from the PDC relay wedge to be removed.

(3) From the bottom of the PDC housing, use a small screwdriver or a terminal pick tool (Special Tool Kit 6680) to release the two latches (yellow) that secure the relay wedge to the PDC relay cassette.

(4) From the top of the PDC housing, remove the relay wedge from the PDC relay cassette (Fig. 12).

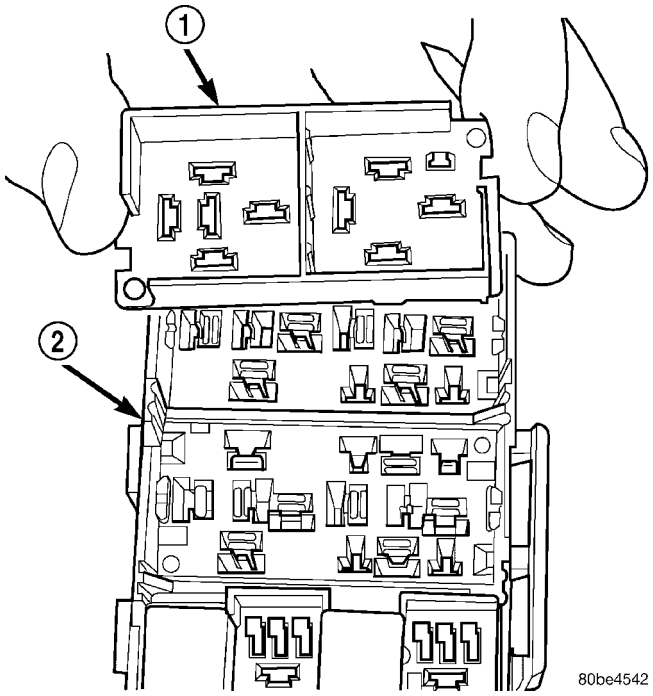

Fig. 12 PDC Relay Wedge Remove/Install - Typical

1 - RELAY WEDGE
2 - PDC HOUSING

PDC RELAY CASSETTE REMOVAL

(1) Remove the relay wedge from the PDC relay cassette to be removed.

NOTE: It may be necessary to remove relay cassettes that are not being serviced from the PDC housing in order to obtain sufficient clearance to service the faulty relay cassette. The same service procedure is repeated as necessary to remove each of the interfering relay wedges and relay cassettes from the PDC housing.

(2) From the top of the PDC housing, use a small screwdriver or a terminal pick tool (Special Tool Kit 6680) to release the two latches that secure the relay cassette in the PDC (Fig. 13).