Press the relay cassette up into the PDC until both of the latches are fully engaged.

CAUTION: Proper care must be taken to be certain that the wiring and terminals from the faulty PDC relay cassette are installed in the correct terminal cavities of the replacement relay cassette. To prevent mistakes it is recommended that the wiring and terminals be removed from the faulty relay cassette one cavity at a time, repaired or spliced as necessary, then installed securely into the correct cavity of the replacement relay cassette. If you are not absolutely certain into which cavity a terminal should be installed, refer to Power Distribution in the index of this service manual for the location of complete PDC wiring diagrams.

(4) While pulling gently on the wire from the bottom of the faulty PDC relay cassette, use a terminal pick tool (Special Tool Kit 6680) from the top of the relay cassette to release the latch that secures the terminal in the relay cassette terminal cavity (Fig. 15).

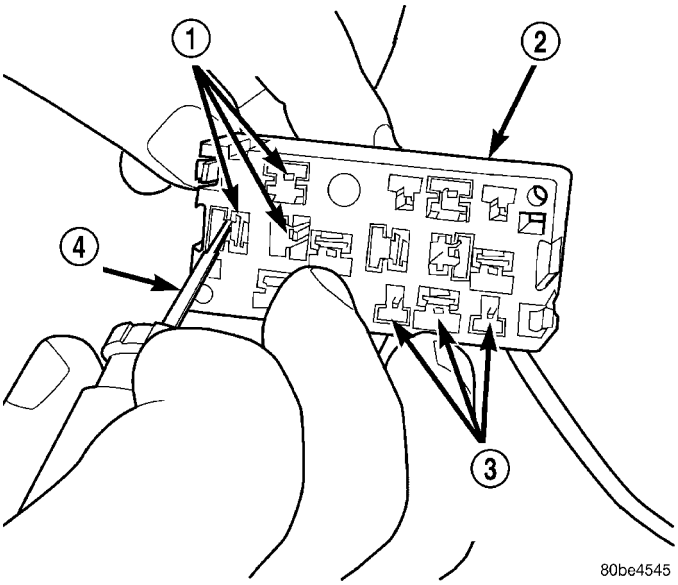

Fig. 15 PDC Relay Cassette Terminal Remove/Install

1 - TERMINAL CAVITIES
2 - PDC RELAY CASSETTE
3 - TERMINAL LATCHES
4 - FROM SPECIAL TOOL KIT 6680

(5) From the bottom of the faulty PDC relay cassette, remove the wire and terminal from the relay cassette terminal cavity.

(6) Make all necessary repairs and splices to the wire for the removed terminal. Refer to **Wiring Repair** in the index of this service manual for the location of the proper wiring repair procedures.

(7) From the bottom of the PDC housing, align and insert the removed wire and terminal into the correct terminal cavity of the replacement relay cassette. Push the wire and terminal up into the relay cassette terminal cavity until it is fully engaged by the latch.

(8) Repeat Step 4, Step 5, Step 6 and Step 7 one wire and terminal at a time until each of the wires and terminals have been transferred from the faulty PDC relay cassette into the replacement relay cassette.

(9) Install the PDC relay wedge into the replacement PDC relay cassette.

INSTALLATION

The Power Distribution Center (PDC) main housing unit, the PDC fuse wedges and the PDC bus bars cannot be repaired and are only serviced as a unit with the dash wire harness. If the PDC main housing unit, the fuse wedges or the bus bars are faulty or damaged, the entire PDC and dash wire harness unit must be replaced.

NOTE: If the PDC is being replaced with a new unit, be certain to transfer each of the fuses and relays that have not been included with the replacement PDC from the faulty PDC to the proper cavities of the replacement unit. Refer to Power Distribution in the index of this service manual for the location of complete PDC wiring diagrams and cavity assignments.

(1) Position the PDC and the dash wire harness unit in the engine compartment.

(2) Engage the mounts on the PDC housing with the stanchions of the PDC bracket and push the unit downward until the mount latches engage the mounting tabs on the PDC bracket.

(3) Install the eyelet terminal of the battery positive cable take out and the engine wire harness generator output take out onto the PDC B(+) terminal studs.

(4) Install and tighten the two nuts that secure the eyelet terminal of the battery positive cable take out and the engine wire harness generator output take out to the B(+) terminal studs. Tighten the nuts to 11.3 N·m (100 in. lbs.).

(5) Engage the tabs on the lower edge of the B(+) terminal stud cover in the slots on the back of the PDC housing, then engage the latch on the top of the cover with the latch receptacle on the PDC housing.

(6) Engage each of the retainers that secure the dash wire harness to the vehicle body and chassis components. Refer to **Connector Locations** in the index of this service manual for the location of more information on the dash wire harness retainer locations.

(7) Install all of the fasteners that secure each of the dash wire harness ground eyelets to the vehicle body and chassis components. Refer to **Connector Locations** in the index of this service manual for the