location of more information on the ground eyelet locations.

(8) Reconnect each of the dash wire harness connectors. Refer to **Connector Locations** in the index of this service manual for the location of more information on the dash wire harness connector locations.

(9) Reconnect the battery negative cable.

POWER DISTRIBUTION CENTER SUPPORT BRACKET

REMOVAL

(1) Disconnect and isolate the battery negative cable.

(2) Remove the Power Distribution Center (PDC) from the PDC bracket (Refer to 8 - ELECTRICAL/POWER DISTRIBUTION/POWER DISTRIBUTION CENTER - REMOVAL).

(3) Remove the three screws that secure the PDC bracket to the right front inner fender (Fig. 16).

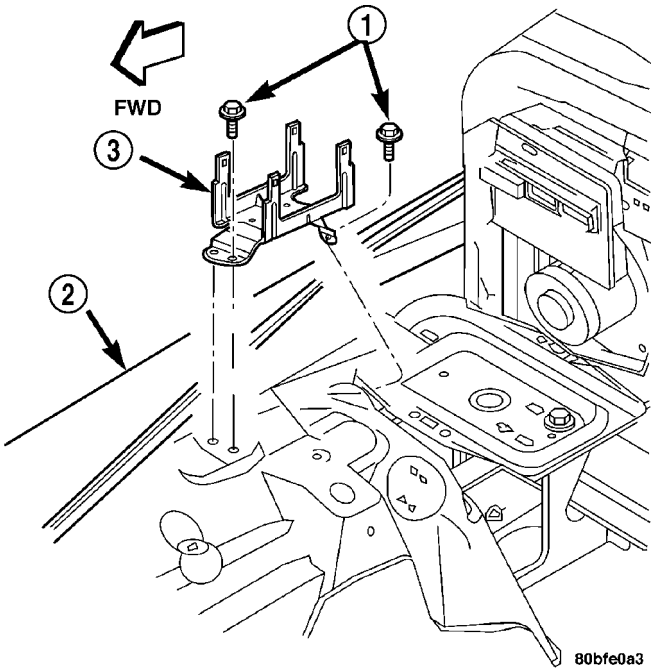

Fig. 16 PDC Bracket

1 - SCREWS (3)
2 - RIGHT FRONT FENDER
3 - PDC BRACKET

(4) Remove the PDC bracket from the right front inner fender.

INSTALLATION

(1) Position the PDC bracket onto the right front inner fender.

(2) Install and tighten the three screws that secure the PDC mounting bracket to the right front inner fender. Tighten the screws to 3.9 N·m (35 in. lbs.).

(3) Install the PDC onto the PDC bracket (Refer to 8 - ELECTRICAL/POWER DISTRIBUTION/POWER DISTRIBUTION CENTER - INSTALLATION).

(4) Reconnect the battery negative cable.

POWER OUTLET

DESCRIPTION

An instrument panel power outlet is standard factory installed equipment on this model. The power outlet is installed in the instrument panel accessory switch bezel, which is located near the bottom of the center bezel area below the heater and air conditioning controls. The power outlet base is secured by a snap fit within the instrument panel. A plastic protective cap snaps into the power outlet base when the power outlet is not being used, and hangs from the power outlet base mount by an integral bail strap while the power outlet is in use.

The power outlet receptacle unit and the accessory power outlet protective cap are available for service. The power outlet receptacle cannot be repaired and, if faulty or damaged, it must be replaced.

OPERATION

The power outlet base or receptacle shell is connected to ground, and an insulated contact in the bottom of the shell is connected to battery current. The power outlet receives battery voltage from a fuse in the Power Distribution Center at all times.

While the power outlet is very similar to a cigar lighter base unit, it does not include the two small spring-clip retainers inside the bottom of the receptacle shell that are used to secure the cigar lighter heating element to the insulated contact.

DIAGNOSIS AND TESTING - POWER OUTLET

For complete circuit diagrams, refer to **Power Outlet** in Wiring Diagrams.

(1) Check the fused B(+) fuse in the Power Distribution Center. If OK, go to Step 2. If not OK, repair the shorted circuit or component as required and replace the faulty fuse.

(2) Check for battery voltage at the fused B(+) fuse in the Power Distribution Center. If OK, go to Step 3. If not OK, repair the open fused B(+) circuit to the battery as required.

(3) Remove the plastic protective cap from the power outlet receptacle. Check for continuity between the inside circumference of the power outlet receptacle and a good ground. There should be continuity. If OK, go to Step 4. If not OK, go to Step 5.

(4) Check for battery voltage at the insulated contact located at the back of the power outlet receptacle. If not OK, go to Step 5.