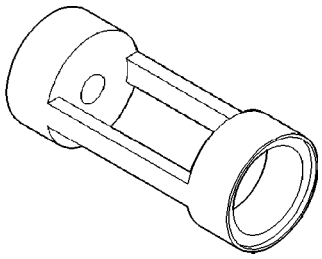

Valve Spring Compressor Adapter 6779

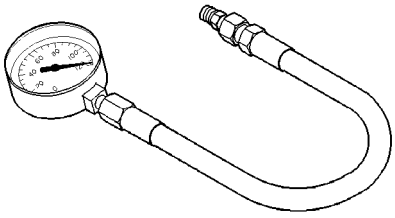

Oil Pressure Gauge C-3292

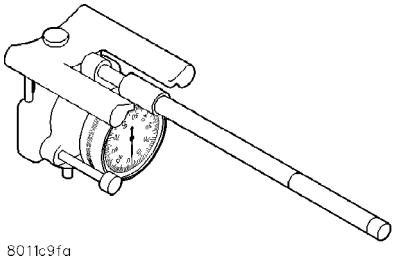

Cylinder Bore Gage C-119

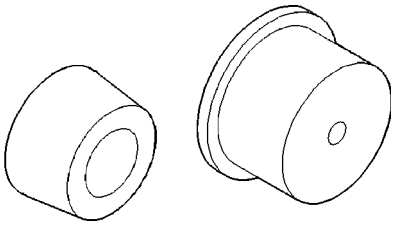

Rear Crankshaft Seal Guide and Installer 6926-1 and 6926-2

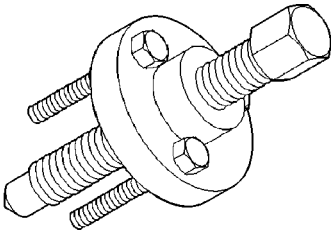

Crankshaft Sprocket Remover 6793

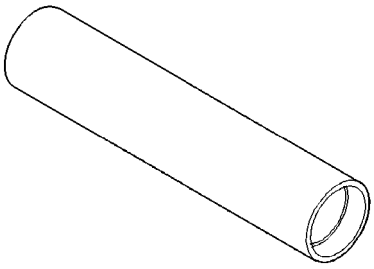

Balance Shaft Sprocket Installer 6052

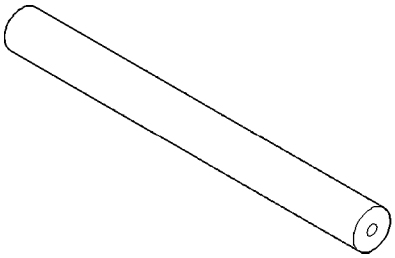

Crankshaft Sprocket Remover Insert C-4685-C2

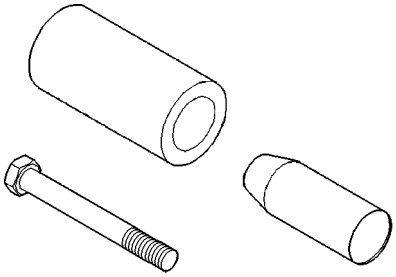

Front Crankshaft Oil Seal Installer 6780

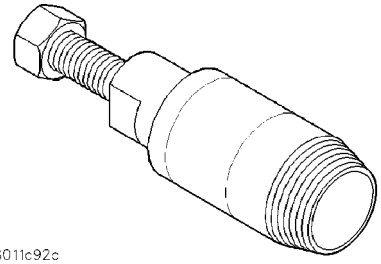

Crankshaft Seal Remover 6771