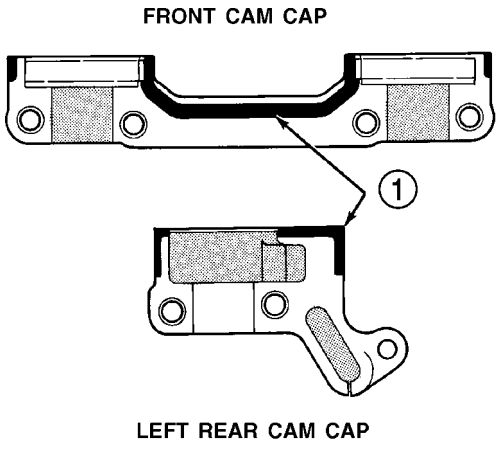

Fig. 23 Camshaft Bearing Cap Sealing

1 - 1.5 mm (.060 in.) DIAMETER BEAD OF MOPAR GASKET MAKER

NOTE: Bearing end caps must be installed before seals can be installed.

(5) Install camshaft oil seals. (Refer to 9 - ENGINE/CYLINDER HEAD/CAMSHAFT OIL SEAL(S) - INSTALLATION)

(6) Install camshaft target magnet and camshaft position sensor.

(7) Install cylinder head cover. (Refer to 9 - ENGINE/CYLINDER HEAD/CYLINDER HEAD COVER(S) - INSTALLATION)

(8) Install timing belt rear cover and camshaft sprocket. (Refer to 9 - ENGINE/VALVE TIMING/ TIMING BELT / CHAIN COVER(S) - INSTALLATION)

(9) Install timing belt. (Refer to 9 - ENGINE/ VALVE TIMING/TIMING BELT/CHAIN AND SPROCKETS - INSTALLATION)

CYLINDER HEAD COVER

REMOVAL

(1) Remove intake manifold. (Refer to 9 - ENGINE/MANIFOLDS/INTAKE MANIFOLD - REMOVAL)

(2) Remove ignition coil and spark plug wires.

(3) Disconnect PCV and make-up air hoses from cylinder head cover.

(4) Remove cylinder head cover bolts.

(5) Remove cylinder head cover from cylinder head.

CLEANING

Clean cylinder head and cover mating surfaces using a suitable solvent.

INSPECTION

Using a straight edge, inspect cover rails for flatness.

INSTALLATION

NOTE: Replace spark plug well seals and bolt assemblies when installing a new cylinder head cover gasket.

(1) Install new cylinder head cover gaskets and spark plug well seals (Fig. 24).

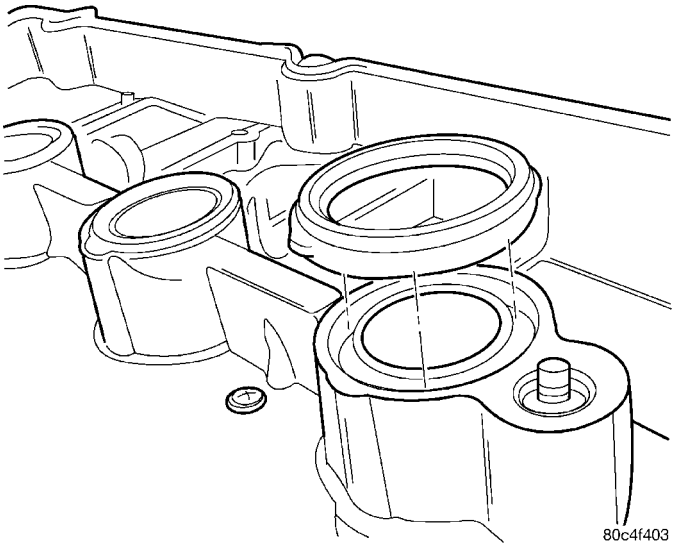

Fig. 24 Spark Plug Well Seals

(2) Replace cylinder head cover bolt assemblies (Fig. 25).

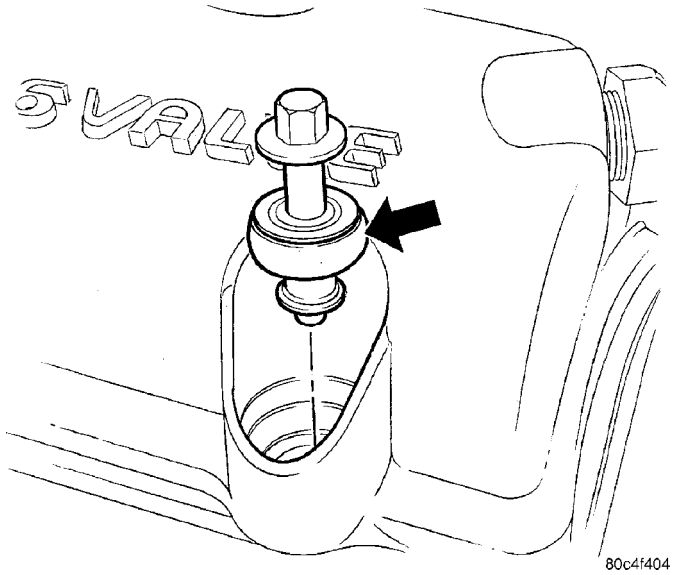

Fig. 25 Cylinder Head Cover Bolt Assembly

CAUTION: Do not allow oil or solvents to contact the timing belt as they can deteriorate the rubber and cause tooth skipping.

(3) Apply Mopar® Engine RTV GEN II at the camshaft cap corners and at the top edges of the 1/2 round seal (Fig. 26).