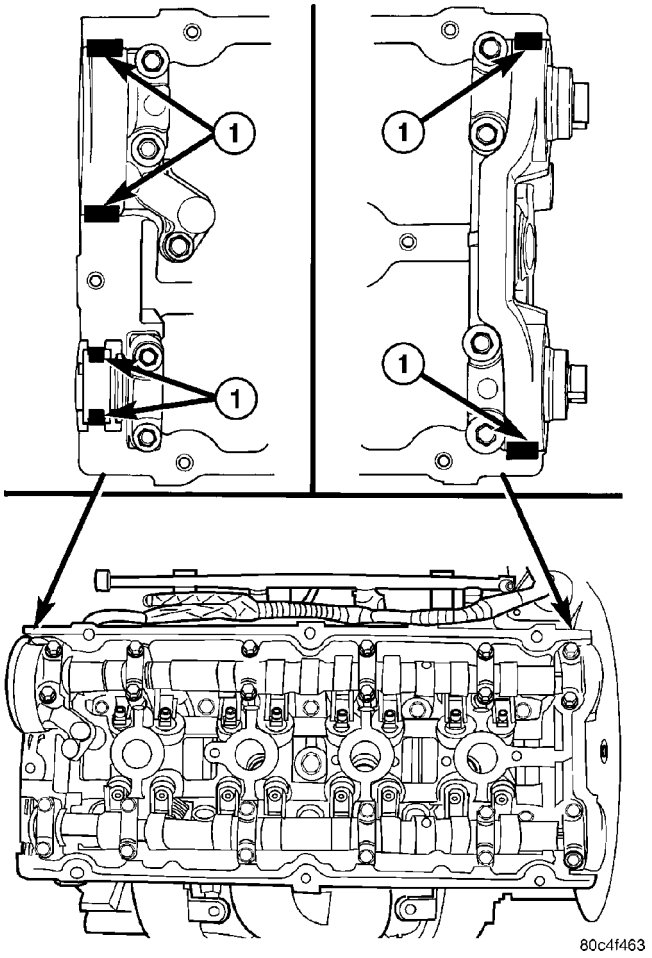

Fig. 26 Sealer Locations - Typical

1 – SEALER LOCATION

(4) Install cylinder head cover assembly to cylinder head. Install all bolts, ensuring the two (2) bolts containing the sealing washer are located in the center locations of cover. Tighten bolts in sequence shown in (Fig. 27). Using a 3 step torque method as follows:

(a) Tighten all bolts to 4.5 N·m (40 in. lbs.).
(b) Tighten all bolts to 9.0 N·m (80 in. lbs.).
(c) Tighten all bolts to 12 N·m (105 in. lbs.).

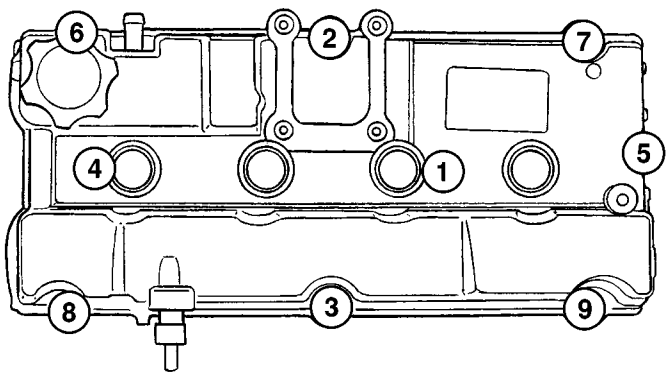

Fig. 27 CYLINDER HEAD TIGHTENING SEQUENCE

(5) Install intake manifold.

(6) Install ignition coil and spark plug wires. Tighten fasteners to 12 N·m (105 in. lbs.).

(7) If the PCV valve was removed, apply Mopar® Thread Sealant with Teflon to threads and install valve to cylinder head cover. Tighten PCV valve to 8 N·m (70 in. lbs.).

(8) Connect PCV and make-up air hoses to cylinder head cover.

INTAKE / EXHAUST VALVES & SEATS

DESCRIPTION

The four valves per cylinder are opened by using roller rocker arms which pivot on hydraulic lash adjusters. The valves have chrome plated valve stems. Viton rubber valve stem seals are integral with the spring seats. They have chrome plated stems to prevent scuffing. Viton rubber valve stem seals are integral with the spring seats. The valves, spring retainers,and locks, are the 3 - bead lock design

CLEANING

(1) Clean all valves thoroughly and discard burned, warped and cracked valves.