NOTE: The rod bearing bolts should not be reused.

(2) Before installing the **NEW** bolts the threads should be oiled with clean engine oil.

(3) Install each bolt finger tight then alternately torque each bolt to assemble the cap properly.

(4) Tighten the bolts to 27 N·m PLUS 1/4 turn (20 ft. lbs. PLUS 1/4 turn) **Do not use a torque wrench for last step.**

(5) Using a feeler gauge, check connecting rod side clearance (Fig. 40). Refer to clearance specifications (Refer to 9 - ENGINE - SPECIFICATIONS).

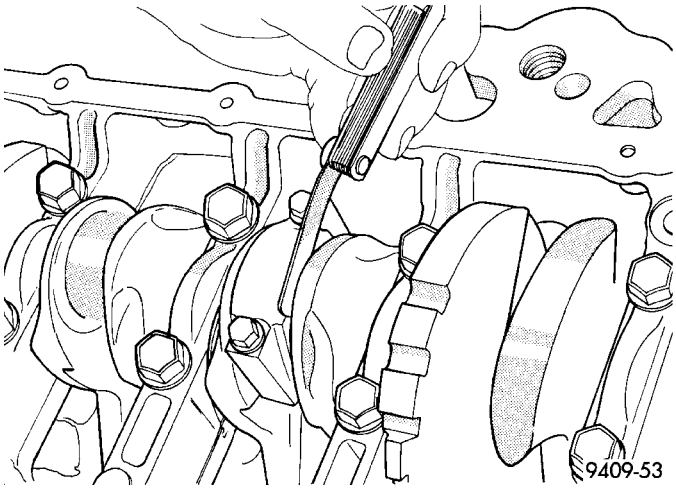

Fig. 40 Connecting Rod Side Clearance

CRANKSHAFT

DESCRIPTION

The crankshaft is made of nodular cast iron and includes five main bearing journals and four connecting rod journals (Fig. 41). The number three journal is the location for the thrust bearing. The mains and connecting rod journals have undercut fillet radiuses that are rolled for added strength. To optimize bearing loading, eight counterweights are used.

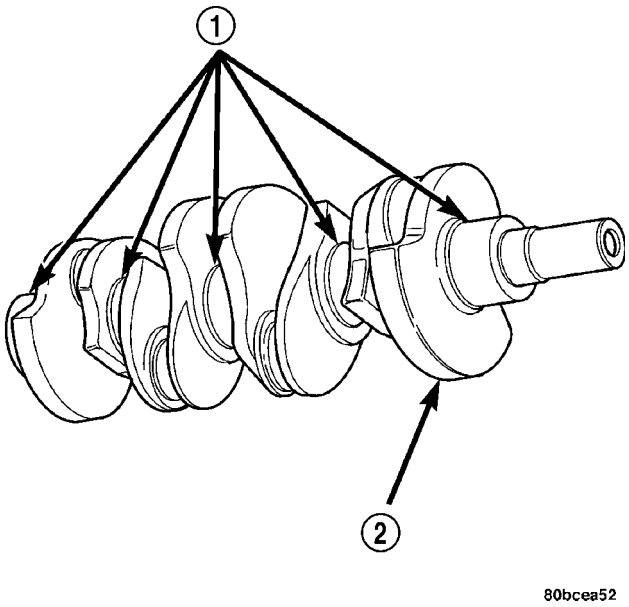

Fig. 41 Crankshaft - Typical

1 - MAIN BEARING JOURNALS
2 - COUNTER BALANCE WEIGHTS

OPERATION

The crankshaft transfers force generated by combustion within the cylinder to the flywheel or flexplate.

STANDARD PROCEDURE - CRANKSHAFT END PLAY

(1) Using Dial Indicator C-3339 and Mounting Post L-4438, attach to front of engine, locating probe perpendicular on nose of crankshaft (Fig. 42).

(2) Move crankshaft all the way to the rear of its travel.

(3) Zero the dial indicator.

(4) Move crankshaft all the way to the front and read the dial indicator. Refer to Engine Specifications.

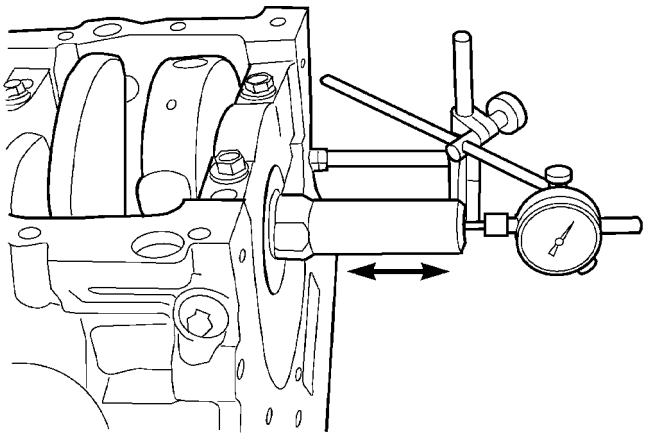

Fig. 42 CHECKING CRANKSHAFT END PLAY