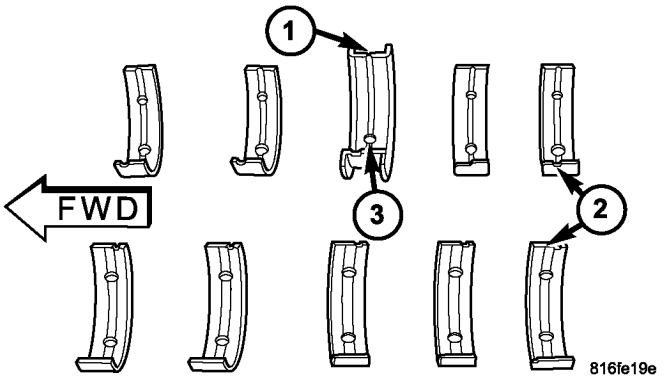

Fig. 50 Main Bearing ID

1 - Oil Groove
2 - Main Bearings
3 - Oil Hole

MAIN BEARING INSTALLATION

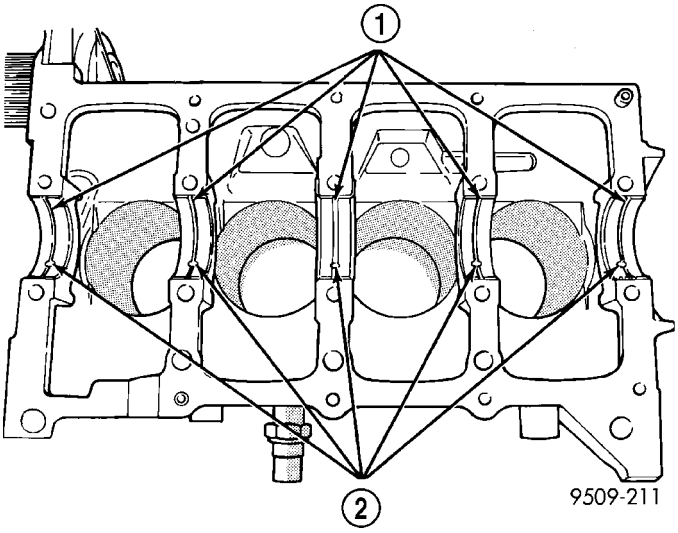

Fig. 51 Installing Main Bearing Upper Shell

1 - LUBRICATION GROOVES
2 - OIL HOLES

(1) Install the main bearing shells with the lubrication groove in the cylinder block (Fig. 51).

(2) Make certain oil holes in block line up with oil holes in bearings. Bearing tabs must seat in the block tab slots.

CAUTION: Do not get oil on the bedplate mating surface. It will may effect the sealer ability to seal the bedplate to cylinder block.

(3) Oil the bearings and journals and install crankshaft.

CAUTION: Use only the specified anaerobic sealer on the bedplate or damage may occur to the engine. Ensure that both cylinder block and bedplate surfaces are clean.

(4) Apply 1.5 to 2.0 mm (0.059 to 0.078 in.) bead of anaerobic sealer Mopar® Bed Plate Sealant to cylinder block as shown in (Fig. 52).

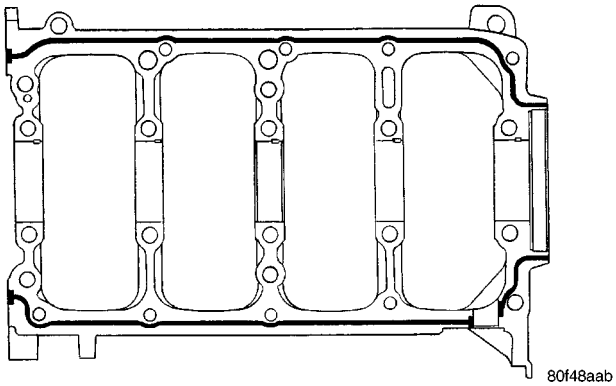

Fig. 52 Bed plate Sealing

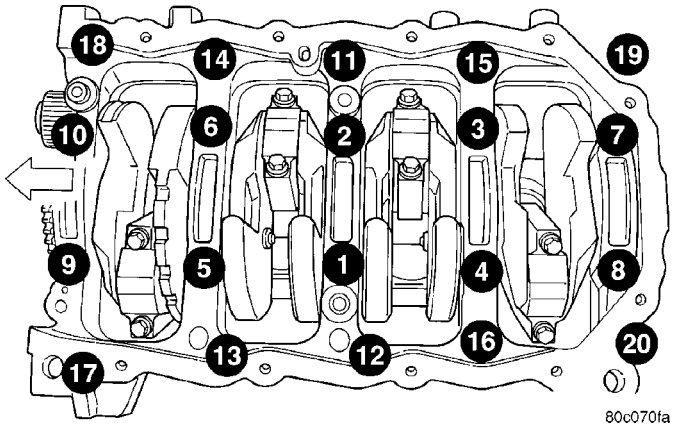

Fig. 53 Main Bearing Caps/Bedplate Tightening Sequence

(5) Install lower main bearings into main bearing cap/bedplate. Make certain the bearing tabs are seated into the bedplate slots.

(6) Position the main bearing/bedplate onto the engine block.

(7) Before installing bolts, lubricate the threads with clean engine oil, wipe off any excess oil.

(8) Install main bearing bedplate to engine block bolts 11, 17 and 20 finger tight. Tighten these bolts down together until the bedplate contacts the cylinder block.

(9) To ensure correct thrust bearing alignment, perform the following steps:

- Step 1: Rotate crankshaft until number 4 piston is at TDC.