INSTALLATION

CAUTION: Torque procedure for the structural collar must be followed or damage could occur to oil pan and collar.

(1) Perform the following steps for installing structural collar.

- Step 1: Position collar between transmission and oil pan. Install collar to transmission bolts, **hand start only**.
- Step 2: Install collar to oil pan bolts, **hand snug only.**
- Step 3: Tighten collar to transmission bolts.
- Step 4: Tighten collar to oil pan bolts.

(2) Lower vehicle.

ENGINE MOUNTING

DESCRIPTION

The engine mounting system consist of three mounts; right and a left side support the powertrain, and rear mount to control powertrain torque. The mounts are of molded rubber material.

FRONT MOUNT

REMOVAL

(1) Raise vehicle on hoist.

(2) Remove the front engine mount through bolt from the insulator.

(3) Remove the engine front mount bolts and remove the insulator assembly.

(4) Remove the front mounting bracket from engine, if necessary.

INSTALLATION

(1) Install the insulator mount assembly (Fig. 76) and (Fig. 77).

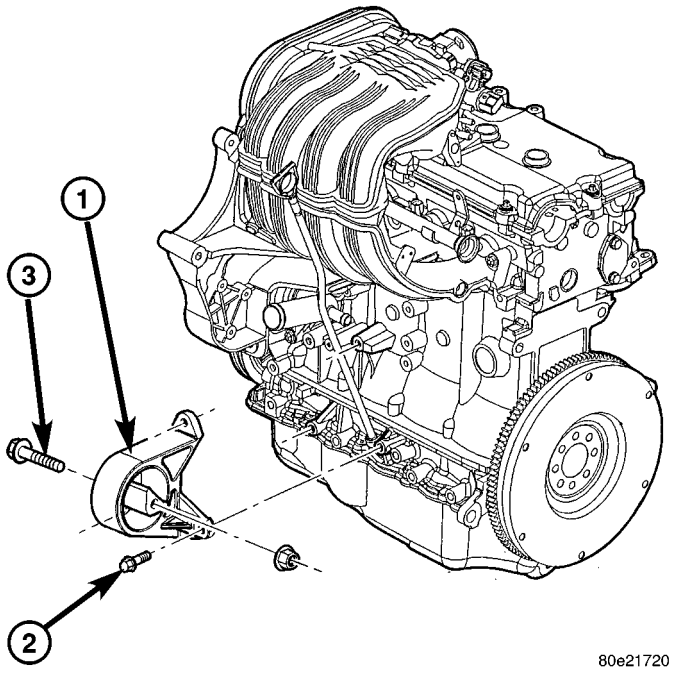


Fig. 76 LH ENGINE MOUNT

1 - ENGINE MOUNT
2 - ENGINE MOUNT BOLT (3)
3 - ENGINE MOUNT THROUGH BOLT

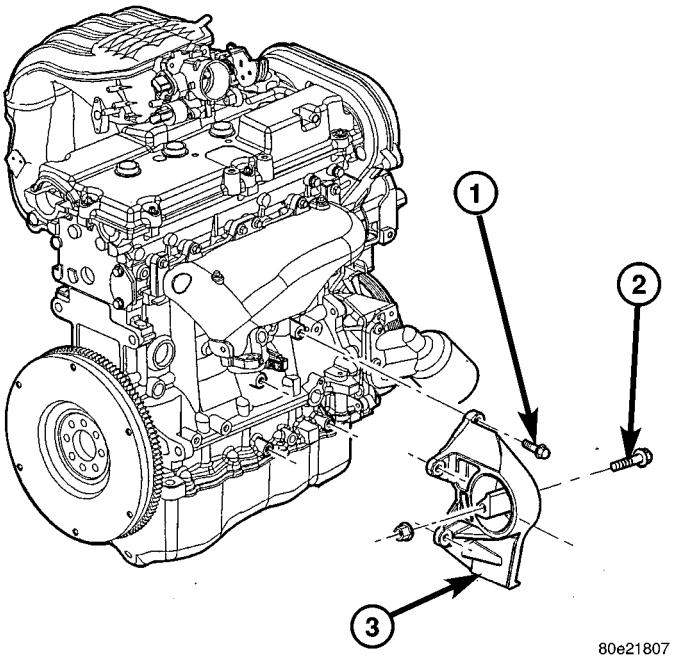


Fig. 77 RH ENGINE MOUNT

1 - ENGINE MOUNT BOLT (4)
2 - ENGINE MOUNT THROUGH BOLT
3 - ENGINE MOUNT

(2) Tighten the mount to engine bolts.

(3) Loosely install the front engine mount through bolt to the insulator.

(4) Lower the engine.