NOTE: Care should be exercised when disposing used engine oil after it has been drained from a vehicle engine. Refer to the WARNING listed above.

OIL FILTER

DESCRIPTION

The engine oil filter is a high quality full-flow, disposable type. Replace the oil filter with a Mopar® or the equivalent.

REMOVAL

(1) Raise vehicle on hoist.

(2) Position an oil collecting container under oil filter location.

CAUTION: When servicing the oil filter avoid deforming the filter can by installing the remove/install tool band strap against the can to base lock seam. The lock seam joining the can to the base is reinforced by the base plate.

(3) Using a suitable filter wrench, turn oil filter counterclockwise to remove (Fig. 81).

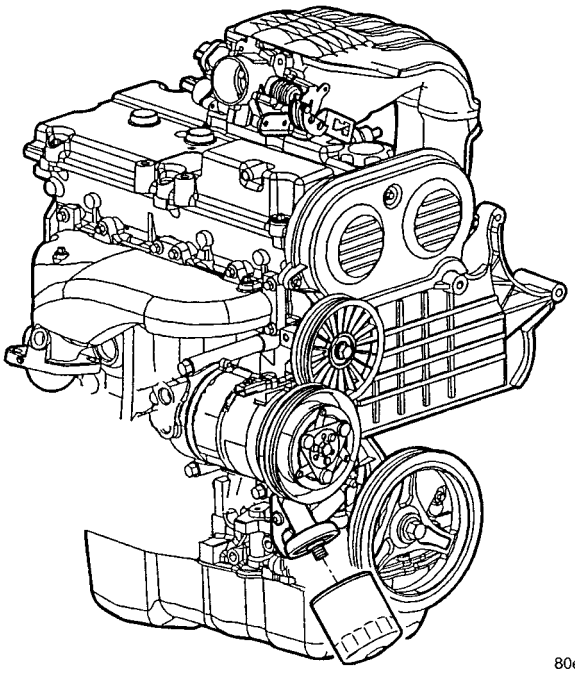

Fig. 81 2.4 OIL FILTER

INSTALLATION

(1) Clean and check filter mounting surface. The surface must be smooth, flat and free of debris or pieces of gasket.

(2) Lubricate new oil filter gasket with clean engine oil.

(3) Screw oil filter on until the gasket contacts base. Tighten to 21 N·m (15 ft. lbs.).

OIL PAN

REMOVAL

(1) Remove air cleaner assembly.

(2) Raise vehicle on hoist and drain engine oil.

(3) Loosen the engine mount thru bolts.

(4) Disconnect exhaust pipe at manifold.

(5) Remove structural collar, if equipped.

(6) Remove front axle mounting bolts, and lower axle as far possible, if equipped.

(7) Position Special Tool 8534 on fender lip and align the slots in the brackets with the fender mounting holes.

(8) Secure brackets to the fender using four M6 X 1.0 X 25 MM flanged cap screws.

(9) Tighten the thumbscrews to secure the sleeves to the support tube.

(10) Secure the support tube in an upright position.

(11) Assemble the flat washer, thrust bearing, hook and T handle.

(12) Using the M10 X 1.5 X 40 mm capscrew supplied with the support fixture, secure the chain to the front cover and the hook.

(13) Support engine as needed.

(14) Remove oil pan attaching bolts.

(15) Remove oil pan.

(16) Clean oil pan and all gasket surfaces.

INSTALLATION

(1) Install the oil pan gasket to the block.

(2) Apply a 3MM (1/8 inch) bead of Mopar® Engine RTV at the oil pump to engine block parting line (Fig. 82).