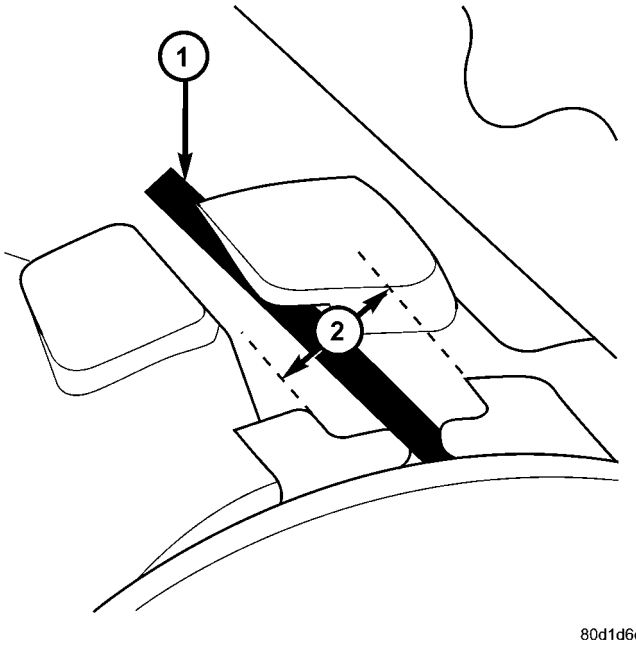


***Fig. 105 Timing Belt Tension Verification***

1 - SPRING TANG
2 - TOLERANCE WINDOW

(9) Install timing belt front covers and bolts. (Refer to 9 - ENGINE/VALVE TIMING/TIMING BELT / CHAIN COVER(S) - INSTALLATION)

(10) Install air conditioning/generator belt tensioner and pulley. (Refer to 7 - COOLING/ACCESSORY DRIVE/BELT TENSIONERS - INSTALLATION)

(11) Install crankshaft vibration damper. (Refer to 9 - ENGINE/ENGINE BLOCK/VIBRATION DAMPER - INSTALLATION)

(12) Install accessory drive belts. (Refer to 7 - COOLING/ACCESSORY DRIVE/DRIVE BELTS - INSTALLATION)

(13) Install drive belt splash shield.

(14) Install air cleaner housing, upper cover, and clean air tube.

# TIMING BELT TENSIONER & PULLEY

## REMOVAL

(1) Remove the timing belt. (Refer to 9 - ENGINE/VALVE TIMING/TIMING BELT/CHAIN AND SPROCKETS - REMOVAL)

(2) Remove timing belt idler pulley.

(3) Hold camshaft sprocket with Special Tool 6847 while removing bolt (Fig. 106). Remove both cam sprockets.

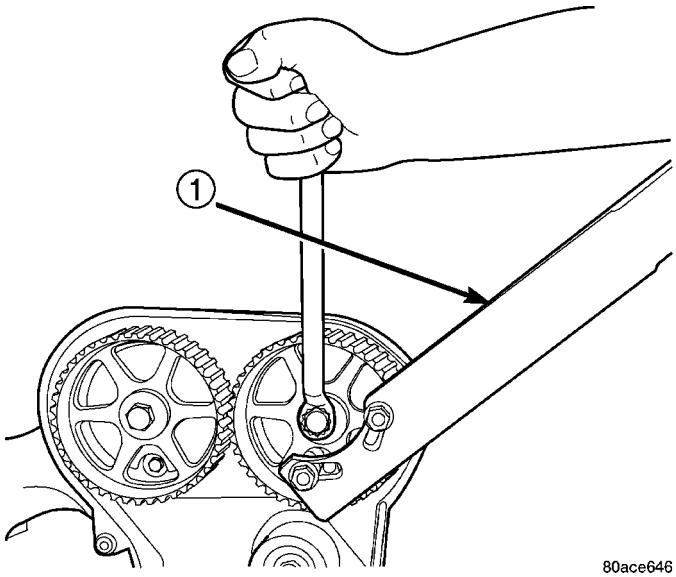


***Fig. 106 Camshaft Sprocket - Removal/Installation***

1 - SPECIAL TOOL 6847

(4) Remove rear timing belt cover fasteners and remove cover from engine (Fig. 107).

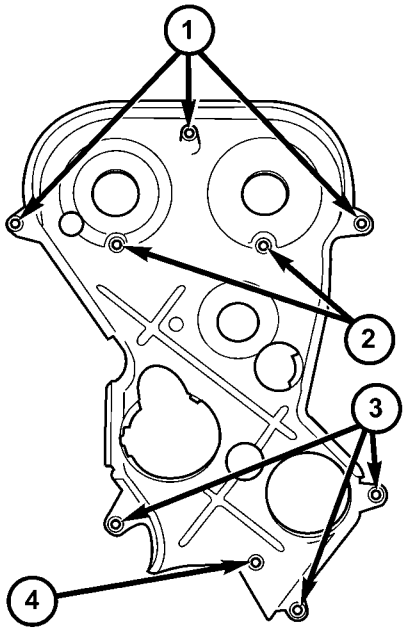


***Fig. 107 TIMING BELT REAR COVER FASTENERS***

1 - OUTER COVER TO REAR COVER FASTENERS (3)
2 - REAR COVER TO CYLINDER HEAD FASTENERS
3 - OUTER COVER TO REAR COVER FASTENERS (3)
4 - INNER COVER TO BLOCK FASTENERS

(5) Remove lower bolt attaching timing belt tensioner assembly to engine and remove tensioner **as an assembly**.

## INSTALLATION

(1) Align timing belt tensioner assembly to engine and install lower mounting bolt **but do not tighten**. To properly align tensioner assembly—install one of