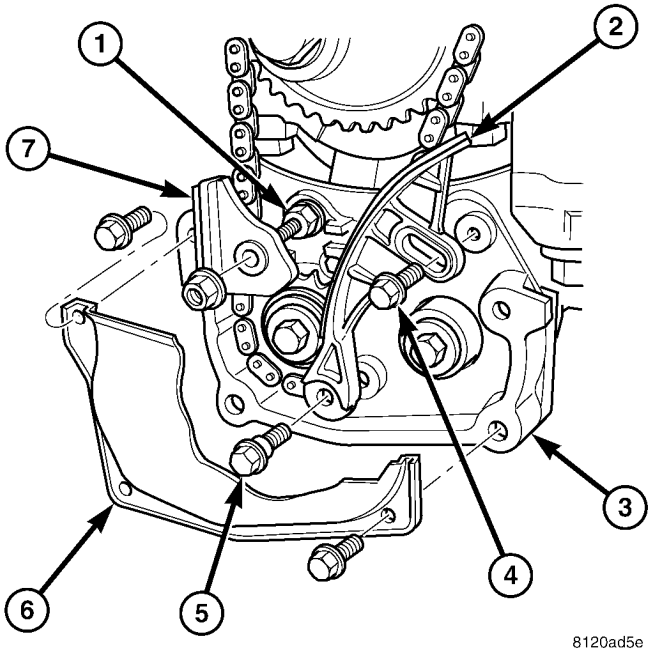


Fig. 109 Chain Cover, Guide and Tensioner

1 - STUD
2 - TENSIONER (ADJUSTER)
3 - GEAR COVER
4 - ADJUSTER SCREW
5 - SHOULDERED PIVOT SCREW
6 - CHAIN COVER (CUTAWAY)
7 - GUIDE

(4) Remove chain cover, guide and tensioner. Discard pivot screw and adjuster screw. (Fig. 109).

(5) Remove screw retaining balance shaft drive sprocket (Fig. 110). Remove chain and sprocket.

(6) Using two wide pry bars, work the crankshaft sprocket back and forth until it is off the crankshaft-shaft.

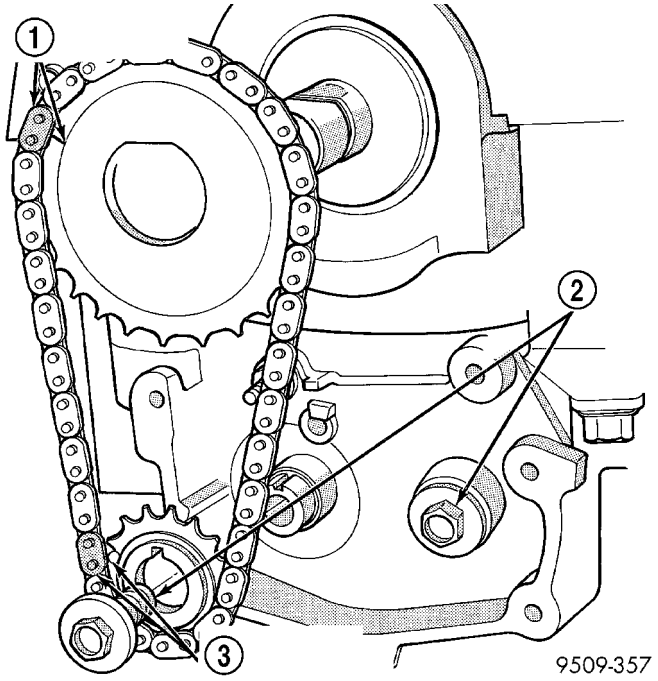


Fig. 110 Drive Chain and Sprockets

1 - NICKEL PLATED LINK AND MARK
2 - GEAR/SPROCKET SCREWS
3 - NICKEL PLATED LINK AND DOT

(7) Remove gear cover retaining stud (double ended to also retain chain guide). Remove cover and balance shaft gears (Fig. 111).

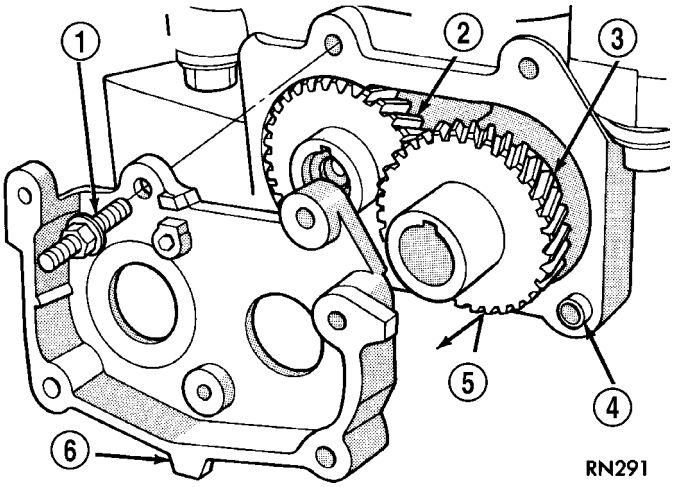


Fig. 111 Gear Cover and Gears

1 - STUD (DOUBLE ENDED)
2 - DRIVE GEAR
3 - DRIVEN GEAR
4 - CARRIER DOWEL
5 - GEAR(S)
6 - GEAR COVER