(6) Test fuel pump for pressure. (Refer to 14 - FUEL SYSTEM/FUEL DELIVERY/FUEL PUMP - DIAGNOSIS AND TESTING).

(7) The air filter elements should be replaced as specified.

(8) Inspect crankcase ventilation system.

(9) Road test vehicle as a final test.

STANDARD PROCEDURE - BELLHOUSING SEALANT APPLICATION

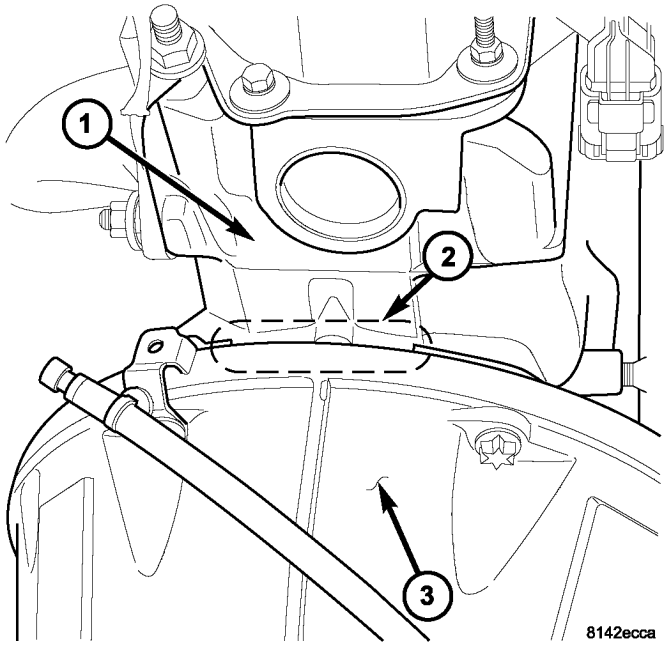

Fig. 4 LOCATION OF ADAPTER OPENING

1 - BACK OF ENGINE
2 - LOCATION OF NARROW OPENING DUE TO SLOT IN ADAPTER PLATE
3 - TOP OF BELLHOUSING - MANUAL TRANSMISSION

(1) With the ignition switch in the off position, raise the vehicle hood and make sure the engine and exhaust manifold are not hot to the touch.

(2) Locate the narrow opening created by the adapter plate (2). The adapter opening can be viewed when looking towards the rear of the engine and top of the transmission bellhousing from the drivers side of the engine (Fig. 4).

(3) Thoroughly clean the immediate area around the adapter opening (2) with throttle body cleaner. Allow cleaner to dry.

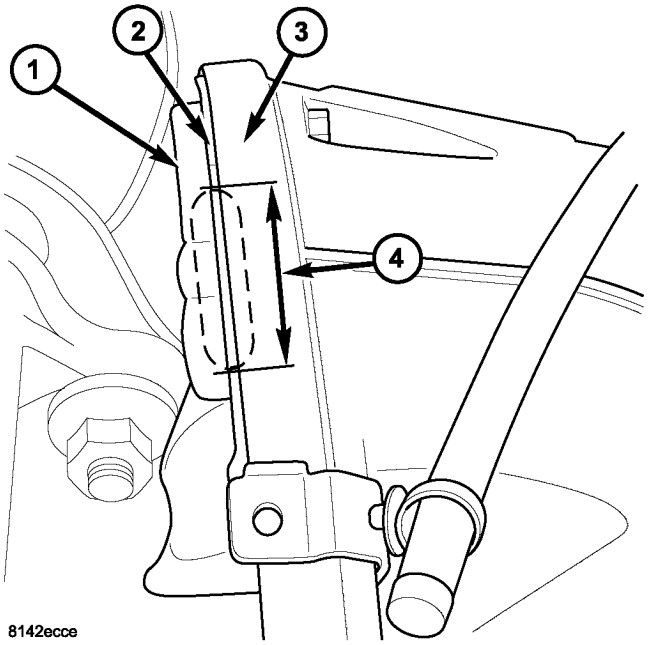

Fig. 5 ADAPTER OPENING DETAIL

1 - BACK OF ENGINE
2 - ADAPTER PLATE
3 - BELLHOUSING - MANUAL TRANSMISSION
4 - ADAPTER PLATE OPENING - APPLY SEALER HERE

(4) With your finger, apply a sufficient amount of RTV over the spacer opening (4). Verify that the adapter (2) opening (4) is completely sealed off by the RTV (Fig. 5).

(5) Lower and secure vehicle hood.

REMOVAL

(1) Disconnect the battery negative cable.

(2) Mark the hinge locations on the hood panel for alignment reference during installation. Remove the engine compartment lamp. Remove the hood.

(3) Drain engine coolant (Refer to 7 - COOLING - STANDARD PROCEDURE), drain the coolant into a clean container for reuse.

(4) Remove the upper radiator hose and coolant recovery hose (Fig. 6).

(5) Remove the lower radiator hose.

(6) Remove upper radiator support retaining bolts and remove radiator support.

(7) Remove the fan assembly from the water pump (Refer to 7 - COOLING/ENGINE/FAN DRIVE VISCOUS CLUTCH - REMOVAL).

(8) Remove the fan shroud (Fig. 6).

(9) Disconnect the transmission fluid cooler lines (automatic transmission).

(10) Discharge the A/C system (Refer to 24 - HEATING & AIR CONDITIONING/PLUMBING - STANDARD PROCEDURE).

(11) Remove the service valves and cap the compressor ports.