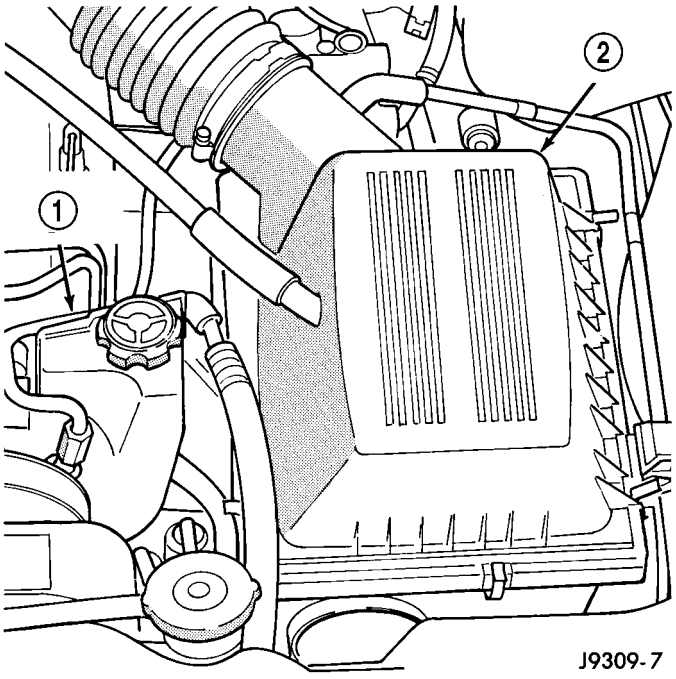

Fig. 8 Air Cleaner Assembly & Power Steering Pump

1 - POWER STEERING PUMP
2 - AIR CLEANER ASSEMBLY

(26) Raise and support the vehicle.

(27) Disconnect the wires from the engine starter motor solenoid.

(28) Remove the engine starter motor (Refer to 8 - ELECTRICAL/STARTING/STARTER MOTOR - REMOVAL).

(29) Disconnect the oxygen sensor from the exhaust pipe.

(30) Disconnect the exhaust pipe from the manifold.

(31) Remove the exhaust pipe support.

(32) Remove the bending brace (Refer to 9 - ENGINE/ENGINE BLOCK/WINDAGE TRAY / STRUCT SUPPORT - REMOVAL).

(33) Remove the engine flywheel/converter housing access cover.

(34) Mark the converter and drive plate location.

(35) Remove the converter-to-drive plate bolts.

(36) Remove the upper engine flywheel/converter housing bolts and loosen the bottom bolts.

(37) Remove the engine mount cushion-to-engine compartment bracket bolts.

(38) Lower the vehicle.

(39) Attach a lifting device to the engine.

(40) Raise the engine off the front supports.

(41) Place a support or floor jack under the converter (or engine flywheel) housing.

(42) Remove the remaining converter (or engine flywheel) housing bolts.

(43) Lift the engine out of the engine compartment.

INSTALLATION

CAUTION: When installing the engine into a vehicle equipped with an automatic transmission, be careful not to damage the trigger wheel on the engine flywheel.

(1) Attach a lifting device to the engine and lower the engine into the engine compartment. For easier installation, it may be necessary to remove the engine mount bracket as an aid in alignment of the engine to the transmission.

(2) Align the transmission torque converter housing with the engine.

(3) Loosely install the converter housing lower bolts and install the next higher bolt and nut on each side.

(4) Tighten all 4 bolts finger tight.

(5) Install the engine mount brackets (if removed).

(6) Lower the engine and engine mount brackets onto the engine compartment cushions. Install the bolts and finger tighten the nuts.

(7) Remove the engine lifting device.

(8) Raise and support the vehicle.

(9) Install the remaining engine flywheel/converter housing bolts. Tighten all bolts to 38 N·m (28 ft. lbs.) torque.

(10) Install the converter-to-drive plate bolts.

(11) Ensure the installation reference marks are aligned.

(12) Install the engine flywheel/converter housing access cover.

(13) **For manual transmissions only.** Apply Mopar® RTV sealant in the opening at the top of the bellhousing, created by the adapter plate. (Refer to 9 - ENGINE - STANDARD PROCEDURE).

(14) Install the exhaust pipe support and tighten the screw.

(15) Install the engine bending brace (Refer to 9 - ENGINE/ENGINE BLOCK/WINDAGE TRAY / STRUCT SUPPORT - INSTALLATION).

(16) Tighten the engine mount-to-bracket bolts.

(17) Connect the vehicle speed sensor wire connections and tighten the screws.

(18) Connect the exhaust pipe to the manifold.

(19) Install the engine starter motor (Refer to 8 - ELECTRICAL/STARTING/STARTER MOTOR - INSTALLATION).

(20) Connect the wires to the engine starter motor solenoid.

(21) Lower the vehicle.

(22) Connect vacuum hoses and wire connectors disconnected during engine removal.

(23) Remove protective caps from the power steering hoses.

(24) Connect the hoses to the fittings at the steering gear. Tighten the nut to 52 N·m (38 ft. lbs.) torque.