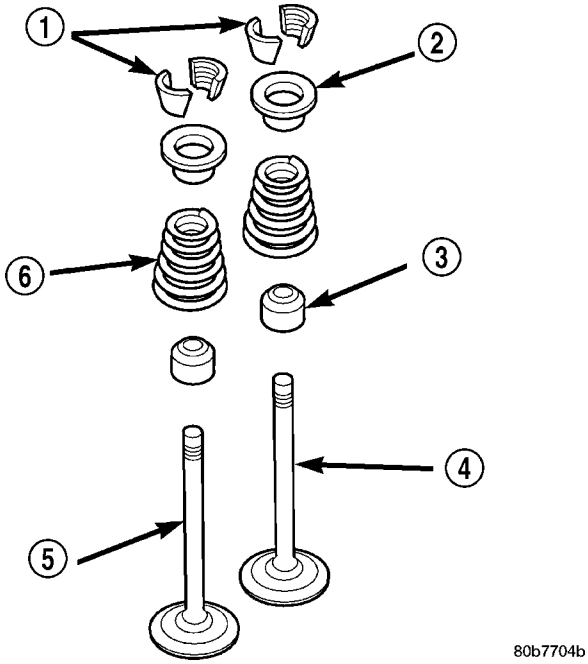

Fig. 23 Valve and Valve Components

1 - VALVE LOCKS (3–BEAD)
2 - RETAINER
3 - VALVE STEM OIL SEAL
4 - INTAKE VALVE
5 - EXHAUST VALVE
6 - VALVE SPRING

ROCKER ARM / ADJUSTER ASSEMBLY

DESCRIPTION

The rocker arms are made of stamped steel and have a operational ratio of 1.6:1 (Fig. 24).

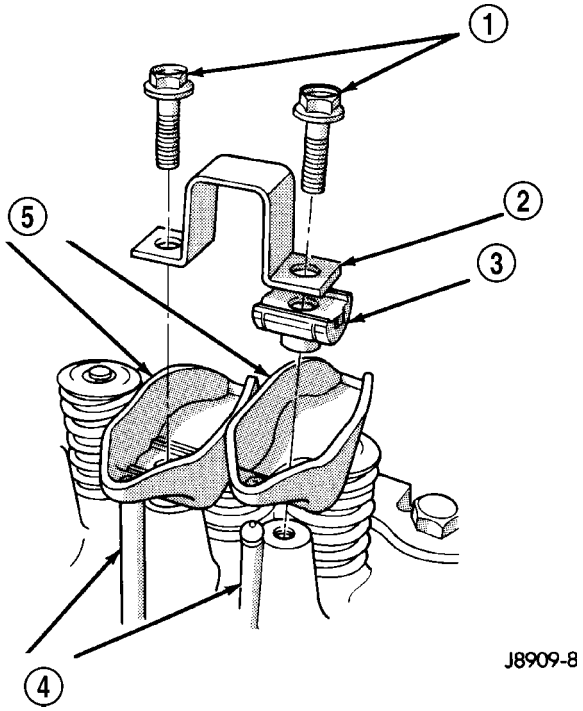

Fig. 24 Rocker Arms—Typical

1 - CAPSCREWS
2 - BRIDGE
3 - PIVOT ASSEMBLY
4 - PUSH RODS
5 - ROCKER ARMS

OPERATION

When the push rods are forced upward by the camshaft lobes the push rod presses upward on the rocker arms, the rocker arms pivot, forcing downward pressure on the valves forcing the valves to move downward and off from their seats.

REMOVAL

NOTE: This procedure can be done with the engine in or out of the vehicle.

(1) Remove the cylinder head cover (Refer to 9 - ENGINE/CYLINDER HEAD/CYLINDER HEAD COVER(S) - REMOVAL).

(2) Check for rocker arm bridges which are causing misalignment of the rocker arm to valve tip area.

(3) Remove the capscrews at each bridge and pivot assembly (Fig. 25). Alternately loosen the capscrews one turn at a time to avoid damaging the bridges.

(4) Remove the bridges, pivots and corresponding pairs of rocker arms (Fig. 25). Place them on a bench in the same order as removed.

(5) Remove the push rods and place them on a bench in the same order as removed.