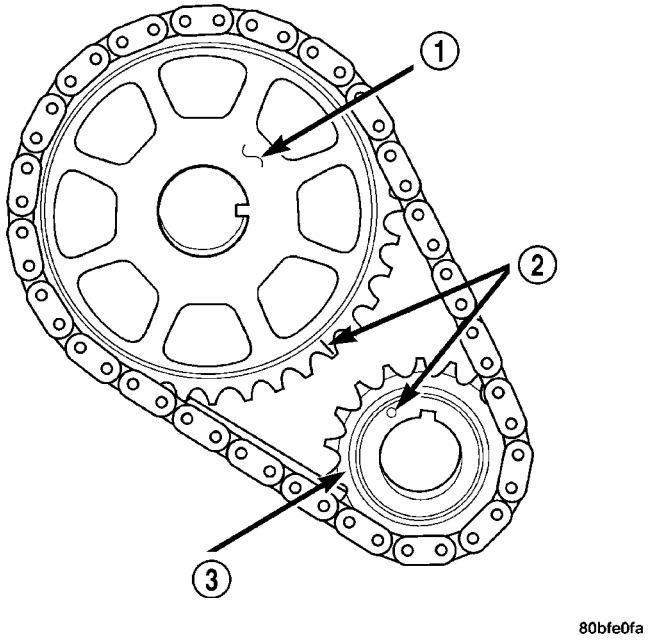

Fig. 36 Crankshaft / Camshaft Chain Drive Installation—Typical

1 - CAMSHAFT SPROCKET
2 - TIMING MARKS
3 - CRANKSHAFT SPROCKET

(8) Install the timing case cover with a replacement oil seal (Fig. 37). (Refer to 9 - ENGINE/VALVE TIMING/TIMING BELT / CHAIN COVER(S) - INSTALLATION).

(9) Install the vibration damper (Fig. 37) (Refer to 9 - ENGINE/ENGINE BLOCK/VIBRATION DAMPER - INSTALLATION).

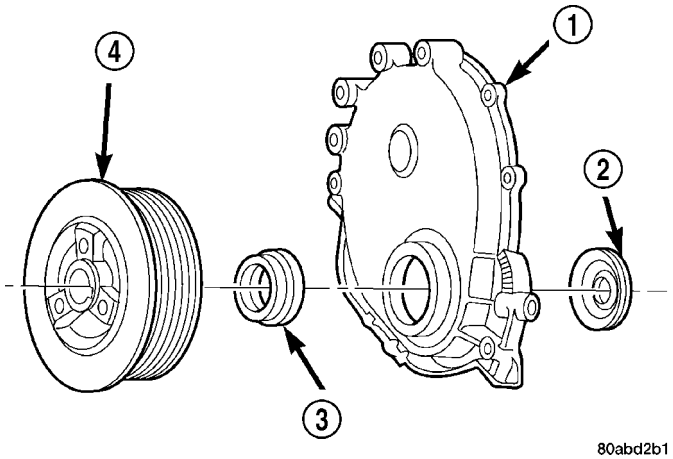

Fig. 37 Timing Case Cover Components

1 - TIMING CASE COVER
2 - OIL SLINGER
3 - CRANKSHAFT OIL SEAL
4 - VIBRATION DAMPER PULLEY

(10) Install the hydraulic valve tappets (Refer to 9 - ENGINE/ENGINE BLOCK/HYDRAULIC LIFTERS (CAM IN BLOCK) - INSTALLATION).

(11) Install the cylinder head gasket with the numbers facing up.

(12) Install the cylinder head (Refer to 9 - ENGINE/CYLINDER HEAD - INSTALLATION).

(13) Install the push rods.

(14) Install the rocker arms and pivot and bridge assemblies (Refer to 9 - ENGINE/CYLINDER HEAD/ROCKER ARM / ADJUSTER ASSY - INSTALLATION).

(15) Install the engine cylinder head cover (Refer to 9 - ENGINE/CYLINDER HEAD/CYLINDER HEAD COVER(S) - INSTALLATION).

(16) Install the serpentine drive belt (Refer to 7 - COOLING/ACCESSORY DRIVE/DRIVE BELTS - INSTALLATION).

NOTE: During installation, lubricate the hydraulic valve tappets and all valve components with Mopar® Engine Oil Supplement, or equivalent. The Mopar® Engine Oil Supplement, or equivalent must remain with the engine oil for at least 1609 km (1,000 miles). The oil supplement need not be drained until the next scheduled oil change.

(17) Install the radiator (Refer to 7 - COOLING/ENGINE/RADIATOR - INSTALLATION).

(18) Check the ignition timing and adjust as necessary.

(19) Install the grille and bumper, if removed.

(20) Connect negative cable to battery.

CONNECTING ROD BEARINGS

STANDARD PROCEDURE - FITTING CONNECTING ROD BEARINGS

Inspect the connecting rod bearings for scoring and bent alignment tabs (Fig. 38) (Fig. 39). Check the bearings for normal wear patterns, scoring, grooving, fatigue and pitting (Fig. 40). Replace any bearing that shows abnormal wear.

Inspect the connecting rod journals for signs of scoring, nicks and burrs.