(16) Lower the vehicle.
(17) Install the spark plugs. Tighten the plugs to 37 N·m (27 ft. lbs.) torque.
(18) Fill the oil pan with engine oil to the full mark on the dipstick level.
(19) Connect negative cable to battery.

CRANKSHAFT OIL SEAL - FRONT

REMOVAL

This procedure is done with the timing case cover installed.
(1) Disconnect negative cable from battery.
(2) Remove the serpentine drive belt (Refer to 7 - COOLING/ACCESSORY DRIVE/DRIVE BELTS - REMOVAL).
(3) Remove the vibration damper (Refer to 9 - ENGINE/ENGINE BLOCK/VIBRATION DAMPER - REMOVAL).
(4) Remove the radiator shroud.
(5) Carefully remove the oil seal. Make sure seal bore is clean.

INSTALLATION

This procedure is done with the timing case cover installed.
(1) Position the replacement oil seal on Timing Case Cover Alignment and Seal Installation Tool 6139 with seal open end facing inward. Apply a light film of Perfect Seal, or equivalent, on the outside diameter of the seal. Lightly coat the crankshaft with engine oil.
(2) Position the tool and seal over the end of the crankshaft and insert a draw screw tool into Seal Installation Tool 6139 (Fig. 53). Tighten the nut against the tool until it contacts the cover.

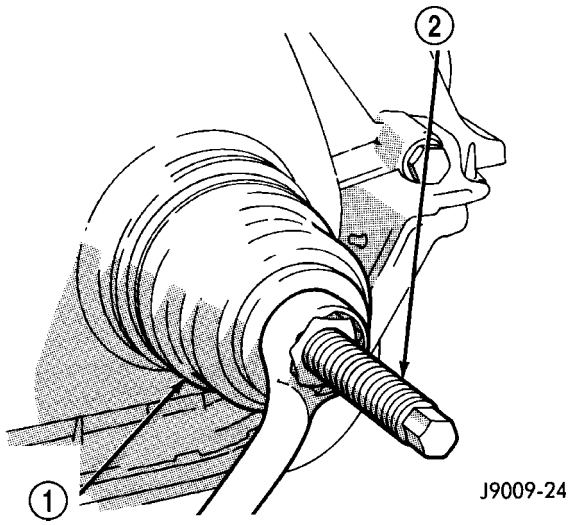

Fig. 53 Timing Case Cover Oil Seal Installation

1 - SEAL INSTALLATION TOOL
2 - DRAW SCREW TOOL

(3) Remove the tools. Apply a light film of engine oil on the vibration damper hub contact surface of the seal.
(4) Apply Mopar® Silicone Rubber Adhesive Sealant to the keyway in the crankshaft and insert the key. With the key inserted in the keyway in the crankshaft, install the vibration damper (Refer to 9 - ENGINE/ENGINE BLOCK/VIBRATION DAMPER - INSTALLATION).
(5) Install the serpentine belt (Refer to 7 - COOLING/ACCESSORY DRIVE/DRIVE BELTS - INSTALLATION).
(6) Install the radiator shroud.
(7) Connect negative cable to battery.

CRANKSHAFT OIL SEAL - REAR

REMOVAL

The crankshaft rear main bearing oil seal consists of two half pieces of viton with a single lip that effectively seals the rear of the crankshaft. Replace the upper and lower seal halves as a unit to ensure leak-free operation.
(1) Remove transmission inspection cover.
(2) Remove oil pan. (Refer to 9 - ENGINE/LUBRICATION/OIL PAN - REMOVAL)
(3) Remove main bearing cap brace.
(4) Remove rear main bearing cap (No.7).
(5) Push upper seal out of the groove. Ensure that the crankshaft and seal groove are not damaged.
(6) Remove lower half of the seal from the bearing cap.