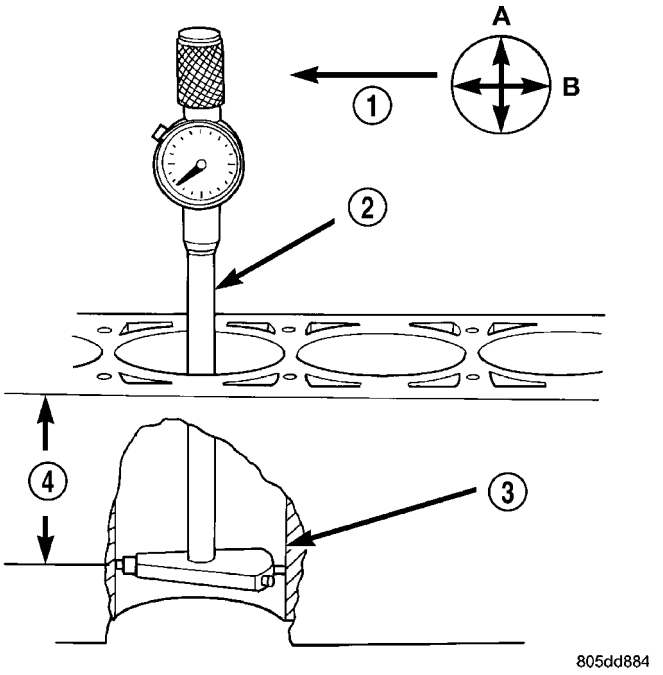

Fig. 60 Bore Gauge

1 - FRONT
2 - BORE GAUGE
3 - CYLINDER BORE
4 - 49.5 MM (1-15/16 in.)

REMOVAL

(1) Remove the engine cylinder head cover. (Refer to 9 - ENGINE/CYLINDER HEAD/CYLINDER HEAD COVER(S) - REMOVAL).

(2) Remove the rocker arms, bridges and pivots.

(3) Remove the push rods.

(4) Remove the engine cylinder head. (Refer to 9 - ENGINE/CYLINDER HEAD - REMOVAL).

(5) Position the pistons one at a time near the bottom of the stroke. Use a ridge reamer to remove the ridge from the top end of the cylinder walls. Use a protective cloth to collect the cuttings.

(6) Raise the vehicle.

(7) Drain the engine oil.

(8) Remove the oil pan and gasket. (Refer to 9 - ENGINE/LUBRICATION/OIL PAN - REMOVAL).

(9) Remove main bearing cap brace (Fig. 61).

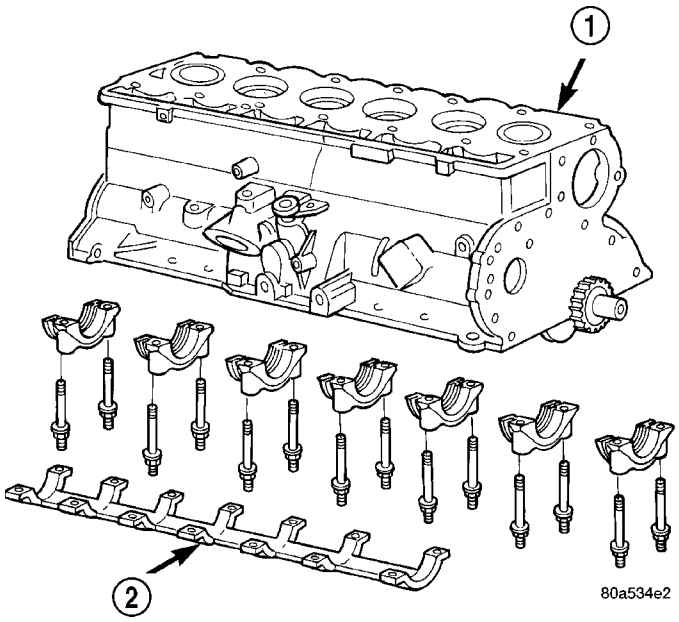

Fig. 61 Main Bearings Caps and Brace

1 - BLOCK
2 - MAIN BEARING CAP BRACE

(10) Remove the connecting rod bearing caps and inserts. Mark the caps and rods with the cylinder bore location. The connecting rods and caps are stamped with a two letter combination (Fig. 62).

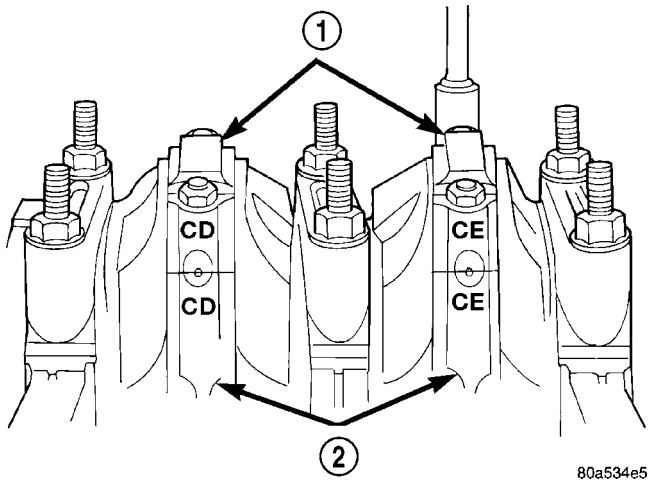

Fig. 62 Stamped Connecting Rods and Caps

1 - CONNECTING ROD CAP
2 - CONNECTING ROD

(11) Lower the vehicle until it is about 2 feet from the floor.

CAUTION: Ensure that the connecting rod bolts DO NOT scratch the crankshaft journals or cylinder walls. Short pieces of rubber hose, slipped over the rod bolts will provide protection during removal.

(12) Have an assistant push the piston and connecting rod assemblies up and through the top of the cylinder bores (Fig. 63).