USED ENGINE OIL DISPOSAL

Care should be exercised when disposing used engine oil after it has been drained from a vehicle engine. Refer to the WARNING at beginning of this procedure.

OIL FILTER

REMOVAL

CAUTION: Do not use oil filter with metric threads. The proper oil filter has SAE type 3/4 X 16 threads. An oil filter with metric threads can result in oil leaks and engine failure.

All Jeep engines are equipped with a high quality full-flow, throw-away type oil filter. DaimlerChrysler Corporation recommends a Mopar® or equivalent oil filter be used.

(1) Position a drain pan under the oil filter.
(2) Using a suitable oil filter wrench loosen filter.
(3) Rotate the oil filter counterclockwise to remove it from the cylinder block oil filter boss or filter adapter housing.
(4) When filter separates from adapter nipple, tip gasket end upward to minimize oil spill. Remove filter from vehicle.
(5) Make sure old gasket comes off with oil filter. With a wiping cloth, clean the gasket sealing surface of oil and grime.

INSTALLATION

(1) Lightly lubricate oil filter gasket with engine oil or chassis grease.
(2) Thread filter onto adapter nipple. When gasket makes contact with sealing surface, (Fig. 82) hand tighten filter one full turn, do not over tighten.
(3) Add oil, verify crankcase oil level and start engine. Inspect for oil leaks.

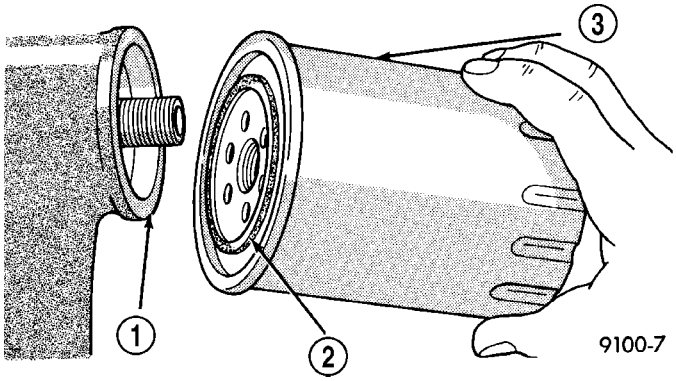

Fig. 82 Oil Filter Sealing Surface—Typical

1 - SEALING SURFACE
2 - RUBBER GASKET
3 - OIL FILTER

OIL PAN

DESCRIPTION

The oil pan is made of stamped steel. The oil pan gasket is a one piece steel backbone silicone coated gasket (Fig. 83).

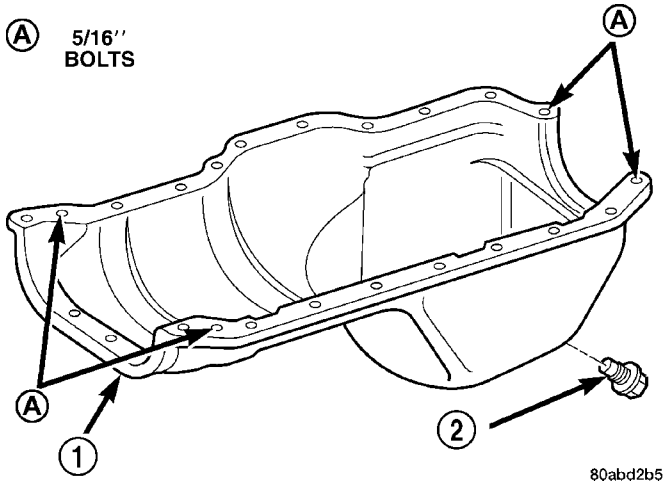

Fig. 83 Oil Pan

1 - OIL PAN
2 - OIL PAN DRAIN PLUG

REMOVAL

(1) Disconnect negative cable from battery.
(2) Raise the vehicle.
(3) Remove the oil pan drain plug and drain the engine oil.
(4) Disconnect the exhaust pipe at the exhaust manifold.
(5) Disconnect the exhaust hanger at the catalytic converter and lower the pipe.
(6) Remove the starter motor. (Refer to 8 - ELECTRICAL/STARTING/STARTER MOTOR - REMOVAL).
(7) Remove the engine flywheel and transmission torque converter housing access cover.
(8) If equipped with an oil level sensor, disconnect the sensor.
(9) Position a jack stand directly under the engine vibration damper.
(10) Place a piece of wood (2 x 2) between the jack stand and the engine vibration damper.
(11) Remove the engine mount through bolts.
(12) Using the jack stand, raise the engine until adequate clearance is obtained to remove the oil pan.
(13) Remove transmission oil cooling lines (if equipped) and oxygen sensor wiring supports that are attached to the oil pan studs.
(14) Remove the oil pan bolts and studs. Carefully slide the oil pan and gasket to the rear. If equipped with an oil level sensor, take care not to damage the sensor.