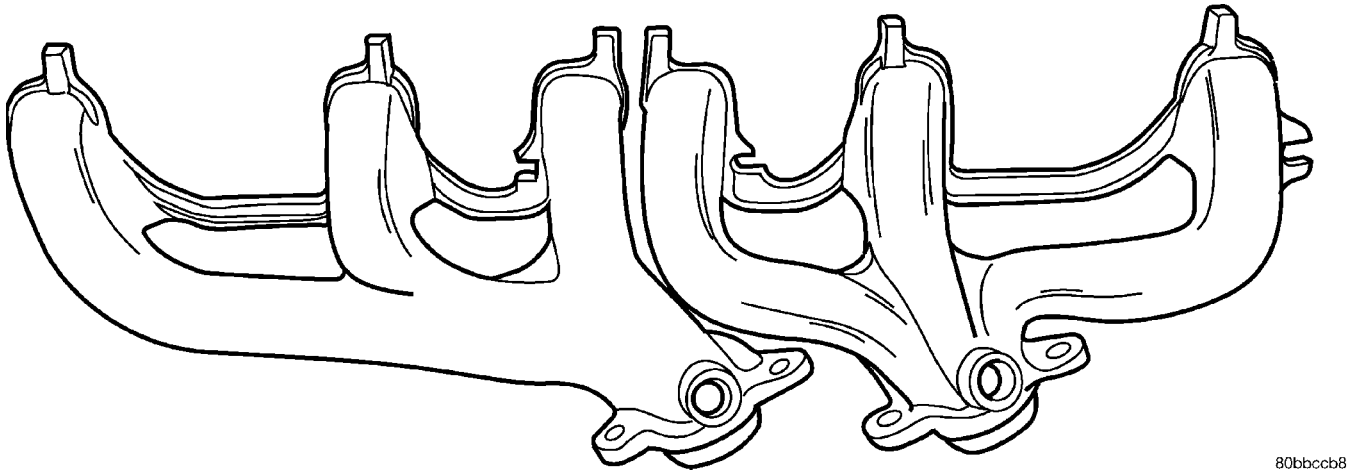

Fig. 95 EXHAUST MANIFOLDS 4.0L ENGINE

REMOVAL

The intake and engine exhaust manifolds on the 4.0L engine must be removed together. The manifolds use a common gasket at the cylinder head.

(Refer to 9 - ENGINE/MANIFOLDS/INTAKE MANIFOLD - REMOVAL).