EXHAUST SYSTEM

TABLE OF CONTENTS

page

EXHAUST SYSTEM
DESCRIPTION 1
DIAGNOSIS AND TESTING - EXHAUST SYSTEM 2
SPECIFICATIONS
TORQUE 3
CATALYTIC CONVERTER
DESCRIPTION 3
REMOVAL
REMOVAL - 2.4L 3
REMOVAL - 4.0L 4
INSTALLATION
INSTALLATION - 2.4L 4
INSTALLATION - 4.0L 5
EXHAUST PIPE
REMOVAL
REMOVAL - 2.4L 5
REMOVAL - 4.0L 5
INSTALLATION
INSTALLATION - 2.4L 6
INSTALLATION - 4.0L 6
HEAT SHIELDS
DESCRIPTION 6
REMOVAL 7
INSTALLATION 7
MUFFLER
DESCRIPTION 7
REMOVAL 8
INSTALLATION 9
TAILPIPE
DESCRIPTION
TAILPIPE 9
OPERATION 10

EXHAUST SYSTEM

DESCRIPTION

WARNING: THE NORMAL OPERATING TEMPERATURE OF THE EXHAUST SYSTEM IS VERY HIGH. THEREFORE, NEVER WORK AROUND OR ATTEMPT TO SERVICE ANY PART OF THE EXHAUST SYSTEM UNTIL IT IS COOLED. SPECIAL CARE SHOULD BE TAKEN WHEN WORKING NEAR THE CATALYTIC CONVERTER. THE TEMPERATURE OF THE CONVERTER RISES TO A HIGH LEVEL AFTER A SHORT PERIOD OF ENGINE OPERATION TIME.

The basic exhaust system consists of exhaust manifold(s), exhaust pipe with oxygen sensors, catalytic converter(s), heat shield(s), muffler and tailpipe (Fig. 2)

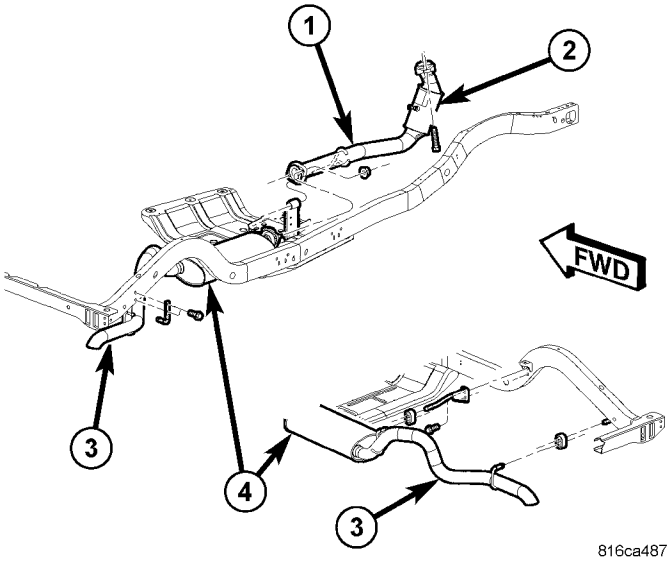

Fig. 1 EXHAUST SYSTEM - 2.4L

1 - EXHAUST PIPE
2 - CATALYTIC CONVERTER
3 - TAILPIPE
4 - MUFFLER