(1) Raise and support the vehicle.
(2) Saturate the studs and nuts with a Mopar® rust penetrant. Allow 5 minutes for penetration.
(3) Remove the oxygen sensors from the exhaust pipe and the catalytic converter.
(4) Disconnect the exhaust pipe from the engine exhaust manifold (Fig. 6).
(5) Remove catalytic converter to muffler flange retaining nuts (Fig. 6).
(6) Slide exhaust pipe foward until exhaust pipe hanger disengages from transmission support. Remove exhaust pipe and catalytic converter from vehicle.

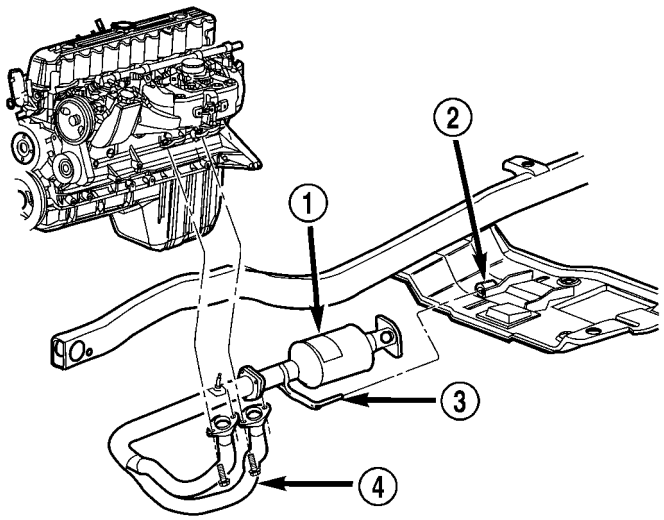

Fig. 6 Exhaust Pipe and Catalytic Converter - 4.0L

1 - CATALYTIC CONVERTER
2 - TRANSMISSION SUPPORT
3 - EXHAUST HANGER
4 - EXHAUST PIPE

INSTALLATION

INSTALLATION - 2.4L

(1) Position exhaust pipe and catalytic converter into vehicle.
(2) Insert exhaust pipe hanger into transmission support.
(3) Install exhaust pipe onto exhaust manifold **DO NOT** tighten bolts at this time.
(4) Position muffler flange onto catalytic converter flange and install retaining bolts and nuts. **DO NOT** tighten nuts at this time.
(5) Make sure the exhaust system is aligned and has the proper clearance. The minimum clearance is 25mm (1 inch).
(6) Tighten muffler to catalytic converter flange retaining nuts to 28 N·m (21 ft. lbs.).
(7) Tighten exhaust pipe to exhaust manifold mounting bolts to 31 N·m (23 ft. lbs.).
(8) Install the oxygen sensors in the exhaust pipe and catalytic converter and connect oxygen sensor connectors.
(9) Lower vehicle.
(10) Start engine and inspect for leaks. Repair exhaust leaks as necessary.
(11) Check the exhaust system for contact with the body panels. Make the necessary adjustments, if needed.

INSTALLATION - 4.0L

(1) Position exhaust pipe and catalytic converter into vehicle.
(2) Insert exhaust pipe hanger into transmission support (Fig. 6).
(3) Install exhaust pipe onto exhaust manifold **DO NOT** tighten bolts at this time.
(4) Position muffler flange onto catalytic converter flange and install retaining bolts and nuts (Fig. 6). **DO NOT** tighten nuts at this time.
(5) Make sure the exhaust system is aligned and has the proper clearance. The minimum clearance is 25mm (1 inch).
(6) Tighten muffler to catalytic converter flange retaining nuts to 28.5 N·m (21 ft. lbs.).
(7) Tighten exhaust pipe to exhaust manifold mounting bolts to 31 N·m (23 ft. lbs.).
(8) Install the oxygen sensors in the exhaust pipe and catalytic converter.
(9) Lower vehicle.
(10) Start engine and inspect for leaks. Repair exhaust leaks as necessary.
(11) Check the exhaust system for contact with the body panels. Make the necessary adjustments, if needed.

HEAT SHIELDS

DESCRIPTION

Heat shields (Fig. 7) are made of stamped/formed steel, or metal foil.

Exhaust heat shields are needed to protect both the vehicle and the environment from the high temperatures developed by the catalytic converter. The catalytic converter releases additional heat into the exhaust system. Under severe operating conditions, the temperature increases in the area of the converter. Such conditions can exist when the engine misfires or otherwise does not operate at peak efficiency.