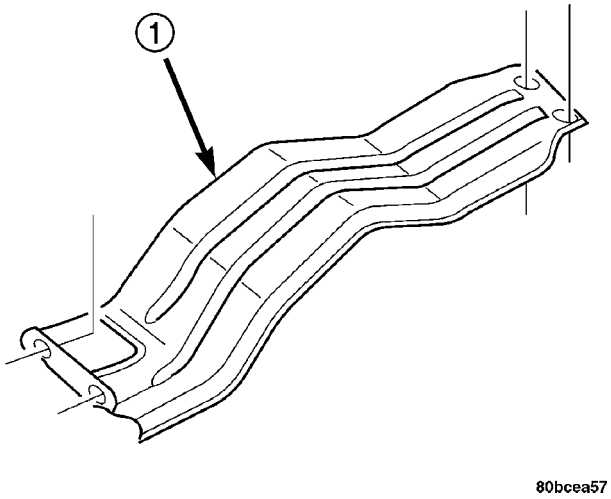

Fig. 7 Exhaust Heat Shield - Typical

1 - HEAT SHIELD

REMOVAL

(1) Raise and support the vehicle.

(2) Remove the screws and/or nuts holding the heat shields to the frame and/or floor pan (Fig. 8) and (Fig. 9).

(3) When removing muffler heat shield, the muffler front support bracket must be removed first.

(4) Slide the shields out around the exhaust system.

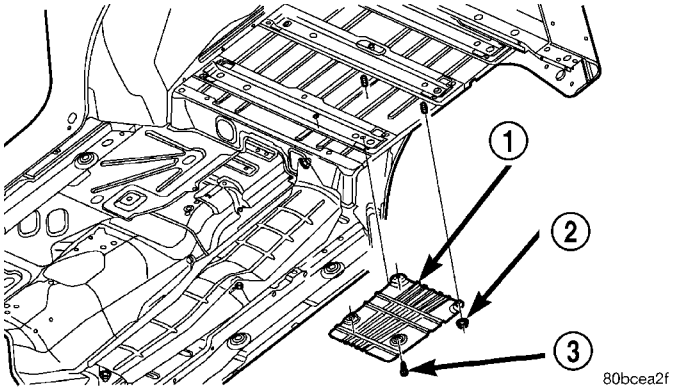

Fig. 8 Muffler Heat Shield - Rear

1 - MUFFLER HEAT SHIELD - REAR
2 - NUTS
3 - SELF TAPPING SCREWS

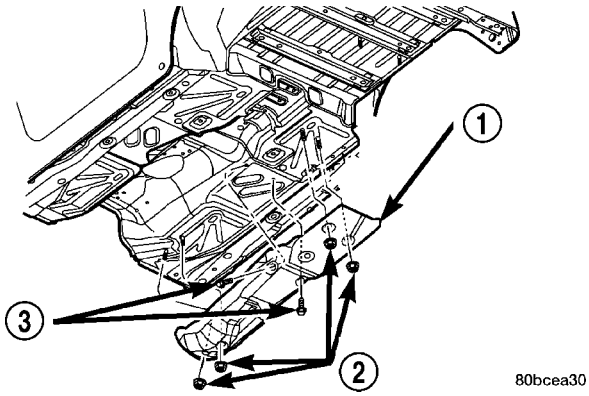

Fig. 9 Muffler Heat Shield - Middle

1 - MUFFLER HEAT SHIELD - MIDDLE
2 - NUTS
3 - SELF TAPPING SCREWS

INSTALLATION

(1) Position the heat shields to the floor pan or the frame and install the screws and/or nuts (Fig. 8) and (Fig. 9).

(2) Tighten the nuts and/or screws to 45 N·m (33 ft. lbs.).

(3) Lower the vehicle.

MUFFLER

DESCRIPTION

Both the 2.4L and 4.0L engines use a stainless steel muffler (Fig. 10) to control exhaust noise levels and exhaust back pressure.

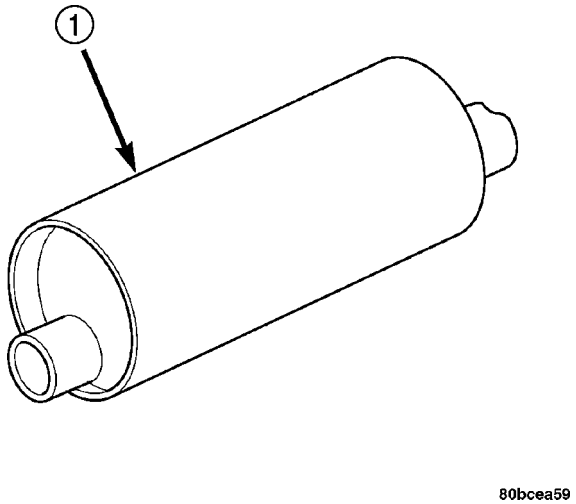

Fig. 10 Muffler

1 - MUFFLER