FRONT EXTENSION

REMOVAL

(1) Remove the bolts attaching the bumper extension to the bumper (Fig. 1).

(2) Separate the extension from the bumper.

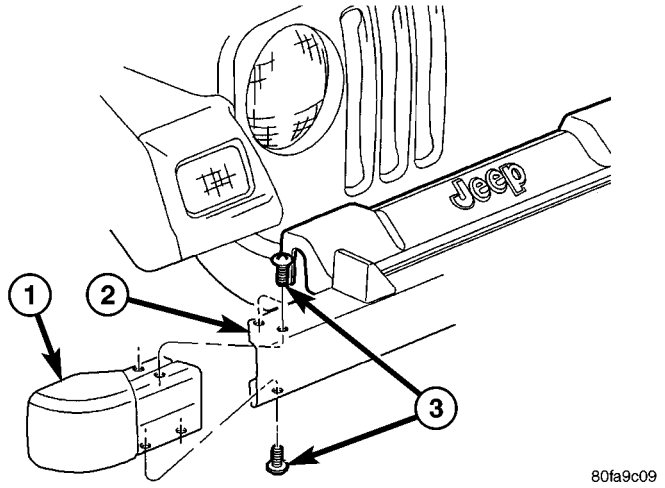

Fig. 1 BUMPER EXTENSION

1 - BUMPER EXTENSION
2 - FRONT BUMPER
3 - BOLTS (2 ON TOP AND 1 ON BOTTOM)

INSTALLATION

(1) Position the extension to the bumper

(2) Install the screws retaining the front bumper extension. (Fig. 1)

FRONT BUMPER

REMOVAL

(1) If equipped, disconnect the fog lamp harness connector.

(2) Remove the screws that attach the bumper to the frame rail (Fig. 2).

(3) If equipped, remove the tow hook. (Refer to 13 - FRAME & BUMPERS/FRAME/FRONT TOW HOOK - REMOVAL)

(4) Separate the bumper from the vehicle.

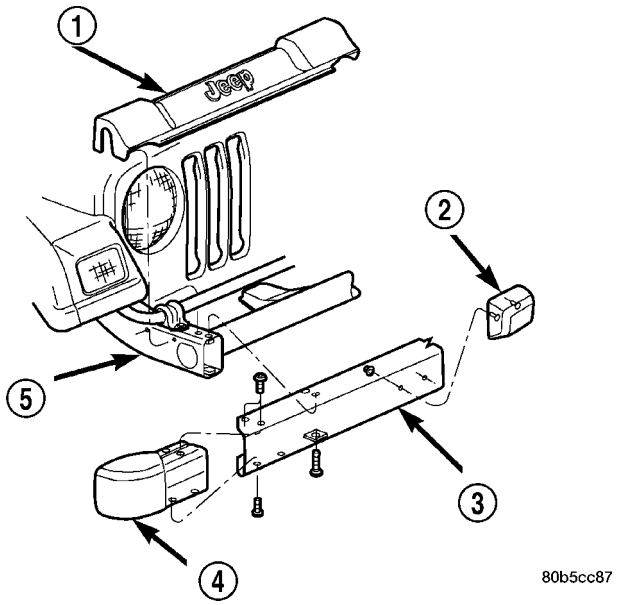

Fig. 2 FRONT BUMPER COMPONENTS

1 - VALANCE
2 - BUMPER GUARD
3 - FRONT BUMPER
4 - BUMPER EXTENSION
5 - FRAME

INSTALLATION

(1) Position the bumper on the vehicle.

(2) If equipped, install the tow hook. (Refer to 13 - FRAME & BUMPERS/FRAME/FRONT TOW HOOK - INSTALLATION)

(3) Install the screws that attach the bumper to the frame rail and tighten to 108 N·m (80 ft. lbs.).

(4) If equipped, Connect the fog lamp harness connector.

REAR EXTENSION

REMOVAL

(1) Remove the screws attaching the bumper extension to the bumper (Fig. 3).

(2) Separate the extension from the bumper.