TRANSFER CASE SKID PLATE

REMOVAL

NOTE: The transmission and transfer case crossmember is integrated with the transfer case skid plate.

WARNING: The transfer case and transmission are supported by the transfer case skid plate. Before removing the transfer case skid plate, ensure that the transmission is properly supported.

(1) Raise and support the vehicle. (Refer to LUBRICATION & MAINTENANCE/HOISTING - STANDARD PROCEDURE)

(2) Remove the transmission skid plate, if equipped. (Refer to 13 - FRAME & BUMPERS/FRAME/FRONT SKID PLATE - REMOVAL)

(3) Support the transmission with a suitable lifting device.

(4) Remove the nuts attaching the transmission mount to the skid plate. (Fig. 10)

(5) Remove the bolts attaching the skid plate to the frame and remove the skid plate. (Fig. 11)

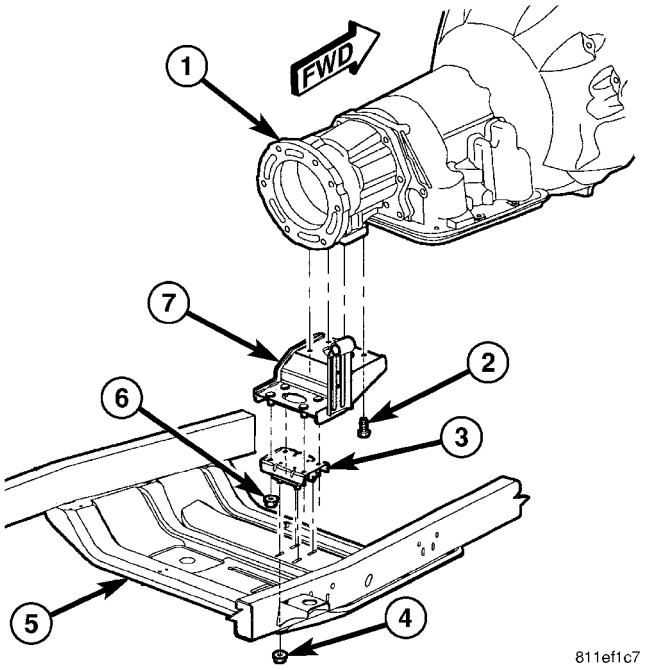

Fig. 10 TRANSMISSION MOUNT (Auto shown, manual similar)

1 - TRANSMISSION ASSEMBLY
2 - SUPPORT BRACKET BOLTS (4)
3 - TRANSMISSION MOUNT
4 - SKID PLATE/CROSSMEMBER NUTS (4)
5 - SKID PLATE/CROSSMEMBER
6 - MOUNT NUTS (4)
7 - SUPPORT BRACKET

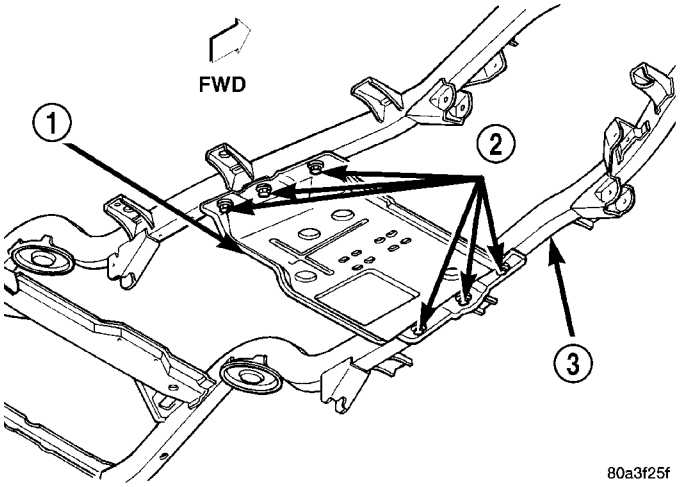

Fig. 11 TRANSFER CASE SKID PLATE

1 - SKID PLATE
2 - BOLTS
3 - FRAME

INSTALLATION

(1) Position the skid plate on the vehicle.

(2) Install the bolts attaching the skid plate to the frame and tighten to 44 N·m (33 ft. lbs.).

(3) Install the nuts attaching the transmission mount to the skid plate and tighten to 35 N·m (26 ft. lbs.).

(4) Install the transmission skid plate. (Refer to 13 - FRAME & BUMPERS/FRAME/FRONT SKID PLATE - INSTALLATION)

FUEL TANK SKID PLATE

REMOVAL

(1) Position a support under the fuel tank skid plate.

(2) Remove the protective caps from the end of the strap studs.

(3) Remove the nuts that attach the skid plate to the straps and to the crossmembers (Fig. 12).

(4) Separate the fuel tank strap from the skid plate.

(5) Support the fuel tank and remove the skid plate from the vehicle.