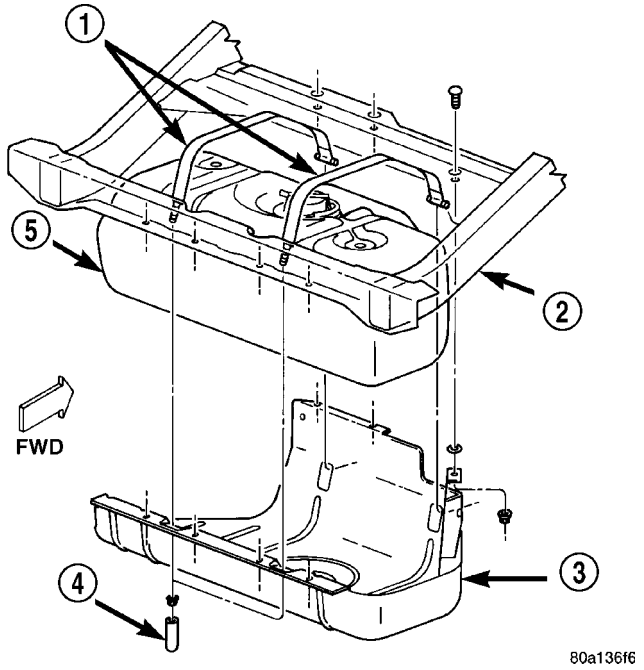

Fig. 12 FUEL TANK SKID PLATE

1 - STRAP
2 - FRAME
3 - SKID PLATE
4 - PROTECTIVE CAP
5 - FUEL TANK

INSTALLATION

(1) Attach the skid plate to the fuel tank strap.

(2) Position and support the skid plate under the fuel tank.

(3) Install the nuts to attach the skid plate to the straps and to the frame crossmembers. Tighten the fuel tank strap nuts to 5 N·m (40 in. lbs.). Tighten the skid plate-to-crossmember nuts with 16 N·m (12 ft. lbs.).

(4) Install the protective caps on the end of the strap studs.

(5) Remove the support from under the skid plate.

FRONT TOW HOOK

REMOVAL

(1) Remove the torx bolts that attach the tow hook to the bumper (Fig. 13).

(2) Separate the tow hook from the bumper.

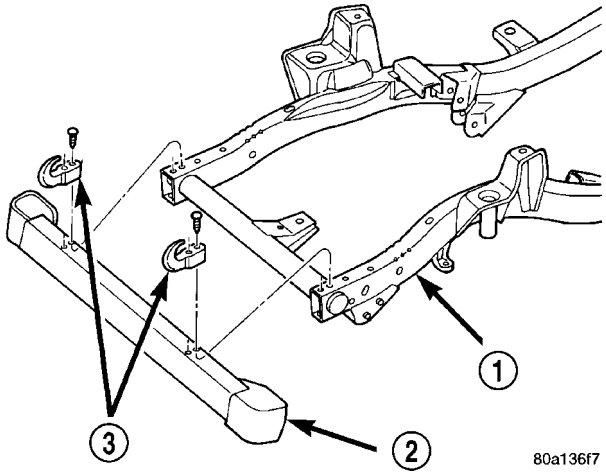

Fig. 13 FRONT TOW HOOK

1 - FRAME
2 - BUMPER
3 - TOW HOOK

INSTALLATION

(1) Position the tow hook on the bumper.

(2) Install the torx bolts that attach the tow hook to the bumper and tighten to 108 N·m (80 ft. lbs.).

REAR TOW HOOK

REMOVAL

(1) Remove the fasteners that attach the rear tow hook to the frame (Fig. 14).

(2) Separate the tow hook from the frame.

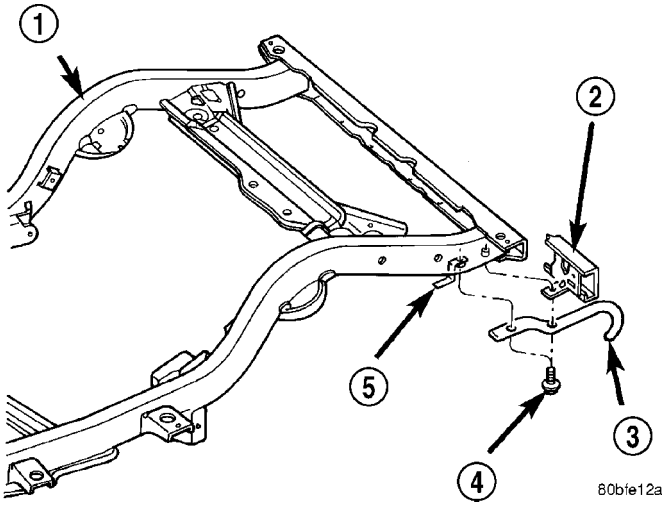

Fig. 14 REAR TOW HOOK

1 - FRAME
2 - REAR BUMPER
3 - TOW HOOK
4 - BOLT
5 - NUT

INSTALLATION

(1) Position the tow hook on the frame.