Fuel Gauge Sending Unit (Fuel level sensor)

The fuel gauge sending unit (fuel level sensor) is attached to the side of the fuel pump module. The sending unit consists of a float, an arm, and a variable resistor track (card).

REMOVAL

WARNING: The fuel system is under a constant pressure (even with the engine off). Before servicing the fuel pump module, the fuel system pressure must be released.

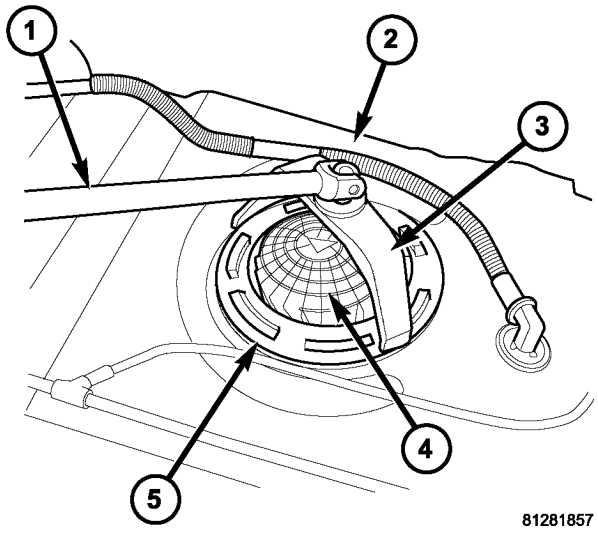

Fig. 2 FUEL TANK MODULE LOCK RING

1 - 1/2" BREAKER BAR
2 - TOP OF FUEL TANK (TYPICAL)
3 - SPECIAL TOOL #9340
4 - FUEL PUMP MODULE (TYPICAL)
5 - MODULE LOCK RING

(1) Drain and remove fuel tank. (Refer to 14 - FUEL SYSTEM/FUEL DELIVERY/FUEL TANK - REMOVAL)

(2) Note rotational position of module before attempting removal. An indexing arrow is located on top of module for this purpose.

(3) Position Lockring Remover/Installer 9340 (3) (Fig. 2) into notches on outside edge of lockring (5).

(4) Install 1/2 inch drive breaker bar (1) (Fig. 2) to Lockring Remover/Installer 9340 (3).

(5) Rotate breaker bar counter-clockwise to remove lockring.

(6) Remove lockring. The module will spring up slightly when lockring is removed.

(7) Remove module from fuel tank. Be careful not to bend float arm while removing.

INSTALLATION

CAUTION: Whenever the fuel pump module is serviced, the rubber seal (gasket) must be replaced.

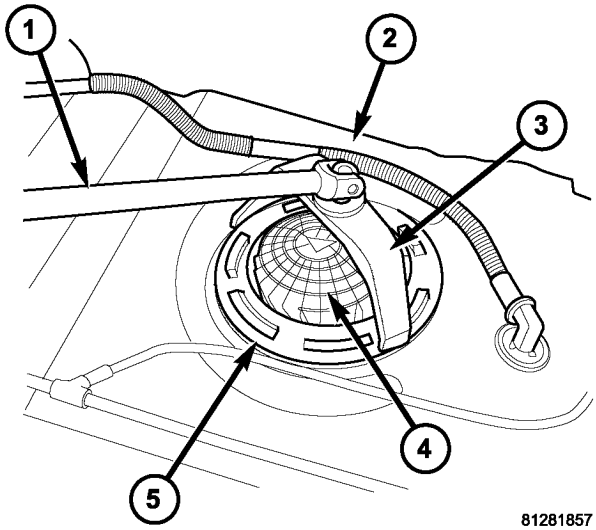

Fig. 3 FUEL PUMP MODULE LOCKRING

1 - 1/2" BREAKER BAR
2 - TOP OF FUEL TANK (TYPICAL)
3 - SPECIAL TOOL #9340
4 - FUEL PUMP MODULE (TYPICAL)
5 - MODULE LOCK RING

(1) Using a new seal (gasket), position fuel pump module into opening in fuel tank.

(2) Position lockring (5) (Fig. 3) over top of fuel pump module.

(3) Rotate module until embossed alignment arrow points to center alignment mark. This step must be performed to prevent float from contacting side of fuel tank. Also be sure fuel fitting on top of pump module is pointed to front of vehicle.

(4) Install Lockring Remover/Installer 9340 (3) to lockring.

(5) Install 1/2 inch drive breaker (1) into Lockring Remover/Installer 9340 (3).

(6) Tighten lockring (clockwise) until all seven notches have engaged.

(7) Install fuel tank. (Refer to 14 - FUEL SYSTEM/FUEL DELIVERY/FUEL TANK - INSTALLATION)

FUEL RAIL / FUEL DAMPER

DESCRIPTION

2.4L

The fuel injector rail is used to mount the fuel injectors to the engine (Fig. 4). On the 2.4L 4-cylinder engine, a **fuel damper** is located near the front of the fuel rail (Fig. 4).