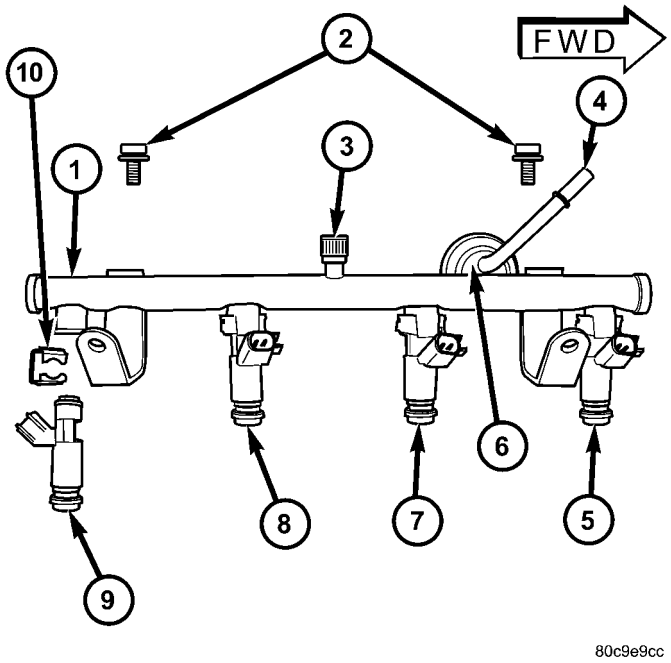

Fig. 4 FUEL RAIL - 2.4L

1 - FUEL RAIL
2 - MOUNTING BOLTS
3 - TEST PORT (IF USED)
4 - QUICK-CONNECT FITTING
5 - INJ. #1
6 - DAMPER
7 - INJ #2
8 - INJ #3
9 - INJ #4
10- INJECTOR RETAINING CLIP

4.0L

The fuel rail is mounted to the intake manifold (Fig. 5). It is used to mount the fuel injectors to the engine. On the 4.0L 6–cylinder engine, a **fuel damper** is located near the center of the fuel rail (Fig. 5).

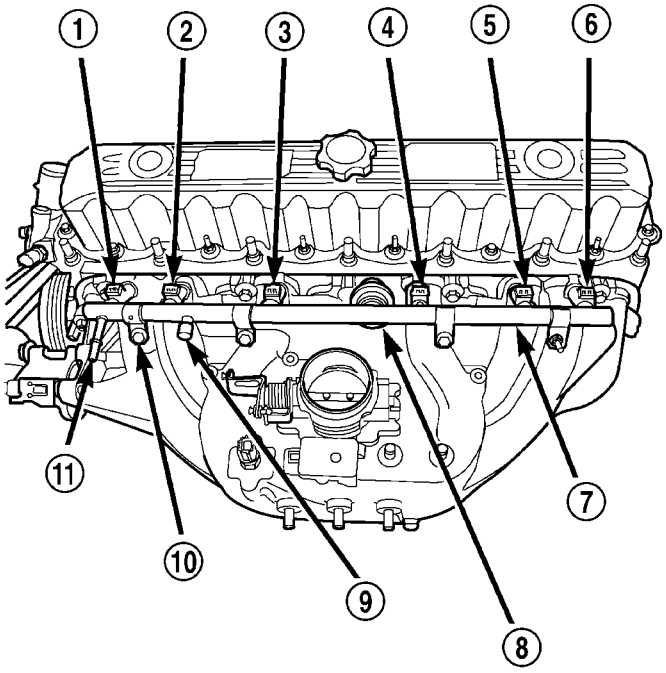

Fig. 5 FUEL RAIL/FUEL DAMPER - 4.0L ENGINE

1 - INJ. #1
2 - INJ. #2
3 - INJ. #3
4 - INJ. #4
5 - INJ. #5
6 - INJ. #6
7 - FUEL INJECTOR RAIL
8 - FUEL DAMPER
9 - PRESSURE TEST PORT CAP
10 - MOUNTING BOLTS (4)
11 - QUICK-CONNECT FITTING

OPERATION

2.4L

The fuel injector rail supplies the necessary fuel to each individual fuel injector.

The fuel damper is used only to help control fuel pressure pulsations. These pulsations are the result of the firing of the fuel injectors. It is **not used** as a fuel pressure regulator. The fuel pressure regulator is **not mounted** to the fuel rail on any engine. It is located on the fuel tank mounted fuel pump module. Refer to Fuel Pressure Regulator for additional information.

The fuel rail is not repairable.

A quick-connect fitting with a safety latch is used to attach the fuel line to the fuel rail.

4.0L

The fuel injector rail supplies the necessary fuel to each individual fuel injector.

The fuel damper is used only to help control fuel pressure pulsations. These pulsations are the result of the firing of the fuel injectors. It is **not used** as a