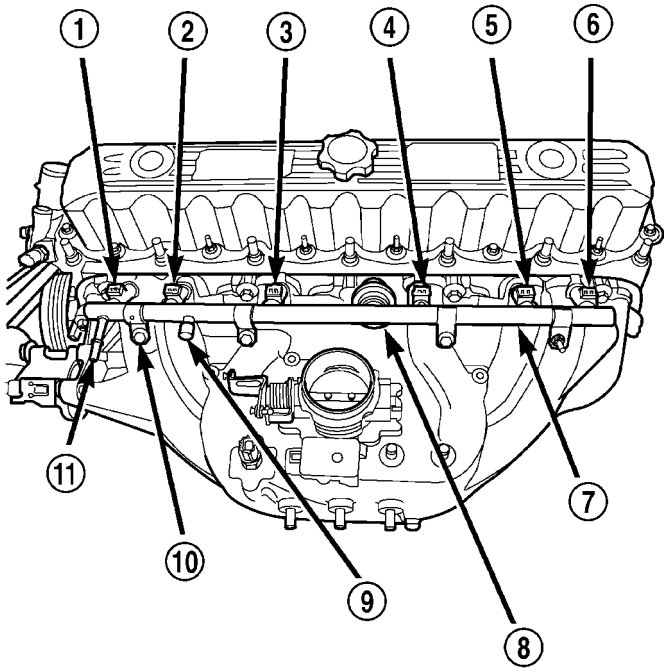

80bfe150

Fig. 10 FUEL RAIL MOUNTING - 4.0L

1 - INJ. #1
2 - INJ. #2
3 - INJ. #3
4 - INJ. #4
5 - INJ. #5
6 - INJ. #6
7 - FUEL INJECTOR RAIL
8 - FUEL DAMPER
9 - PRESSURE TEST PORT CAP
10 - MOUNTING BOLTS (4)
11 - QUICK-CONNECT FITTING

INSTALLATION

2.4L

(1) If fuel injectors are to be installed, (Refer to 14 - FUEL SYSTEM/FUEL INJECTION/FUEL INJECTOR - INSTALLATION).

(2) Clean out fuel injector machined bores in intake manifold.

(3) Apply a small amount of engine oil to each fuel injector o-ring. This will help in fuel rail installation.

(4) Position fuel rail/fuel injector assembly to machined injector openings in intake manifold.

(5) Guide each injector into cylinder head. Be careful not to tear injector o-rings.

(6) Push fuel rail down until fuel injectors have bottomed on shoulders.

(7) Install 2 fuel rail mounting bolts and tighten. Refer to torque specifications.

(8) Connect electrical connectors at all fuel injectors. To install connector, refer to (Fig. 8). Push connector onto injector (1) and then push and lock red colored slider (2). Verify connector is locked to injector by lightly tugging on connector.

(9) Snap 2 injection wiring harness clips (Fig. 7) into brackets.

(10) Connect 2 main engine harness connectors at rear of intake manifold (Fig. 6).

(11) Tighten 5 intake manifold mounting bolts. Refer to Engine Torque Specifications.

(12) Install PCV valve and hose.

(13) Install thermostat and radiator hose. Fill with coolant. (Refer to 7 - COOLING - STANDARD PROCEDURE)

(14) Connect necessary vacuum lines to throttle body.

(15) Connect fuel line latch clip and fuel line to fuel rail. (Refer to 14 - FUEL SYSTEM/FUEL DELIVERY/QUICK CONNECT FITTING - STANDARD PROCEDURE)

(16) Install air duct to throttle body.

(17) Connect battery cable to battery.

(18) Start engine and check for leaks.

4.0L

(1) Clean each injector bore at intake manifold.

(2) Apply a small amount of clean engine oil to each injector o-ring. This will aid in installation.

(3) Position tips of all fuel injectors into the corresponding injector bore in intake manifold. Seat injectors into manifold.

(4) Install and tighten fuel rail mounting bolts to 11 ±3 N·m (100 ±25 in. lbs.) torque.

(5) If equipped, connect wiring harnesses to injection rail studs.

(6) Connect electrical connectors at all fuel injectors. To install connector, refer to (Fig. 9). Push connector onto injector (1) and then push and lock red colored slider (2). Verify connector is locked to injector by lightly tugging on connector.

(7) Connect fuel line and fuel line latch clip to fuel rail. Refer Quick-Connect Fittings.

(8) Install protective cap to pressure test port fitting (if equipped).

(9) Install cable routing bracket to intake manifold.

(10) Connect throttle cable at throttle body.

(11) Connect speed control cable at throttle body (if equipped).

(12) Connect automatic transmission cable at throttle body (if equipped).

(13) Install air tube (or duct) at top of throttle body.

(14) Install fuel tank cap.

(15) Connect negative battery cable to battery.

(16) Start engine and check for fuel leaks.