FUEL TANK

DESCRIPTION

The fuel tank is constructed of a plastic material. Its main functions are for fuel storage and for placement of the fuel pump module.

OPERATION

All models pass a full 360 degree rollover test without fuel leakage. To accomplish this, fuel and vapor flow controls are required for all fuel tank connections.

A fuel tank check valve(s) is mounted into the top of the fuel tank (or pump module). Refer to Fuel Tank Check Valve for additional information.

An evaporation control system is connected to the check valve(s) to reduce emissions of fuel vapors into the atmosphere. When fuel evaporates from the fuel tank, vapors pass through vent hoses or tubes to a charcoal canister where they are temporarily held. When the engine is running, the vapors are drawn into the intake manifold. Certain models are also equipped with a self-diagnosing system using either a Leak Detection Pump (LDP), or an NVLD pump. Refer to Emission Control System for additional information.

Refer to ORVR for On-Board Refueling Vapor Recovery system information.

REMOVAL

(1) Release fuel system pressure. Refer to the Standard Procedure — Fuel System Pressure Release.

(2) Drain fuel tank. (Refer to 14 - FUEL SYSTEM/ FUEL DELIVERY - STANDARD PROCEDURE) This vehicle is equipped with an ORVR (On-Board Refueling Vapor Recovery) system. Because of this, the fuel tank may be drained the conventional way through the filler cap opening.

On this model, the fuel tank is mounted to the vehicle skid plate. The skid plate is mounted to vehicle body. The tank and skid plate are removed as one assembly.

(3) Remove fuel filler cap.

(4) Perform the Fuel System Pressure Release Procedure as described elsewhere in this group. (Refer to 14 - FUEL SYSTEM/FUEL DELIVERY - STANDARD PROCEDURE)

(5) Disconnect negative battery cable.

(6) Using an approved portable gasoline siphon/ storage tank, drain fuel from tank through filler cap opening.

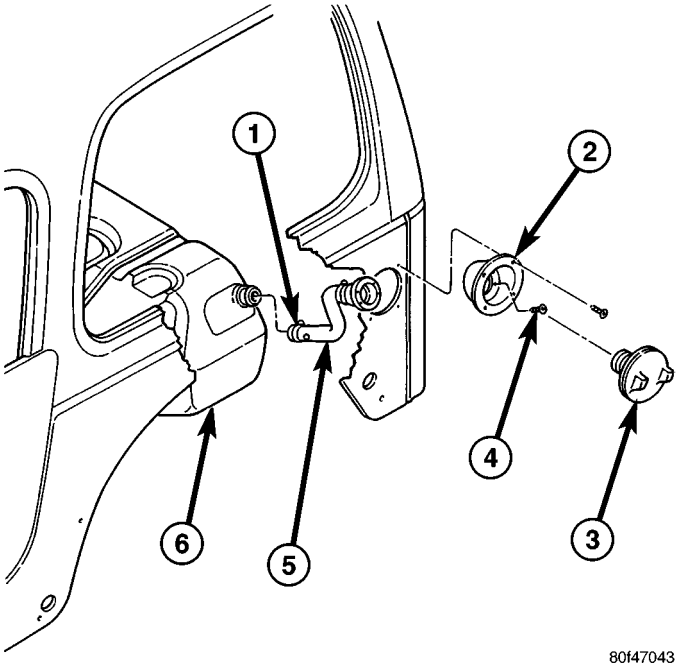

Fig. 11 FUEL FILL HOSE AT BODY

1 - FILLER HOSE CLAMP
2 - BEZEL
3 - FUEL FILLER CAP
4 - BEZEL SCREWS
5 - FUEL FILLER HOSE
6 - FUEL TANK

(7) Remove the screws (4) retaining plastic fuel filler bezel to body (Fig. 11). Remove plastic fuel filler bezel (2).

(8) To prevent contaminants from entering tank, temporarily install fuel cap to fill hoses.

(9) Remove right/rear tire/wheel.

(10) Remove wheelhouse liner at right/rear wheel.