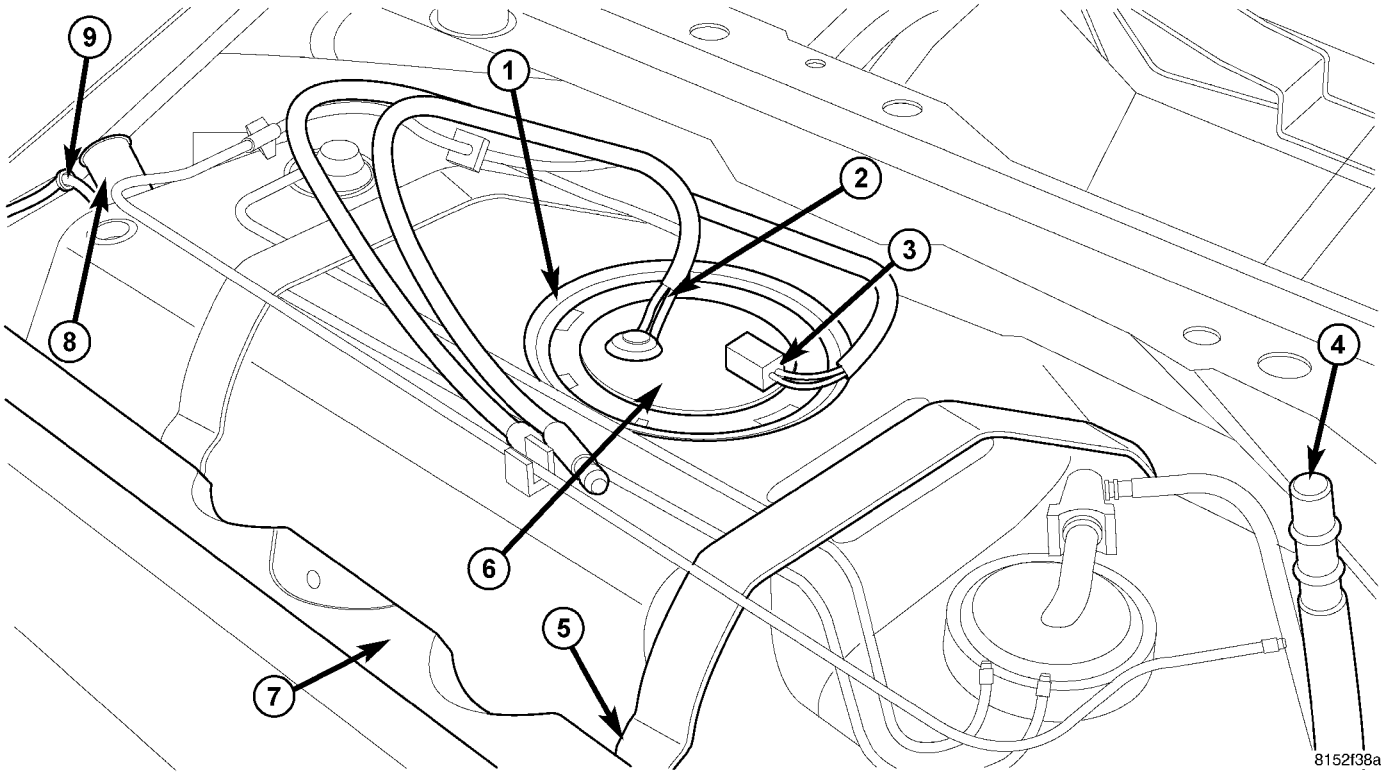

Fig. 14 TOP OF FUEL TANK

1 - FUEL PUMP MODULE LOCKRING
2 - FUEL SUPPLY LINE
3 - ELECTRICAL CONNECTOR
4 - VAPOR LINE
5 - FUEL TANK MOUNTING STRAPS (2)
6 - FUEL PUMP MODULE ASSEMBLY
7 - SKID PLATE
8 - FUEL FILL FITTING
9 - FUEL VENT FITTING

(16) Disconnect quick-connect fitting from fuel supply line at front of fuel tank (Fig. 14). (Refer to 14 - FUEL SYSTEM/FUEL DELIVERY/QUICK CONNECT FITTING - STANDARD PROCEDURE)

(17) The fuel tank and skid plate are removed as an assembly. Centrally position a transmission jack (or equivalent lifting device) under skid plate/fuel tank assembly. Secure tank assembly to jack.

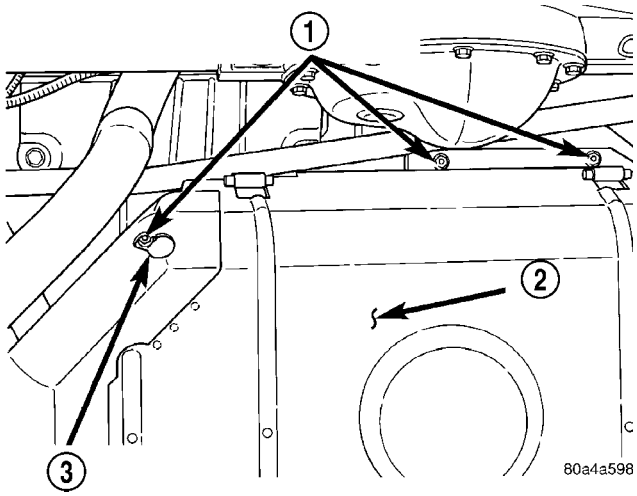

Fig. 15 FUEL TANK MOUNTING NUTS - FRONT

1 - FRONT SKID PLATE NUTS (3)
2 - SKID PLATE
3 - ACCESS HOLE

(18) Remove three skid plate-to-body nuts (1) at front of tank (Fig. 15). Remove one of the nuts through access hole (3) on skid plate (Fig. 15).