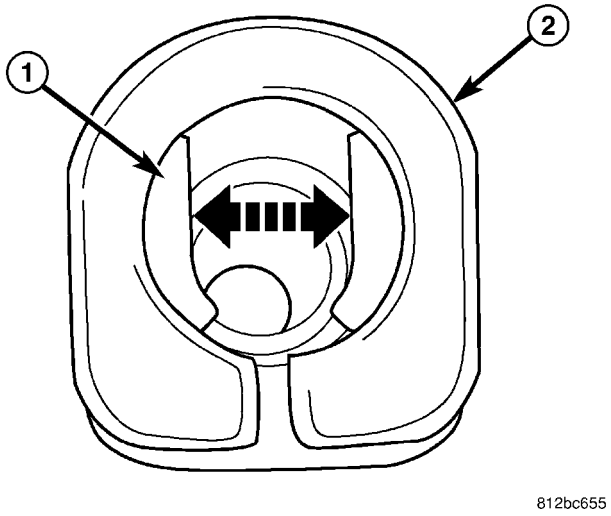

Fig. 26 FITTING LATCHES

1 - LATCHES
2 - QUICK-CONNECT FITTING

(5) **2–Button Type Fitting:** This type of fitting is equipped with a push-button located on each side of quick-connect fitting (Fig. 27). Press on both buttons simultaneously for removal. Special tools are not required for disconnection.

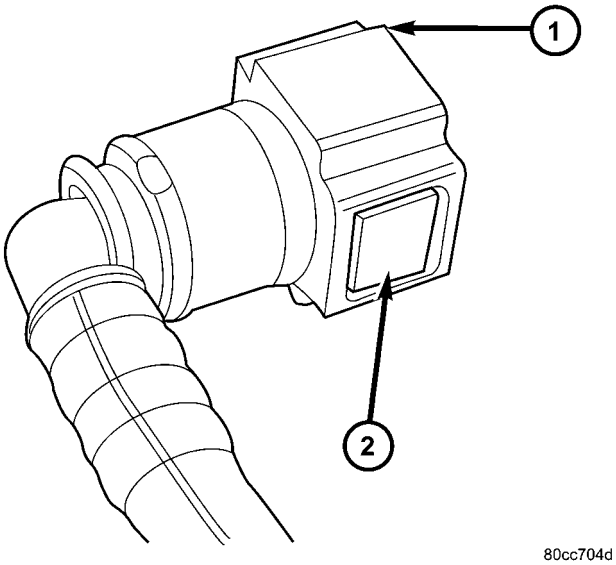

Fig. 27 2-BUTTON TYPE FITTING

1 - QUICK-CONNECT FITTING
2 - PUSH-BUTTONS (2)

(6) **Pinch-Type Fitting:** This fitting is equipped with two finger tabs. Pinch both tabs together while removing fitting (Fig. 28). Special tools are not required for disconnection.

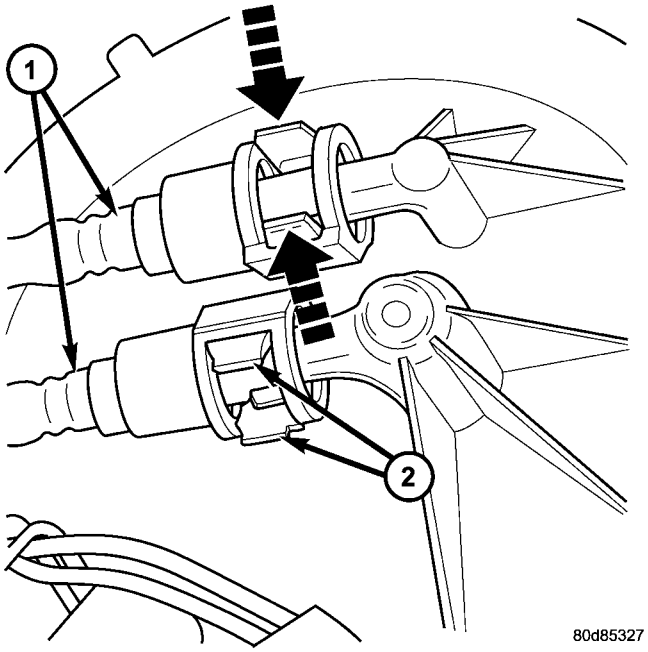

Fig. 28 PINCH TYPE QUICK-CONNECT FITTING

1 - QUICK-CONNECT FITTINGS
2 - PINCH TABS

(7) **Single-Tab Type Fitting:** This type of fitting is equipped with a single pull tab (Fig. 29). The tab is removable. After tab is removed, quick-connect fitting can be separated from fuel system component. Special tools are not required for disconnection.

(a) Press release tab on side of fitting to release pull tab (Fig. 30). **If release tab is not pressed prior to releasing pull tab, pull tab will be damaged.**

(b) While pressing release tab on side of fitting, use screwdriver to pry up pull tab (Fig. 30).

(c) Raise pull tab until it separates from quick-connect fitting (Fig. 31).

(8) **Two-Tab Type Fitting:** This type of fitting is equipped with tabs located on both sides of fitting (Fig. 32). The tabs are supplied for disconnecting quick-connect fitting from component being serviced.