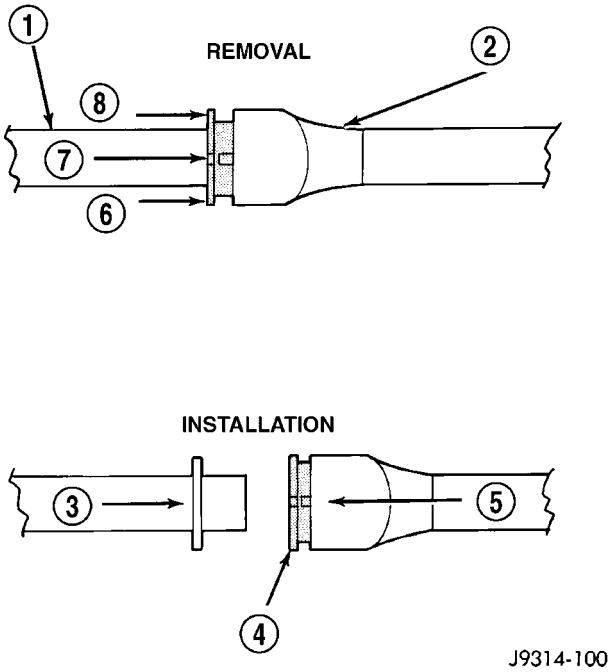

Fig. 33 PLASTIC RETAINER RING TYPE FITTING

1 - FUEL TUBE
2 - QUICK CONNECT FITTING
3 - PUSH
4 - PLASTIC RETAINER
5 - PUSH
6 - PUSH
7 - PUSH
8 - PUSH

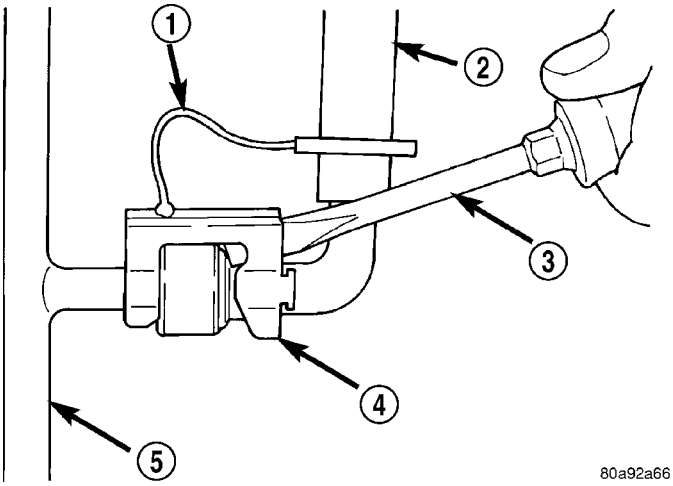

Fig. 34 LATCH CLIP-TYPE 1

1 - TETHER STRAP
2 - FUEL LINE
3 - SCREWDRIVER
4 - LATCH CLIP
5 - FUEL RAIL

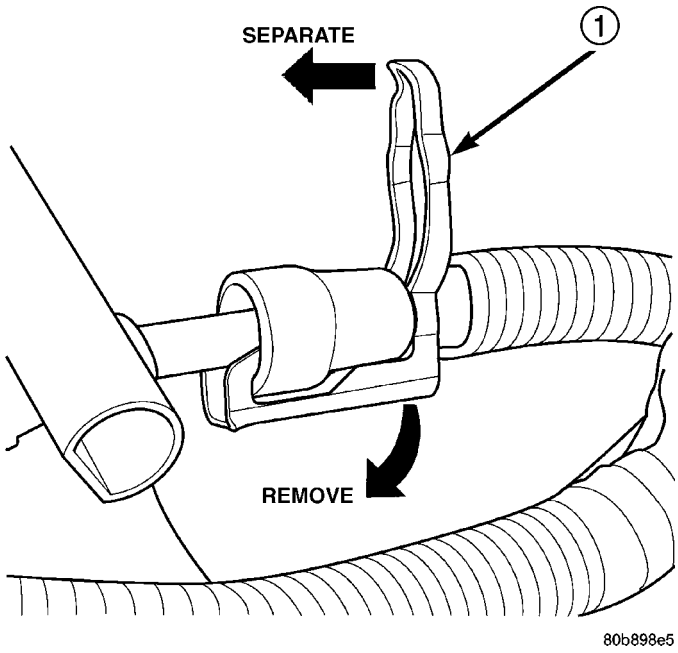

Fig. 35 LATCH CLIP-TYPE 2

1 - LATCH CLIP

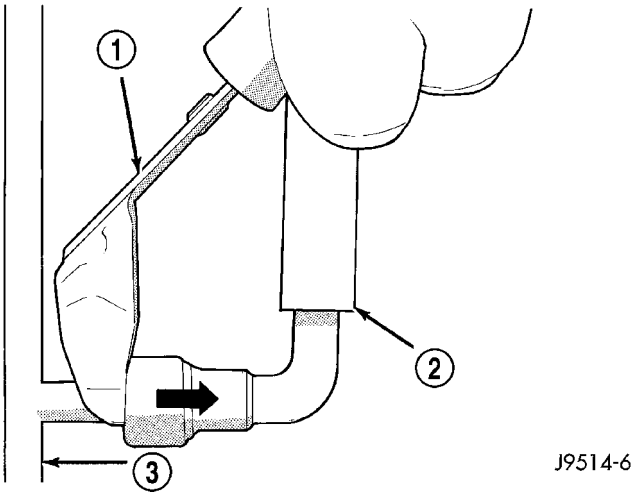

Fig. 36 FUEL LINE DISCONNECTION USING SPECIAL TOOL

1 - SPECIAL FUEL LINE TOOL
2 - FUEL LINE
3 - FUEL RAIL

(a) To disconnect quick-connect fitting, squeeze plastic retainer tabs (Fig. 32) against sides of quick-connect fitting with your fingers. Tool use is not required for removal and may damage plastic retainer.

(b) Pull fitting from fuel system component being serviced.

(c) The plastic retainer will remain on component being serviced after fitting is disconnected. The o-rings and spacer will remain in quick-connect fitting connector body.