• with one bolt to the right side of the transmission if equipped with a 42RLE automatic transmission (Fig. 6).

• with one bolt to the left side of the transmission (Fig. 7). If sensor is equipped with one mounting bolt, **it is adjustable.**.

• with two nuts to the left side of the transmission (Fig. 8).

• with two bolts to the left side of the transmission (Fig. 9).

(1) Disconnect sensor pigtail harness (electrical connector) from main electrical harness.

(2) Depending upon application, remove either sensor mounting bolt(s) or nuts.

(3) Remove sensor from engine.

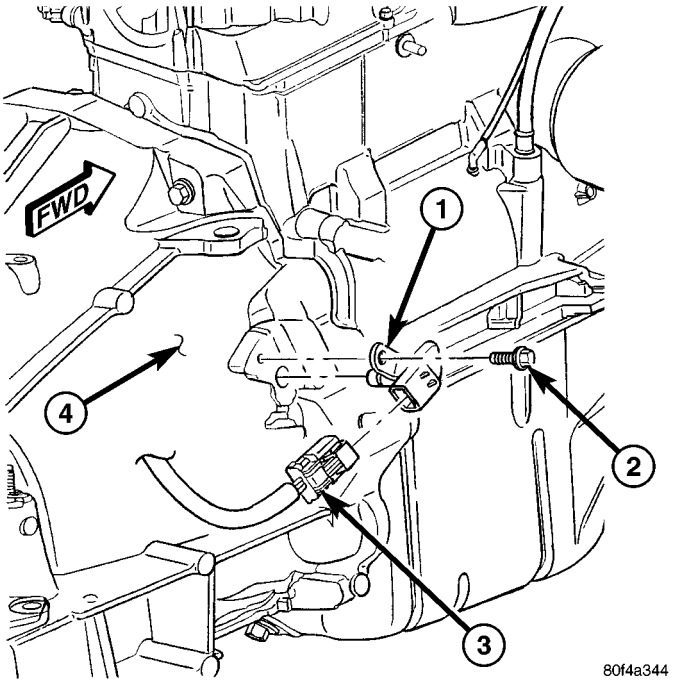

Fig. 6 CKP (WITH 42RLE AUTO. TRANS.)

1 - CKP SENSOR
2 - MOUNTING BOLT
3 - ELEC. CONNECTOR
4 - TRANS. BELLHOUSING

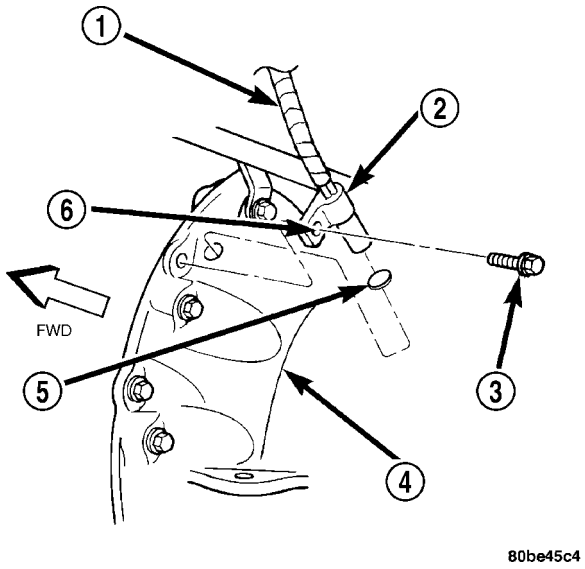

Fig. 7 CKP - ONE-BOLT MOUNTING (EXCEPT 42RLE AUTO. TRANS.)

1 - SENSOR PIGTAIL
2 - CRANKSHAFT POSITION SENSOR
3 - MOUNTING BOLT
4 - TRANSMISSION HOUSING
5 - PAPER SPACER
6 - SLOTTED HOLE

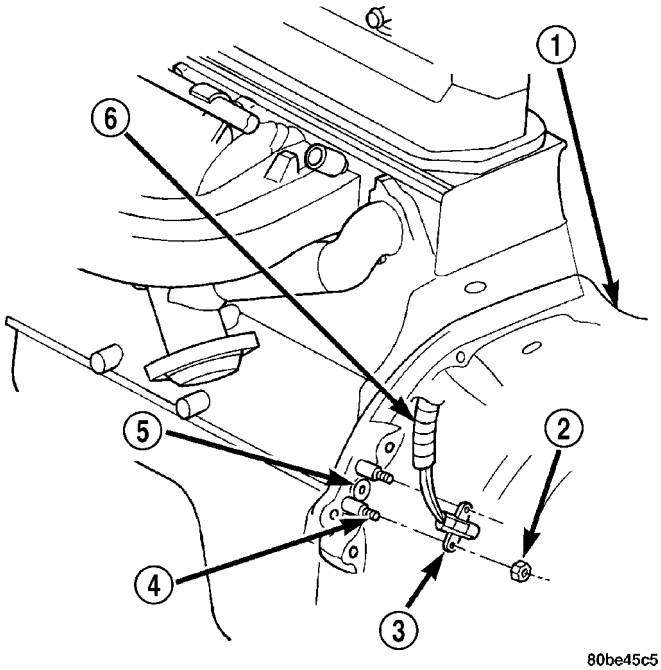

Fig. 8 CKP - TWO-NUT MOUNTING

1 - TRANSMISSION BELLHOUSING
2 - MOUNTING NUTS (2)
3 - CRANKSHAFT POSITION SENSOR
4 - MOUNTING STUDS (2)
5 - RUBBER GROMMET
6 - SENSOR PIGTAIL