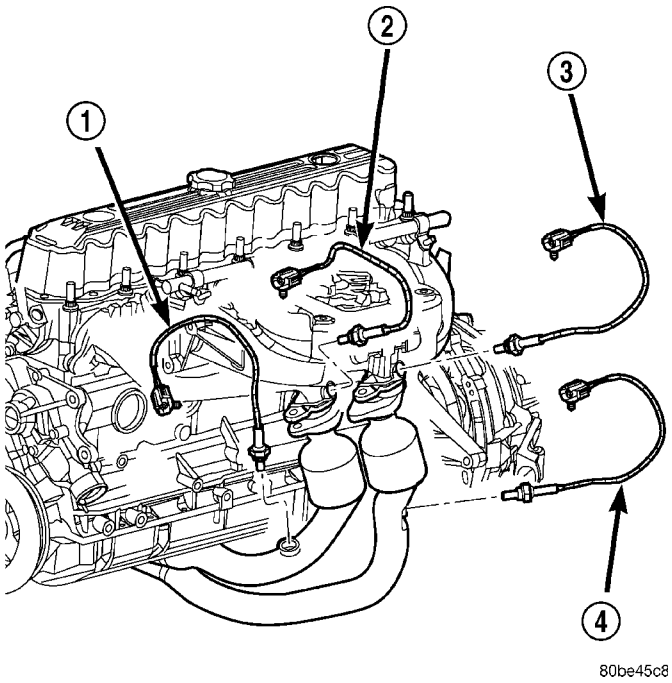

Fig. 23 OXYGEN SENSORS - 4.0L - CALIFORNIA EMISSIONS

1 - 1/2 O2S
2 - 1/1 O2S
3 - 2/1 O2S
4 - 2/2 O2S

INSTALLATION

2.4L

Threads of new oxygen sensors are factory coated with anti-seize compound to aid in removal. **DO NOT add any additional anti-seize compound to the threads of a new oxygen sensor.**

(1) Install O2S sensor. Tighten to 30 N·m (22 ft. lbs.) torque.

(2) Connect O2S sensor wire connector.

(3) Lower vehicle.

4.0L

Threads of new oxygen sensors are factory coated with anti-seize compound to aid in removal. **DO NOT add any additional anti-seize compound to the threads of a new oxygen sensor.**

(1) Install O2S sensor. Tighten to 30 N·m (22 ft. lbs.) torque.

(2) Connect O2S sensor wire connector.

(3) Lower vehicle.

THROTTLE BODY

DESCRIPTION

The throttle body is located on the intake manifold. Fuel does not enter the intake manifold through the throttle body. Fuel is sprayed into the manifold by the fuel injectors.

OPERATION

Filtered air from the air cleaner enters the intake manifold through the throttle body. The throttle body contains an air control passage controlled by an Idle Air Control (IAC) motor. The air control passage is used to supply air for idle conditions. A throttle valve (plate) is used to supply air for above idle conditions.

Certain sensors are attached to the throttle body. The accelerator pedal cable, speed control cable and transmission control cable (when equipped) are connected to the throttle body linkage arm.

A (factory adjusted) set screw is used to mechanically limit the position of the throttle body throttle plate. **Never attempt to adjust the engine idle speed using this screw.** All idle speed functions are controlled by the PCM.

REMOVAL

2.4L

A (factory adjusted) set screw is used to mechanically limit the position of the throttle body throttle plate. **Never attempt to adjust the engine idle speed using this screw.** All idle speed functions are controlled by the Powertrain Control Module (PCM).

(1) Remove air cleaner tube at throttle body.

(2) Disconnect throttle body electrical connectors at IAC motor and TPS.

(3) Remove all control cables from throttle body (lever) arm. Refer to the Accelerator Pedal and Throttle Cable section for removal/installation procedures.

(4) Disconnect necessary vacuum lines at throttle body.

(5) Remove 3 throttle body mounting bolts (Fig. 24).

(6) Remove throttle body from intake manifold.

(7) Check condition of old throttle body-to-intake manifold o-ring.