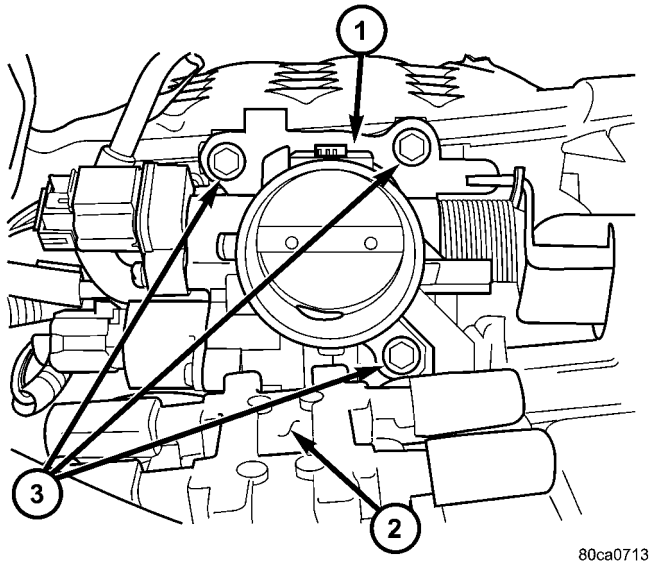

Fig. 24 THROTTLE BODY MOUNTING BOLTS - 2.4L

1 - THROTTLE BODY
2 - IGNITION COIL
3 - MOUNTING BOLTS (3)

4.0L

A (factory adjusted) set screw is used to mechanically limit the position of the throttle body throttle plate. **Never attempt to adjust the engine idle speed using this screw.** All idle speed functions are controlled by the Powertrain Control Module (PCM).

(1) Remove air cleaner tube at throttle body.

(2) Disconnect throttle body electrical connectors at MAP sensor, IAC motor and TPS (Fig. 25).

(3) Remove all control cables from throttle body (lever) arm. Refer to the Accelerator Pedal and Throttle Cable section of this group for additional information.

(4) Remove four throttle body mounting bolts.

(5) Remove throttle body from intake manifold.

(6) Discard old throttle body-to-intake manifold gasket.

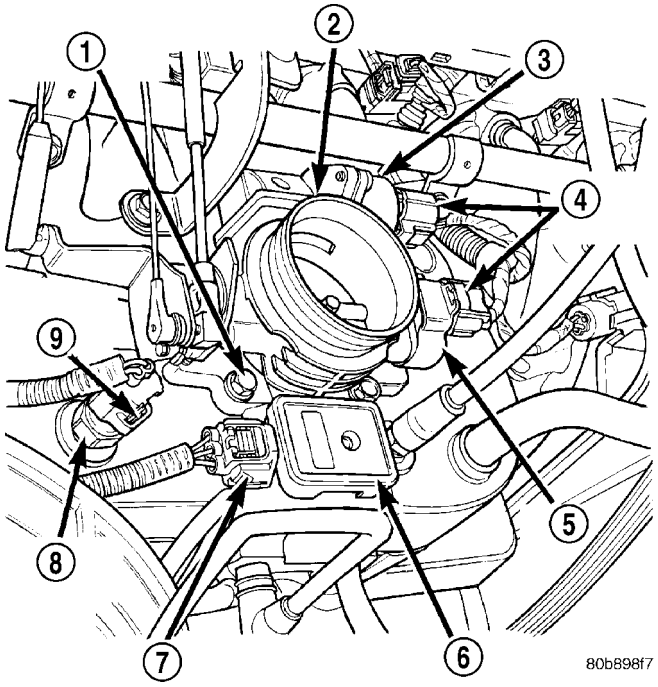

Fig. 25

INSTALLATION

2.4L

(1) Check condition of throttle body-to-intake manifold o-ring. Replace as necessary.

(2) Clean mating surfaces of throttle body and intake manifold.

(3) Install throttle body-to-intake manifold o-ring.

(4) Install throttle body to intake manifold.

(5) Install 3 mounting bolts. Tighten bolts to 12 N·m (105 in. lbs.) torque.

(6) Install control cables.

(7) Install electrical connectors.

(8) Install necessary vacuum lines.

(9) Install air cleaner duct at throttle body.

4.0L

A (factory adjusted) set screw is used to mechanically limit the position of the throttle body throttle plate. **Never attempt to adjust the engine idle speed using this screw.** All idle speed functions are controlled by the Powertrain Control Module (PCM).

(1) Clean mating surfaces of throttle body and intake manifold.

(2) Install new throttle body-to-intake manifold gasket.

(3) Install throttle body to intake manifold.

(4) Install four mounting bolts. Tighten bolts to 11 N·m (100 in. lbs.) torque.

(5) Install control cables.

(6) Install electrical connectors.

(7) Install air cleaner at throttle body.