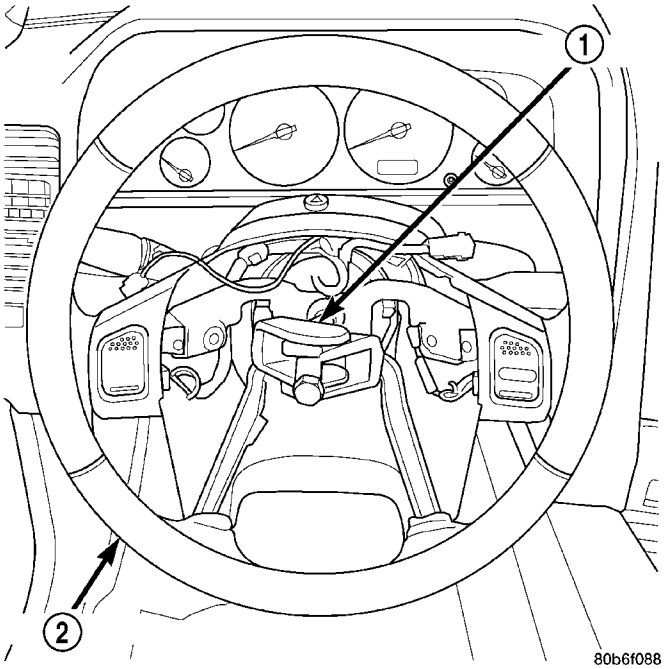

Fig. 1 STEERING WHEEL PULLER

1 - PULLER C-3894-A
2 - STEERING WHEEL

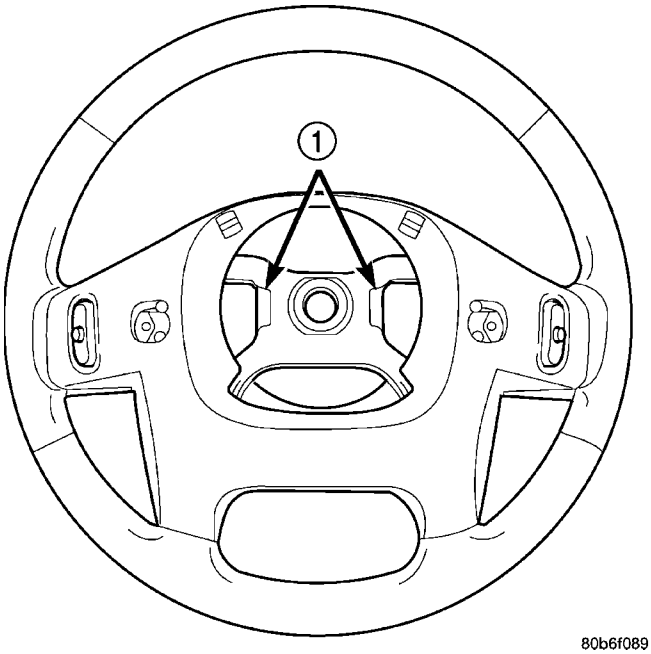

Fig. 2 Steering Wheel Pockets

1 - STEERING WHEEL POCKETS

(5) Turn ignition cylinder to the on position and remove cylinder by pressing release through lower shroud access hole (Fig. 3) (Refer to 19 - STEERING/ COLUMN/LOCK CYLINDER HOUSING - REMOVAL).

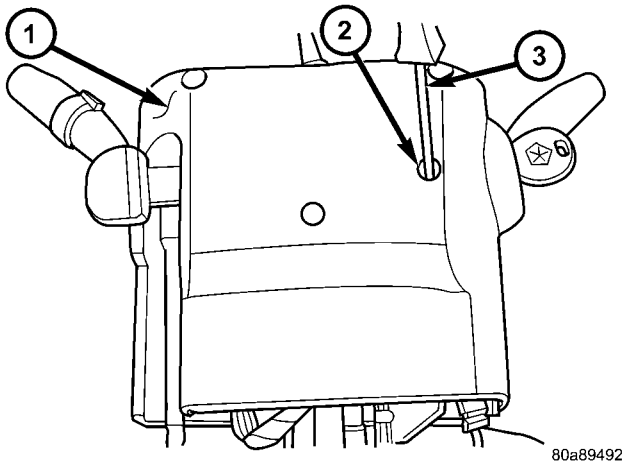

Fig. 3 LOCK CYLINDER RELEASE

1 - Lower Shroud
2 - Lock Cylinder Release Access Hole
3 - Pin Punch

(6) Remove knee blocker cover and knee blocker, (Refer to 23 - BODY/INSTRUMENT PANEL/KNEE BLOCKER - REMOVAL).

(7) Remove screws from the lower column shroud (Fig. 4) and remove the shroud.

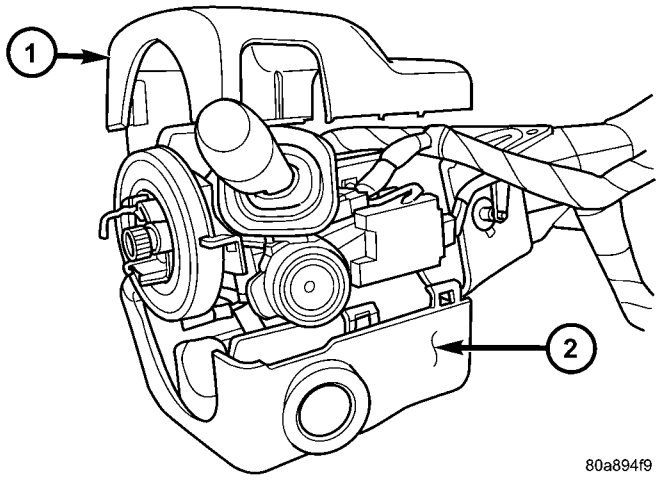

Fig. 4 SHROUD REMOVAL/INSTALL

1 - Upper Shroud
2 - Lower Shroud

(8) Remove the steering coupler bolt and column mounting nuts (Fig. 5) then lower column off the mounting studs.